



MOTO™ EX300

Getting Started Guide

more information

GOTO

accessories: www.motorola.com.hk
www.motorola.com/tw

congratulations!

Whether you're a talker, a texter, or just love listening to the music on the move, EX300 does it all.


We've crammed all the main features of your phone into this handy guide—you can even take it with you.

If you'd like to know more about your new EX300, visit www.motorola.com/support.

So, let's go.

Note: Your phone may not appear exactly as the images in this guide. However, all key locations, sequences, and functions are the same.

your phone

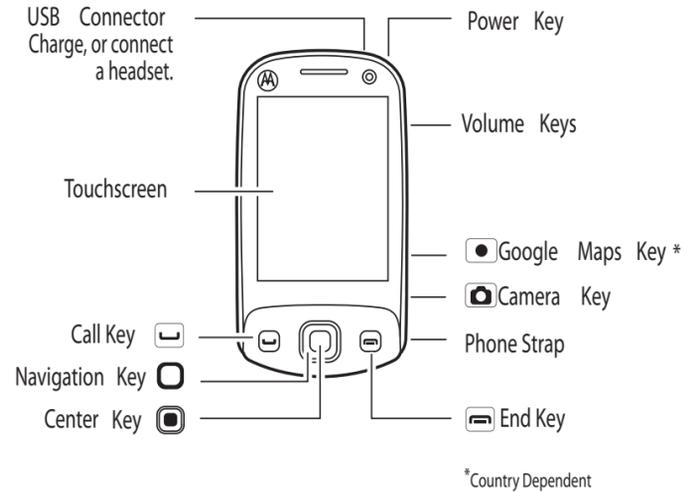

messages

send an SMS or MMS

- 1 Touch > > **Message** > **Create message**.
- 2 Enter your message.
- 3 **Tip:** Touch to switch capitalization modes, and touch **T9** to switch text entry modes.
- 4 Touch **OK** when you have entered your message. Touch the icons at the bottom of the screen to add pictures, videos, and more.
- 5 Touch > **Add from contacts** or **Enter number**.

read messages

When you receive a message you will see 1 **Unread Message** on the screen. Touch it to open the message.

calls

make calls

Touch , enter a number and press .

answer calls

When your phone rings or vibrates, press .

end a call

Press .

redial number

- 1 From the home screen, press to see a list of **All recent calls**.
- 2 Scroll to the entry you want and press .

emergency calls

To call an emergency number, enter the emergency number and press .

Your service provider programs emergency phone numbers, (such as 110 or 999), that you can call under any circumstances, even when your phone is locked.

Emergency numbers vary by country. Your phone's pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

tips & tricks

recent calls

To see your **Dialed**, **Received** and **Missed** calls, press from the home screen.

add widgets

To add widgets to your home screen, such as **Music Player**, **Google Search** and **Calendar**, touch and hold an empty spot until you see the **Widgets** menu.

auto keypad lock

To automatically lock your keypad, touch > > **Phone settings** > **Auto keypad lock**.

voicemail

From the home screen, touch , then touch and hold 1. If your voicemail number is preset, the connection will be made.

backlight time

To set how long your backlight stays on, touch > > **Display settings** > **Backlight time**.

music

To use the music player, insert a microSD memory card (optional). The music player supports MP3, MIDI, and AMR music formats.

play music

Touch > **Music**

controls

function	
play/pause	Touch .
previous/next	Touch .
volume	Press the side volume keys up or down .

Tip: To create a playlist, set the song as your ringtone, and more, touch **Options**.

Tip: To access music stored on your microSD memory card, touch > > **Memory card** tab.

menu map

- Contacts**
- Messaging**
 - Create message
 - Inbox
 - Drafts
 - Sent
 - Outbox
 - E-mail
 - Templates
 - Broadcast inbox
 - Settings
- Music**
- My files**
 - Phone
 - Memory card
- Tools**
 - Alarms
 - Calendar
 - My Reminders
 - Memo
 - World Time
 - Voice recorder
 - Calculator
 - Converter
 - Stopwatch
 - Timer
 - Synchronize
- Applications**
- Google Maps**
- STK**
- Camera**
- Calls**
 - All
 - Missed
 - Received
 - Dialed
- FM Radio**
- Settings**
 - Profiles
 - Phone settings
 - Display settings
 - Touch settings
 - Call settings
 - Connectivity
 - Network
 - Applications
 - Security
- Applications**
- Google Maps**
- STK**

This is a standard main menu layout. Your phone's menu may be a little different.

let's go

- 1 cover off
- 2 SIM in
- 3 microSD in
- 4 battery in
- 5 cover on
- 6 charge up

basics

turn it on & off

Press and hold (on top of the phone) for a few seconds to turn the phone on/off.

touch tips

- **touch:** to choose an icon or option, *touch* it.
- **touch & hold:** to open special options, *touch and hold* an icon or an item.
- **drag:** to scroll through a list or move slowly, *drag* across the touchscreen.
- **flick:** to scroll through a list or move quickly, *flick* across the touchscreen (drag quickly and release).

menu navigation

Press the **center key** from the home screen to select the highlighted option, or simply touch the option on the touchscreen.

Press the **navigation key** **up**, **down**, **right** or **left** to highlight a menu option, or simply flick **up**, **down**, **right** or **left** to highlight the option.

personalize

set your wallpaper

Change the wallpaper to one that makes you smile. Touch > > **Display settings** > **Wallpaper**

set time & date

Touch > > **Phone settings** > **Date and Time**

set ringtone & volume

Play it loud or keep it quiet, you choose. Touch > > **Profiles**

Choose a profile. Touch **Edit** to edit a profile.

set auto power

Choose when to receive calls and messages—really useful stuff. Touch > > **Phone settings** > **Auto power off**

location & navigation

find your location

Touch > > **Menu** > **My Location**. Your location is shown on the map as . The bigger the circle, the less accurate the location.

find any location

- 1 Touch > > **Menu** > **Search Map**.
- 2 Touch **Enter a new search**, enter text in the search field, like an address, company name, or city.
- 3 Touch **OK**.

get directions

- 1 Touch > > **Menu** > **Get Directions**.
- 2 Enter a **Start Point** and **End Point**.
- 3 Select your mode of transport (**Driving**, **Transit** or **Walking**), then touch **Show directions** or (**Show trips**).
- 4 When you have finished, touch **Menu** > **Clear Map**.

contacts

save contacts

- 1 From the home screen, touch > **enter number** > **Options** > **Save number**.
- 2 Select to save the contact to **Phone** or **SIM**, then enter the contact details and touch **Save**.

call contacts

- 1 Touch > .
- 2 Press **up** or **down**, to scroll through the list to highlight the contact's number.
- 3 Press .

Tip: Press **right** or **left** to switch between **Contacts** and **Groups**.

bluetooth™

connect new devices

- 1 Make sure the device you are pairing with is in **discoverable** mode.
- 2 Touch > > **Connectivity** > **Bluetooth** > **Search devices**.
- 3 Your phone lists the devices it finds within range. Touch a device name to connect with it.
- 4 If necessary, touch **Yes**, **OK** or enter the device passkey (such as 0000) to connect to the device.

To **automatically reconnect** your phone with a paired device, simply turn the device on. To **automatically disconnect** your phone from a paired device, simply turn the device off. To **send** a media file or contact, open the item that you want to transfer, then touch **Options** > **Send** > **Via Bluetooth**.

photos & videos

- 1 To access the camera, touch > > **Camera**. To access the video camera, touch > > **Video camera**.
- 2 Press to take your photo or to start/stop recording the video, then to:

Set the photo as your **Wallpaper** or **Contact image**, touch .

Send the photo or video by **Message**, **E-mail** or **Bluetooth**, touch .

To **play** the video, touch .

To **delete** the photo or video, touch .

To **return to the viewfinder**, touch .

To **transfer** photos or videos to/from your memory card, use a microSD memory card reader on your computer.

email & internet

email

To **set up** your email, touch > > **E-mail** and follow the on-screen instructions. To **view** your email inbox, touch > > **E-mail** > **email account**.

surf the web

Note: It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.

- 1 From the home screen, touch then enter the website address.
- 2 Touch .

To save a website as a **bookmark**, touch > **My Bookmarks**. To **zoom** in/out, touch . To **close** a window or **switch** open windows, touch > **Window** > **Close window** or **Switch window**.

PC connection

To **use your phone as a modem**, connect your phone to your PC via the USB cable, then:

- 1 Ensure that the USB device is displayed in **Device Manager** on your PC.
- 2 To set up the internet connection, use the **Windows™** internet wizard on your PC, or install and run the internet wizard application on your phone.

Note: Only **Windows 2000™**, **Windows XP™**, **Windows 7™** and **Windows Vista™** are supported.

To **read the files saved on your phone's microSD card**:

- 1 Insert the microSD card in to your phone, then connect your phone to your PC via the USB cable.
- 2 Select **File Transfer** on your PC and follow the instructions. The phone is in offline mode when switching to **File Transfer** mode.

Tip: To download **PC suite**, go to: <http://www.motorola.com/mypcsuite>.

Battery Use & Safety

Important: Handle and store batteries properly to avoid injury or damage. Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

DON'Ts

- **Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.**
- **Don't let the mobile device or battery come in contact with water.*** Water can get into the mobile device's circuits, leading to corrosion. If the mobile device and/or battery get wet, have them checked by your service provider or contact Motorola, even if they appear to be working properly.*
- **Don't allow the battery to touch metal objects.** If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your mobile device or battery near a heat source.*** Excessive heat can damage the mobile device or the battery. High temperatures can cause the battery to swell, leak, or malfunction. Therefore:
- **Don't dry a wet or damp battery with an appliance or heat source,** such as a hair dryer or microwave oven.

DOs

- **Do avoid leaving your mobile device in your car in high temperatures.***
- **Do avoid dropping the battery or mobile device.*** Dropping these items, especially on a hard surface, can potentially cause damage.*
- **Do contact your service provider or Motorola if your mobile device or battery has been damaged from dropping or high temperatures.**

* **Note:** Always make sure that the battery compartment is closed and secure to avoid direct exposure of the battery to any of these conditions.

Important: Use Motorola Original products for quality assurance and safeguards. To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection), Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a "Motorola Original" hologram. **Motorola recommends you always use Motorola-branded batteries and chargers.** Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as **Invalid Battery or Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a "Motorola Original" hologram;
- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and try charging it again;
- If the message remains, contact a Motorola authorized service center.

Important: Motorola's warranty does not cover damage to the mobile device caused by non-Motorola batteries and/or chargers.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.

Proper and safe battery disposal and recycling: Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web:

- www.motorola.com/recycling
- www.rbrc.org/call2recycle/ (in English only)

Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries.

Warning: Never dispose of batteries in a fire because they may explode.

Battery Charging

Notes for charging your product's battery:

- When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.
- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.

Driving Precautions

Responsible and safe driving is your primary responsibility when behind the wheel of a vehicle. Using a mobile device or accessory for a call or other application while driving may cause distraction. Using a mobile device or accessory may be prohibited or restricted in certain areas, always obey the laws and regulations on the use of these products.

While driving, NEVER:

- Type or read texts.
- Enter or review written data.
- Surf the web.
- Input navigation information.
- Perform any other functions that divert your attention from driving.

While driving, ALWAYS:

- Keep your eyes on the road.
 - Use a handsfree device if available or required by law in your area.
 - Enter destination information into a navigation device **before** driving.
 - Use voice activated features (such as voice dial) and speaking features (such as audible directions), if available.
 - Obey all local laws and regulations for the use of mobile devices and accessories in the vehicle.
 - End your call or other task if you cannot concentrate on driving.
- Remember to follow the "Smart Practices While Driving" in this guide and at www.motorola.com/callsmart (in English only).

Specific Absorption Rate (ICNIRP)

Your model wireless phone meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed to not exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health, and to account for any variations in measurements.

The guidelines use a unit of measurement known as the Specific Absorption Rate (SAR). The ICNIRP SAR limit for mobile devices used by the general public is 2 watts per kilogram (W/kg), and the highest SAR value for this mobile device when tested at the ear is 0.649 W/kg. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this guide. In this case, the highest tested SAR value is 0.759 W/kg. The tests are carried out in accordance with international guidelines for testing. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

As SAR is measured utilizing the mobile device's highest transmitting power, the actual SAR of this mobile device while operating is typically below that indicated above. This is due to automatic changes to the power level of the mobile device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure, then you can do so by limiting the length of calls or using a handsfree device to keep the mobile device away from the head and body.

Additional Information can be found on the Web sites of the World Health Organization (<http://www.who.int/emf/>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

European Union Directives Conformance Statement

Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives



Product Approval Number

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TE Directive) at www.motorola.com/rtte. To find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the Web site.

Software Copyright Notice

Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Content Copyright

The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

Safety & General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances, your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

Driving Precautions

Using a mobile device while driving may cause distraction. End a call if you can't concentrate on driving. Input information about your destination and route prior to your drive. Do not input data or engage in text messaging while driving. Keep your eyes on the road while driving. Listen to the audible turn-by-turn directions, if available.

Also, using a mobile device or accessory may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Responsible driving practices can be found at www.motorola.com/callsmart (in English only).

Operational Warnings

Obey all posted signs when using mobile devices in public areas.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Batteries & Chargers

Caution: Improper treatment or use of batteries may present a danger of fire, explosion, leakage, or other hazard. For more information, see "Battery Use & Safety."

Keep Your Mobile Device & Its Accessories Away From Small Children

These products are not toys and may be hazardous to small children. For example:

- A choking hazard may exist for small, detachable parts.
- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device. Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired.

Caution About High Volume Usage

Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected. To protect your hearing:

- Limit the amount of time you use headsets or headphones at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.
- If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our Web site at direct.motorola.com/hellomoto/nss/AcousticSafety.asp (in English only).

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

[Nov0109]

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed

to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use & Care

To care for your Motorola phone, please keep it away from:

liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.

extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.

microwaves

Don't try to dry your phone in a microwave oven.

dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.

cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.

shock and vibration

Don't drop your phone.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int/peh-emf>

Caring for the Environment by Recycling

This symbol on a Motorola product means the product should not be disposed of with household waste.

Disposal of your Mobile Device & Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste. Do not dispose of your battery or mobile device in a fire. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at: www.motorola.com/recycling

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed

Privacy & Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device's security, install it as soon as possible.
- **Secure personal information**—Your mobile device can store personal information in various locations including your SIM card, memory card, and phone memory. Be sure to remove or clear all personal information before you recycle, return, or give away your device. You can also backup your personal data to transfer to a new device.

Note: For information on how to backup or wipe data from your mobile device, go to www.motorola.com/support

- **Online accounts**—Some mobile devices provide a Motorola online account (such as MOTOBLUR). Go to your account for information on how to manage the account, and how to use security features such as remote wipe and device location (where available).

- **Location-based information**—Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile phones which are connected to a wireless network transmit location-based information. Devices enabled with GPS or AGPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services.

- **Other information your device may transmit**—Your device may also transmit testing and other diagnostic (including location-based) information, and other non-personal information to Motorola or other third-party servers. This information is used to help improve products and services offered by Motorola.

If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

Smart Practices While Driving

Drive Safe, Call Smart

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas—for example, handsfree use only. Go to www.motorola.com/callsmart (in English only) for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a "to do" list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.

copyright

Motorola, Inc.
852-25063888 (HK)
www.motorola.com (HK)

Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact your service provider for details.

All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. MOTOBLUR and the MOTOBLUR logo are trademarks of Motorola, Inc. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. **WiFi** is a Certification Mark of the Wireless Fidelity Alliance, Inc. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Google, YouTube, Picasa, Gmail, and the Google logo are trademarks of Google, Inc. Facebook is a trademark of Facebook, Inc. Microsoft, Windows, Windows Me, and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries. Apple, Macintosh, Quicktime and Quicktime logo are registered trademarks of Apple Computer, Inc. iTunes is a trademark of Apple Computer, Inc., registered in the U.S. and other countries. All rights reserved. America Online, AOL, the America Online & Design logo, the AOL & Design logo, and the Triangle Logo, are registered trademarks of America Online, Inc. in the United States and/or other countries. Instant Messenger and Buddy List are trademarks of America Online, Inc. UIQ Technology and all UIQ Technology-based marks and logos are trademarks of UIQ Technology AB. All other product or service names are the property of their respective owners.

© 2010 Motorola, Inc. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Product ID: Motorola EX300

Manual Number: 31010CVD