



The Rockbox Manual for Ipod Video

rockbox.org
August 18, 2007

Rockbox

<http://www.rockbox.org/>
Open Source Jukebox Firmware

Rockbox and this manual is the collaborative effort of the Rockbox team and its contributors. See the appendix for a complete list of contributors.

© 2003, 2004, 2005, 2006, 2007 The Rockbox Team and its contributors,
© 2004 Christi Alice Scarborough, © 2003 José Maria Garcia-Valdecasas Bernal & Peter Schlenker.

Version r14381-070818. Built using pdfL^AT_EX.

Permission is granted to copy, distribute and/or modify this document under the terms of the GNU Free Documentation License, Version 1.2 or any later version published by the Free Software Foundation; with no Invariant Sections, no Front-Cover Texts, and no Back-Cover Texts. A copy of the license is included in the section entitled "GNU Free Documentation License".

Contents

1	Getting started	8
1.1	Welcome	8
1.2	Getting more help	8
1.3	Naming conventions and marks	9
2	Installation	10
2.1	Prerequisites	10
2.2	Installing Rockbox	11
2.2.1	Introduction	11
2.2.2	Choosing a Rockbox version	11
2.2.3	Installing the firmware	12
2.2.4	Installing the boot loader	12
2.3	Enabling Speech Support (optional)	14
2.4	Running Rockbox	15
2.5	Updating Rockbox	15
2.6	Uninstalling Rockbox	15
3	Quick Start	16
3.1	Basic overview	16
3.1.1	The player's controls	16
3.1.2	Turning the player on and off	17
3.1.3	Starting the original firmware	17
3.1.4	The first contact	17
3.1.5	Basic controls	18
3.1.6	Basic concepts	18
3.2	Customising Rockbox	18
3.3	Menu overview	19
4	Browsing and playing	20
4.1	File Browser	20
4.1.1	File Browser Controls	21
4.1.2	File Menu	21
4.1.3	Virtual Keyboard	23
4.2	Database	24
4.2.1	Introduction	24
4.2.2	Initializing the database	24
4.2.3	The Database Menu	24

4.2.4	Using the database	25
4.3	While Playing Screen	26
4.3.1	WPS Key Controls	27
4.3.2	Peak Meter	27
4.3.3	The WPS Context Menu	27
4.4	Working with Playlists	30
4.4.1	Playlist terminology	30
4.4.2	Creating playlists	31
4.4.3	Adding music to playlists	32
4.4.4	Modifying playlists	33
4.4.5	Saving playlists	33
4.4.6	Loading saved playlists	34
4.4.7	Helpful Hints	34
5	The Main Menu	35
5.1	Introducing the Main Menu	35
5.2	Navigating the Main Menu	36
5.3	Recent Bookmarks	36
5.4	Files	36
5.5	Database	37
5.6	Now Playing/Resume Playback	37
5.7	Settings	37
5.7.1	Sound Settings	37
5.7.2	General Settings	37
5.7.3	Manage Settings	37
5.7.4	Browse Themes	37
5.7.5	Recording Settings	38
5.8	Playlist	38
5.9	Plugins	38
5.10	System	38
5.11	Quick Menu	39
6	Sound Settings	40
6.1	Volume	40
6.2	Bass	40
6.3	Treble	41
6.4	Balance	41
6.5	Channels	41
6.6	Stereo Width	41
6.7	Crossfeed	42
6.8	Equalizer	43
6.9	Hardware EQ	45
6.10	Dithering	46

7	General Settings	47
7.1	Playback	47
7.2	Playlist	51
7.3	File View	51
7.4	Database	52
7.5	Display	52
7.6	System	55
7.6.1	Start Screen	55
7.6.2	Battery	55
7.6.3	Disk	55
7.6.4	Time and Date	56
7.6.5	Idle Poweroff	56
7.6.6	Wake Up alarm	56
7.6.7	Limits	56
7.6.8	Car Adapter Mode	57
7.7	Bookmarking	57
7.8	Language	58
7.9	Voice	58
8	Plugins	60
8.1	Games	60
8.1.1	Blackjack	60
8.1.2	BrickMania	61
8.1.3	Bubbles	62
8.1.4	Chessbox	63
8.1.5	Doom	64
8.1.6	Flipit	67
8.1.7	Jewels	68
8.1.8	Minesweeper	69
8.1.9	Pacbox	70
8.1.10	Pong	71
8.1.11	Rockblox	72
8.1.12	Sliding Puzzle	73
8.1.13	Snake	74
8.1.14	Snake 2	75
8.1.15	Sokoban	76
8.1.16	Solitaire	77
8.1.17	Spacerocks	79
8.1.18	Star	80
8.1.19	Sudoku	81
8.1.20	Wormlet	82
8.1.21	Xobox	85
8.2	Demos	86
8.2.1	Bounce	86

8.2.2	Credits	86
8.2.3	Cube	87
8.2.4	Demystify	88
8.2.5	Fire	89
8.2.6	Logo	89
8.2.7	Mandelbrot	90
8.2.8	Mosaique	91
8.2.9	Oscilloscope	91
8.2.10	Plasma	92
8.2.11	Snow	93
8.2.12	Starfield	93
8.2.13	VU meter	94
8.3	Viewers	95
8.3.1	Chip-8 Emulator	95
8.3.2	JPEG viewer	96
8.3.3	MPEG Player	96
8.3.4	Rockboy	98
8.3.5	Search	99
8.3.6	Sort	99
8.3.7	Text Viewer	99
8.3.8	VBRfix	100
8.4	Applications	101
8.4.1	Battery Benchmark	101
8.4.2	Calculator	103
8.4.3	Chess Clock	104
8.4.4	Clock	105
8.4.5	Dice	107
8.4.6	Disk Tidy	108
8.4.7	Metronome	108
8.4.8	Stats	109
8.4.9	Stopwatch	109
8.4.10	Text Editor	110
9	Advanced Topics	111
9.1	Customising the userinterface	111
9.1.1	Getting Extras	111
9.1.2	Loading Fonts	111
9.1.3	Loading Languages	111
9.1.4	Changing Colours	111
9.1.5	Loading Backdrops	112
9.2	Configuring the WPS	112
9.2.1	WPS – General Info	112
9.2.2	WPS – Build Your Own	112
9.3	Managing Rockbox settings	115

9.3.1	Introduction to .cfg files.	115
9.3.2	Specifications for .cfg files.	116
9.3.3	The MANAGE SETTINGS menu	116
9.4	Firmware Loading	117
9.4.1	Using ROLO (Rockbox loader)	117
A	File formats	118
A.1	Supported file formats	118
B	WPS Tags	119
B.1	Status Bar	119
B.2	ID3 Info	119
B.3	Power Related Information	120
B.4	File Info	120
B.5	Playlist/Song Info	121
B.6	Runtime Database	121
B.7	Sound (DSP) settings	121
B.8	Virtual LED	122
B.9	Repeat Mode	122
B.10	Playback Mode Tags	122
B.11	Images	123
B.12	Alignment	124
B.13	Conditional Tags	124
B.14	Real Time Clock	125
B.15	Other Tags	125
C	Config file options	126
D	User feedback	129
D.1	Bug reports	129
D.1.1	Rules for submitting new bug reports	129
D.2	Feature requests	129
D.2.1	Rules for submitting a new feature request	129
D.2.2	Features we will not implement	130
E	Changelog	131
E.1	What's new since v2.5?	131
F	Credits	132
G	Licenses	134
G.1	GNU Free Documentation License	134
G.2	The GNU General Public License	142

1 Getting started

1.1 Welcome

This is the manual for Rockbox. Rockbox is an open source firmware replacement for a growing number of MP3 players. Rockbox aims to be considerably more functional and efficient than your device's stock firmware while remaining easy to use and customisable. Rockbox is written by users, for users. Not only is it free to use, it's also released under the GNU public license, which means that it will always remain free both to use and to change.

Rockbox has been in development since 2001, and receives new features, tweaks and fixes each day to provide you with the best possible experience on your MP3 player. A major goal of Rockbox is to be simple and easy to use, yet remain very customisable and configurable. We believe that you should never need to go through a series of menus for an action you perform frequently. We also believe that you should be able to configure almost anything about Rockbox you could want, pertaining to functionality. Another top priority of Rockbox is audio playback quality – Rockbox, for most models, includes a wider range of sound settings than that device's original firmware. A lot of work has been put into making Rockbox sound the best it can, and improvements are constantly being made. All models have access to a large number of plugins, including many games, applications, and graphical “demos”. You can load different configurations quickly for different purposes (e.g. a large font for in your car, different sound settings for at home). Rockbox features a very wide range of languages, and all supported models also have the ability to talk to you – menus can be voiced and filenames spelled out or spoken.

1.2 Getting more help

This manual is intended to be a comprehensive introduction to the Rockbox firmware. There is, however, more help available. The Rockbox website at <http://www.rockbox.org/> contains very extensive documentation and guides written by members of the Rockbox community and this should be your first port of call when looking for further help.

If you can't find the information you're searching for on the Rockbox website there are a number of support channels you should have a look at. You can try the Rockbox forums located at <http://forums.rockbox.org/>. Another option are the mailing lists which can be found at <http://www.rockbox.org/mail/>. From that page you can subscribe to the lists and browse the archives. For searching the list archives simply use the search field that is located on the left side of the web site. Also you can ask on IRC. The

main channel for Rockbox is #rockbox on <irc://irc.freenode.net>. A bunch of helpful developers and users are usually around. Just join and ask – if someone knows the answer you’ll usually get an answer pretty quickly. More information including IRC logs can be found at <http://www.rockbox.org/irc/>. We also have a web client for joining the rockbox IRC channel so there is no need for you to install additional software to your computer.

If you think you found a bug please make sure it actually is a bug and is still present in the most recent version of rockbox. You should try to confirm that by using the above mentioned support channels first. After that you can submit that issue to our tracker. Refer to section D (page 129) for details on how to use the tracker.

1.3 Naming conventions and marks

We have some conventions especially on naming that are intended to be consistent throughout this manual.

Manufacturer and product names are formatted in accordance with the standard rules of English grammar, e.g. “Ipod playback is currently unsupported”. Manufacturer and model names are proper nouns, and thus are written beginning with a capital letter.

This manual has some parts that are marked with icons on the margin to help you finding important parts or parts you could skip. The following icons are used:

Note: This indicates a note. A note starts always with the text “Note”. For easier finding of notes we have put this an icon in the margin like here. Notes are used to mark information that could help you or indicate a possible “weirdness” in rockbox that would be explained.



Warning: This is a warning. In contrast to notes mentioned above, a warning should be taken more seriously. While ignoring notes won’t cause any serious damage ignoring warnings *could* cause serious damage. If you’re new to rockbox you should really read the warnings before doing anything that is warned about.



This icon marks a section that are intended especially for the blind and visually impaired. As they can’t read the manual in the same way sighted people can do we’ve added some additional descriptions. If you aren’t blind or visually impaired you most likely can completely skip these blocks. To make this easier, there is an icon shown in the margin on the right.



2 Installation

2.1 Prerequisites


Before installing Rockbox you should make sure you meet the prerequisites. Also you may need some tools for installation. In most cases these will be already available on your computer but if not you need to get some additional software.

ZIP utility. Rockbox is distributed as an archive using the `.zip` format. Thus you need a tool to handle that compressed format. Usually your computer should have a tool installed that can handle the `.zip` file format. Windows XP has built-in support for `.zip` files and presents them to you as folders unless you have installed a third party program that handles compressed files. For other operating systems this may vary. If the `.zip` file format is not recognised on your computer you can find a program to handle them at <http://www.info-zip.org/> or <http://sevenzip.sf.net/> which can be downloaded and used free of charge.

USB connection. To transfer Rockbox to your player you need to connect it to your computer. To proceed you need to know where to access the player. On Windows this means you need to figure out the drive letter associated with the device. On Linux you need to know the mount point of your player.

Your player should enter disk mode automatically when connected to a computer via USB. If your computer does not recognise your player, you may need to enter the disk mode manually. Disconnect your player from the computer. Reset the player by pressing and holding the **Menu** and **Select** buttons simultaneously. As soon as the player resets, press and hold the **Select** and **Play** buttons simultaneously. Your player should enter disk mode, and you can try reconnecting to the computer.

Text editor. As you will see in the following chapters, Rockbox is highly configurable. In addition to saving configurations within Rockbox, Rockbox also allows you to create customised configuration files. If you would like to edit custom configuration files on your computer, you will need a text editor like Windows' "Wordpad".

Note: In addition to the requirements described above, Rockbox only works on Ipods formatted with the FAT32 filesystem (i.e., Ipods initialized by iTunes for Windows). It does not work with the HFS+ filesystem (i.e. Ipods initialized by iTunes for the Mac). More information and instructions for converting an Ipod to FAT32 can be found on the <http://www.rockbox.org/wiki/bin/view/Main/IpodConversionToFAT32> wiki page on the Rockbox web site. Note that after conversion, you can still use a FAT32 Ipod on a Mac. 

2.2 Installing Rockbox

2.2.1 Introduction

There are three separate components of Rockbox, two of which need to be installed in order to run Rockbox.

The Ipod boot loader. The Ipod boot loader is the program that tells your player how to boot and load the remaining firmware from disk. It is also responsible for the disk mode on your player.

This boot loader is stored in special flash memory in your Ipod. It is already installed on your player, so it is never necessary to modify this in order to install Rockbox.

The Rockbox boot loader. The Rockbox boot loader is loaded from disk by the Ipod boot loader. It is responsible for loading the Rockbox firmware and for providing the dual boot function. It directly replaces the Ipod firmware on the player's disk.

The Rockbox firmware. Similar to the Ipod firmware, most of the Rockbox code is contained in a "build" that resides on your player's drive. This makes it easy to update Rockbox. The build consists of a directory called `.rockbox` containing all of Rockbox' files, which is located in the root of your player's drive.

2.2.2 Choosing a Rockbox version

There are three different types of firmware binaries from Rockbox website: Release version, current build and daily build. You need to decide which one you want to install and get the version for your player.

Release. There has not yet been a stable release for the Ipod Video. Until there is a stable release for Ipod Video, use a current build.

Current Build. The current build is built at each source code change to the Rockbox SVN repository, and represent the current state of Rockbox development. This means that the build could contain bugs, but is most of the time safe to use. You can download the current build from <http://build.rockbox.org/>.

Archived Build. In addition to the release version and the current build, there is also an archive of daily builds available for download. These are built once a day from the latest source code in the SVN repository. You can download archived builds from <http://www.rockbox.org/daily.shtml>.

Note: Rockbox has a fonts package that is available at <http://www.rockbox.org/daily.shtml> or from the *extras* link in the menu on the Rockbox website. While the current builds and daily builds change frequently, the fonts package rarely changes. Thus, the fonts package is not included in these builds. (The release version, on the other hand,



does not change, so fonts are included when you download a release.) When installing Rockbox for the first time, you should install the fonts package.

Because current builds and daily builds are development versions which change frequently, they may behave differently than described in this manual, or they may introduce new (and maybe annoying) bugs. If you do not want to get undefined behaviour from your player you should really stick to the current stable release, if there is one for your player. If you want to help the project development, you can try development builds and help by reporting bugs. Just be aware that these are development builds that are highly functional, but not perfect!

2.2.3 Installing the firmware

Warning: If your player has 32MB RAM (typically if it has a 30GB harddisk), do not download the Ipod Video 64MB build as it will not work.



1. Download your chosen version of Rockbox from the links in the previous section.
2. Connect your player to the computer via USB as described in the manual that came with your player.
3. Take the file that you downloaded above, and use the “Extract all” command of your unzip program to extract the files in the .zip file onto your player.

Note that the entire contents of the .zip file should be extracted directly to the root of your player’s drive. Do not try to create a separate directory or folder on your player for the Rockbox files! The .zip file already contains the internal directory structure that Rockbox needs.

Note: If the contents of the .zip file are extracted correctly, you will have a folder called / .rockbox, which contains all the files needed by Rockbox, in the main folder of your player’s drive. If you receive a “-1” error when you start Rockbox, you have not extracted the contents of the .zip file to the proper location.



2.2.4 Installing the boot loader



In order to make your player load and execute the Rockbox firmware you have just installed, you will need to install the Rockbox bootloader. Unless bugs are found in the bootloader code, or significant new feature are added, you will only have to perform this step once.


Bootloader installation from Windows

1. Make sure you are logged into your computer as Administrator, or a user with Administrator privileges and connect your player.
2. Download ipodpatcher.exe from <http://download.rockbox.org/bootloader/ipod/ipodpatcher/win32/ipodpatcher.exe> and run it.

3. If all has gone well, you should see some information displayed about your ipod and a message asking you if you wish to install the Rockbox bootloader. Press `i` followed by `ENTER`, and ipodpatcher will now install the bootloader. After a short time you should see the message “[INFO] Bootloader installed successfully.” Press `ENTER` again to exit ipodpatcher.
4. Make sure that you have correctly extracted a build of Rockbox so that you have a `/ .rockbox`, which contains all the files needed by Rockbox in the root of your player’s drive and that you have also installed the fonts package – see section 2.2.2 (page 11) for more information.
5. Disconnect your player in the usual way. The bootloader is now installed.

Bootloader installation from Mac OS X

1. Attach your player to your Mac and wait for its icon to appear in Finder. If you have configured itunes to open automatically when your player is attached (the default behaviour), then wait for it to open and then quit it. You also need to ensure the “Enable use as disk” option is enabled for your player in itunes.
 2. Open up Disk Utility (in Applications → Utilities) and click on the name of your player (e.g. DAVES IPOD) in the list on the left pane. Then click on the “unmount” icon at the top.
- Warning:** Do *not* click on the “eject” icon. 
3. Download and open ipodpatcher.dmg from <http://download.rockbox.org/bootloader/ipod/ipodpatcher/macosx/ipodpatcher.dmg> and then double-click on the ipodpatcher icon inside.
 4. If all has gone well, you should see some information displayed about your player and a message asking you if you wish to install the Rockbox bootloader. Press `i` followed by `ENTER`, and ipodpatcher will now install the bootloader. After a short time you should see the message “[INFO] Bootloader installed successfully.” Press `ENTER` again to exit ipodpatcher and then quit the Terminal application.
 5. **Warning:** If you received a “Resource busy” error from ipodpatcher, then this means you didn’t complete step 2. Go back to Disk Utility, unmount your player and then run ipodpatcher again. 
 6. Your player will now automatically reconnect itself to your Mac. Wait for it to connect, and then eject and unplug it in the normal way.

Note: You should unplug your ipod immediately after ejecting it to prevent Rockbox immediately rebooting your player into disk mode when it detects that your player is attached to a computer. 

7. Make sure that you have correctly extracted a build of Rockbox so that you have a `/ .rockbox`, which contains all the files needed by Rockbox in the root of your player's drive and that you have also installed the fonts package – see section 2.2.2 (page 11) for more information.

Bootloader installation from Linux

1. Download ipodpatcher from <http://download.rockbox.org/bootloader/ipod/ipodpatcher/linux32x86/ipodpatcher> (32-bit x86 binary) or <http://download.rockbox.org/bootloader/ipod/ipodpatcher/linux64amd64/ipodpatcher> (64-bit amd64 binary). You can save this anywhere you wish, but the next steps will assume you've saved it in your home directory.
2. Attach your player to your computer.
3. Open up a terminal window and type the following commands:

```
CODE
cd $HOME
chmod +x ipodpatcher
./ipodpatcher
```

Warning: You may need to be the root user in order for ipodpatcher to have sufficient permission to perform raw disk access to your player.



4. If all has gone well, you should see some information displayed about your ipod and a message asking you if you wish to install the Rockbox bootloader. Press `i` followed by ENTER, and ipodpatcher will now install the bootloader. After a short time you should see the message “[INFO] Bootloader installed successfully.” Press ENTER again to exit ipodpatcher.
5. Make sure that you have correctly extracted a build of Rockbox so that you have a `/ .rockbox`, which contains all the files needed by Rockbox in the root of your player's drive and that you have also installed the fonts package – see section 2.2.2 (page 11) for more information.
6. Disconnect your player in the usual way. The bootloader is now installed.

2.3 Enabling Speech Support (optional)

If you wish to use speech support you will also need a voice file, available from <http://www.rockbox.org/twiki/bin/view/Main/VoiceFiles>. For the English language, the file is called `english.voice`. When it has been downloaded, unpack this file and copy it into the `lang` folder which is inside the `/ .rockbox` folder on your player. Voice menus are turned on by default. See section 7.9 (page 58) for details on voice settings.

2.4 Running Rockbox

Remove your player from the computer's USB port. Rebooting the iPod by holding **Menu+Select** for a couple of seconds until the player reboots. Now Rockbox should load. When you see the Rockbox splash screen, Rockbox is loaded and ready for use.

Note: Rockbox starts in the FILE BROWSER. If you have loaded music onto your player using iTunes, you will not be able to see your music because iTunes changes your files' names and hides them in directories in the `iPod_Control` folder. You can view files placed on your player by iTunes by initializing and using Rockbox's database. See section 4.2 (page 24) for more information.



2.5 Updating Rockbox

Updating Rockbox is easy. Download a Rockbox build. (The latest release of the Rockbox software will always be available from <http://www.rockbox.org/download/>). Unzip the build to the root directory of your player like you did in the installation step before. If your unzip program asks you whether to overwrite files, choose the "Yes to all" option. The new build will be installed over your current build.

2.6 Uninstalling Rockbox

Note: The Rockbox bootloader can start the original firmware on your player. (See section 3.1.3 (page 17) for more information.)



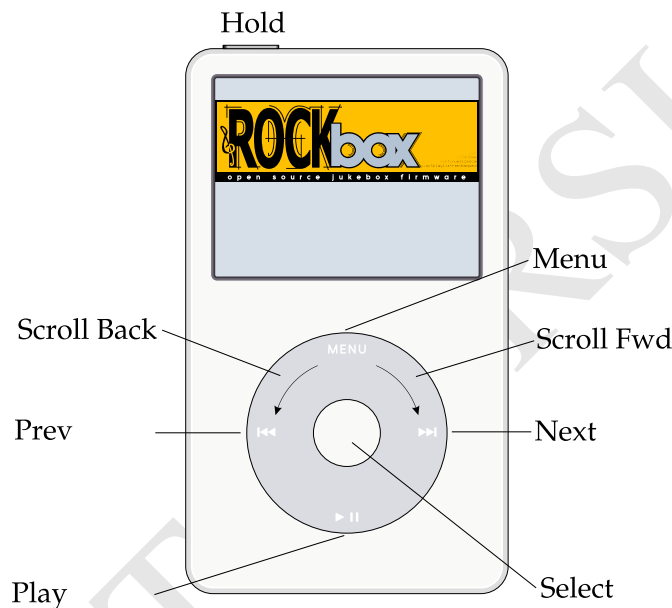
If you would like to go back to using the original iPod software, connect the player to your computer, and follow the instructions to install the bootloader, but when prompted by ipodpatcher, enter 'u' for uninstall, instead of 'i' for install.

If you wish to clean up your disk, you may also wish to delete the `.rockbox` folder and its contents. Turn the iPod off. Turn the player back on and the original iPod software will load.

3 Quick Start

3.1 Basic overview

3.1.1 The player's controls



Throughout this manual, the buttons on the player are labelled according to the picture above. When a table of button actions says “Long” before the button it means that you should make a long press on that button, in other words, press it for approximately 1 second. In detail the buttons are described in the following paragraph.

Additional information is available for blind users on the Rockbox website at <http://www.rockbox.org/twiki/bin/view/Main/BlindFAQ>. ▶

The main controls on the player are a slightly indented scroll wheel with a flat round button in the center. Hold the player with these controls facing you.

The top of the player will have the following, from left to right: **Hold** switch, headphone jack.

The dock connector that is used to connect your player to your computer is on the bottom panel of the player.

The button in the middle of the wheel is called **Select**. You can operate the wheel by pressing the top, bottom, left or right sections, or by sliding your finger around it. The top is **Menu**, the bottom is **Play**, the left is **Prev**, and the right is **Next**. When the manual

says to **Scroll Fwd**, it means to slide your finger clockwise around the wheel. **Scroll Back** means to slide your finger counterclockwise. Note that the wheel is sensitive, so you will need to move slowly at first and get a feel for how it works.

Note that when the **Hold** switch is pushed toward the center of the player, hold is on, and none of the other controls do anything. Be sure **Hold** is off before trying to use your player.

3.1.2 Turning the player on and off

To turn on and off your Rockbox enabled player use the following keys:

Key	Action
Menu / Select	Start Rockbox
Hold Play	Shutdown Rockbox

On shutdown, Rockbox automatically saves its settings.

3.1.3 Starting the original firmware

Rockbox has a dual-boot feature. To boot into the original firmware, shut down the device as described above. Turn on the **Hold** switch immediately after turning the player on. Once Rockbox displays the message “Loading original firmware ...” you may turn the **Hold** switch off. Rockbox will boot into the original firmware.

Note: The described method of dual-booting works with Rockbox bootloader version 2, which was released 16 December 2006. If you have the older bootloader, boot the original firmware by pressing **Menu** immediately after turning on your iPod. Do not release the **Menu** button until you see the “Loading original firmware...” message on the screen.



Regardless of which method you use to boot to the original firmware, you can return to Rockbox by pressing and holding **Menu** and **Select** simultaneously until the player reboots.

3.1.4 The first contact

After you have first started the player you'll be presented by the MAIN MENU. From this menu you can reach every function of Rockbox, for more information (see section 5.1 (page 35)). To browse the files on you player select FILES (see section 4.1 (page 20)), and to browse in a view that is based on the meta-data¹ of your audio files, select DATABASE (see section 4.2 (page 24)).

¹ID3 Tags, Vorbis comments, etc.

3.1.5 Basic controls

When browsing files and moving through menus you usually get a list view presented. The navigation in these lists are usually the same and should be pretty intuitive. In the tree view use **Scroll Fwd** and **Scroll Back** to move around the selection. Use **Select** or **Next** to select an item. When browsing the file system selecting an audio file plays it. The view switches to the “While playing screen”, usually abbreviated as “WPS” (see section 4.3 (page 26)). The dynamic playlist gets replaced with the contents of the current folder. This way you can easily treat folders as playlists. The created dynamic playlist can be extended or modified while playing. This is also known as “on-the-fly playlist”. To go back to the FILE BROWSER stop the playback with the Long **Play** button or return to the file browser while keeping playback running using **Select**. In list views you can go back one step with **Prev**.

3.1.6 Basic concepts

Playlists

Rockbox is playlist oriented. This means that every time you play an audio file, a so-called “dynamic playlist” is generated, unless you play a saved playlist. You can modify the dynamic playlist while playing and also save it to a file. If you don’t want to use playlists you can simply play your files folder based. Playlists are covered in detail in section 4.4 (page 30).

Menu

From the menu you can customise Rockbox. Rockbox itself is very customisable. Also there are some special menus for quick access to frequently used functions.

Context Menu

Some views, especially the file browser and the WPS have a context menu. From the file browser this can be accessed with Long **Select**. The contents of the context menu vary, depending on the situation it gets called. The context menu itself presents you with some operations you can perform with the currently highlighted file. In the file browser this is the file (or folder) that is highlighted by the cursor. From the WPS this is the currently playing file. Also there are some actions that don’t apply to the current file but refer to the screen from which the context menu gets called. One example is the playback menu, which can be called using the context menu from within the WPS.

3.2 Customising Rockbox

Rockbox’ User Interface can be customised using “Themes”. Themes usually only affect the visual appearance, but an advanced user can create a theme that also changes various other settings like file view, LCD settings and all other settings that can be modified

using `.cfg` files. This topic is discussed in more detail in section 9.3 (page 115). The Rockbox distribution comes with some themes that should look nice on your player.

Note: Some of the themes shipped with Rockbox need additional fonts from the fonts package, so make sure you installed them. Also, if you downloaded additional themes from the Internet make sure you have the needed fonts installed as otherwise the theme may get displayed garbled.



3.3 Menu overview

include an overview of the menu structure here

4 Browsing and playing

4.1 File Browser



Figure 4.1: The file browser

Rockbox lets you browse your music in either of two ways. The FILE BROWSER lets you navigate through the files and folders on your player, entering folders and executing the default action on each file. To help differentiate files, each file format is displayed with an icon.

The DATABASE BROWSER, on the other hand, allows you to navigate through the music on your player using categories like album, artist, genre, etc.

You can select whether to browse using the FILE BROWSER or the DATABASE BROWSER by selecting either FILES or DATABASE in the MAIN MENU. If you choose the FILE BROWSER, the SHOW FILES setting lets you select what types of files you wish to view. See section 7.3 (page 51) for more information on the SHOW FILES setting.

Note: The FILE BROWSER allows you to manipulate your files in ways that are not available within the DATABASE BROWSER. Read more about DATABASE in section 4.2 (page 24). The remainder of this section deals with the FILE BROWSER.



4.1.1 File Browser Controls

Key	Action
Scroll Back/Scroll Fwd	Go to previous/next item in list. If you are on the first/last entry, the cursor will wrap to the last/first entry.
Prev	Go to the parent directory.
Select or Next	Executes the default action on the selected file or enters a directory.
Play	If there is an audio file playing, returns to the WHILE PLAYING SCREEN (WPS) without stopping playback.
Long Play	Stops audio playback.
Long Select	Enter the FILE MENU
Menu	Enter the MAIN MENU

4.1.2 File Menu

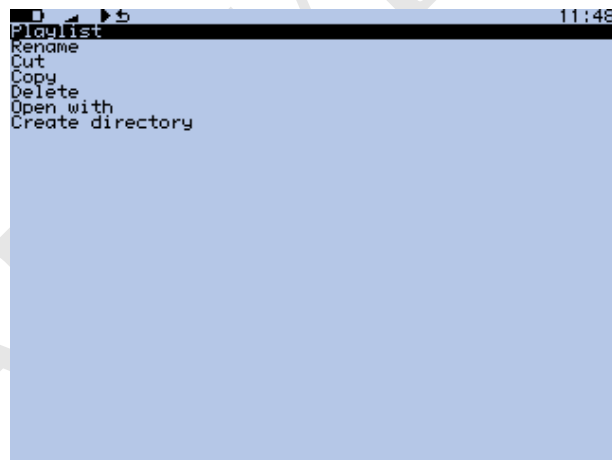


Figure 4.2: The File Menu

The FILE MENU allows you to perform certain operations on files or folders. To access the FILE MENU, position the selector over a file or folder and access the context menu with **Long Select**.

Note: The FILE MENU is a context sensitive menu. If the FILE MENU is invoked on a



file, it will display options available for files. If the FILE MENU is invoked on a folder or directory, it will display options for directories.

The FILE MENU contains the following options (unless otherwise noted, each option pertains both to files and directories):

Playlist. Enters the PLAYLIST SUBMENU (see section 4.4.3 (page 32)).

Playlist Catalog. Enters the PLAYLIST CATALOG SUBMENU (see section 4.4.2 (page 31)).

Rename. This function lets the user modify the name of a file or directory.

Cut. Copies the name of the currently selected file or directory to the clipboard and marks it to be 'cut'.

Copy. Copies the name of the currently selected file or directory to the clipboard and marks it to be 'copied'.

Paste. Only visible if a file or directory name is on the clipboard. When selected it will move or copy the clipboard to the current directory.

Delete. Deletes the currently selected file. This option applies only to files, and not to directories. Rockbox will ask for confirmation before deleting a file. Press **Play** to confirm deletion or any other key to cancel.

Delete Directory. Deletes the currently selected directory and all of the files and folders contained in the selected directory. Deleted directories cannot be recovered. Use this feature with caution!

Open with. Runs a viewer plugin on the file. Normally, when a file is selected in Rockbox, Rockbox automatically detects the file type and runs the appropriate plugin. The OPEN WITH function can be used to override the default action and select a viewer by hand. For example, this function can be used to view a text file even if the file has a non-standard extension (i.e., the file has an extension of something other than `.txt`). See section 8.3 (page 95) for more details on viewers.

Create Directory. Create a new directory in the current directory on the disk.

Properties. Shows properties such as size and the time and date of the last modification for the selected file. If used on a directory, the number of files and sub directories in that directory will be shown, as well as the total size.

Set As Recording Directory. Save recordings in the selected directory.

4.1.3 Virtual Keyboard

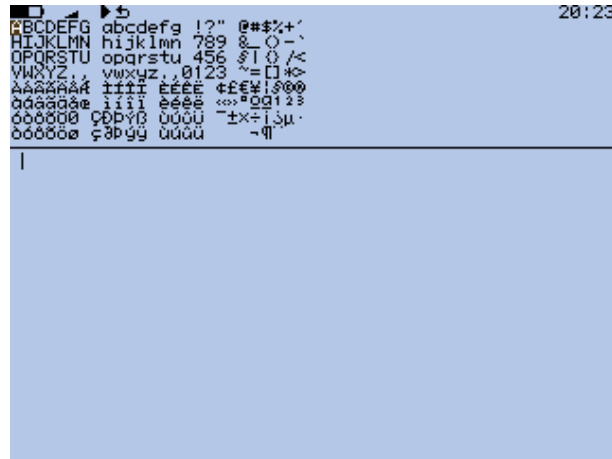


Figure 4.3: The virtual keyboard

This is the virtual keyboard that is used when entering text in Rockbox, for example when renaming a file or creating a new directory.

Picker area

Key	Action
Scroll Back/Scroll Fwd	Move about the virtual keyboard. If you move out of the picker area, you get to the <i>Line edit mode</i> .
Prev/Next	(moves the solid cursor).
Select	Inserts the currently selected keyboard letter at the current filename cursor position
Play	Exits the virtual keyboard and saves any changes
Menu	Exits the virtual keyboard without saving any changes
Long Menu	Enters Morse input mode
Select	Tap to select a character in Morse input mode

Line edit mode

Key	Action
Prev/Next	Move left and right
Select	Deletes the letter to the left of the cursor
Scroll Back/Scroll Fwd	Returns to the picker area

4.2 Database

4.2.1 Introduction


This chapter describes the Rockbox music database system. Using the information contained in the tags (ID3v1, ID3v2, Vorbis Comments, Apev2, etc.) in your audio files, Rockbox builds and maintains a database of the music files on your player and allows you to browse them by Artist, Album and Genre.

4.2.2 Initializing the database


The first time you use the database, Rockbox will scan your disk for audio files. This can take quite a while depending on the number of files on your player. This scan happens in the background, so you can choose to return to the Main Menu and continue to listen to music. If you shut down your player, the scan will continue next time you turn it on. After the scan is finished you may be prompted to restart your player before you can use the database.

4.2.3 The Database Menu

Load To Ram. The database can either be kept on disk (to save memory), or loaded into RAM (for fast browsing). Setting this to YES loads the database to RAM, allowing faster browsing and searching. Setting this option to NO keeps the database on the disk, meaning slower browsing but it does not use extra RAM and saves some battery on boot up.

Note: If you browse your music frequently using the database, you should load to RAM, as this will reduce the overall battery consumption because the disk will not need to spin on each search. 

Auto Update. If AUTO UPDATE is set to ON, each time the player boots, the database will automatically be updated.

Note: The AUTO UPDATE will only check for deleted files if the DIRECTORY CACHE (SETTINGS → GENERAL SETTINGS → SYSTEM → DISK → DIRECTORY CACHE) is enabled. UPDATE NOW includes that check whether dircache has been enabled or not. 

Initialize Now. You can force Rockbox to rescan your disk for tagged files by using the INITIALIZE NOW function in the DATABASE MENU.

Warning: INITIALIZE NOW removes all database files (removing runtime db data also) and rebuilds the database from scratch.



Update Now. UPDATE NOW causes the database to detect new and deleted files

Note: Unlike the AUTO UPDATE function, UPDATE NOW will update the database regardless of whether the DIRECTORY CACHE is enabled. Thus, an update using UPDATE NOW may take a long time.



Unlike INITIALIZE NOW, the UPDATE NOW function does not remove runtime database information.

Gather Runtime Data. When enabled, rockbox will record how often and how long a track is being played, when it was last played and its rating. This information can be displayed in the WPS and is used in the database browser to, for example, show the most played, unplayed and most recently played tracks.

Export modifications. This allows for the runtime data to be exported to the file `/.rockbox/database_changelog.txt`, which backs up the runtime data in ASCII format. This is needed when database structures change, because new code cannot read old database code. But, all modifications exported to ASCII format should be readable by all database versions.

Import modifications. Allows the `/.rockbox/database_changelog.txt` backup to be conveniently loaded into the database. If AUTO UPDATE is enabled this is performed automatically when the database is initialized.

4.2.4 Using the database

Once the database has been initialized, you can browse your music by Artist, Album, Genre and Song Name. To use the database, go to the MAIN MENU and select DATABASE.

Note: You may need to increase the value of the MAX FILES IN DIR BROWSER setting (SETTINGS → GENERAL SETTINGS → SYSTEM → LIMITS) in order to view long lists of tracks in the ID3 database browser.



There is no option to turn off database completely. If you do not want to use it just don't do the initial build of the database and do not load it to RAM.

Supported Tags	Unsupported Tags
Artist	Comment
Album	Performer
Bitrate	
Composer	
Genre	
Length	
Title	
Track Number	

4.3 While Playing Screen

The While Playing Screen (WPS) displays various pieces of information about the currently playing audio file. The appearance of the WPS can be configured using WPS configuration files. The items shown depend on your configuration – all item can be turned on or off independently. Refer to section [B](#) (page [119](#)) for details on how to change the display of the WPS.

- Status bar: The Status bar shows Battery level, charger status, volume, play mode, repeat mode, shuffle mode and clock. In contrast to all other items, the status bar is always at the top of the screen.
- (Scrolling) path and filename of the current song.
- The ID3 track name.
- The ID3 album name.
- The ID3 artist name.
- Bit rate. VBR files display average bitrate and “(avg)”
- Elapsed and total time.
- A slider progress meter representing where in the song you are.
- Peak meter.

See section [9.2](#) (page [112](#)) for details of customising your WPS (While Playing Screen).

4.3.1 WPS Key Controls

Key	Action
Scroll Fwd / Scroll Back	Volume up/down.
Prev	Go to beginning of track, or if pressed while in the first seconds of a track, go to previous track.
Long Prev	Rewind in track.
Next	Go to next track.
Long Next	Fast forward in track.
Play	Toggle play/pause.
Long Play	Stop playback.
Select	Return to the FILE BROWSER.
Long Select	Enter WPS CONTEXT MENU.
Menu	Enter MAIN MENU.
Long Menu	Enter QUICK SCREEN.


4.3.2 Peak Meter

The peak meter can be displayed on the While Playing Screen and consists of several indicators.

The bar: This is the wide horizontal bar. It represents the current volume value.

The peak indicator: This is a little vertical line at the right end of the bar. It indicates the peak volume value that occurred recently.

The clip indicator: This is a little black block that is displayed at the very right of the scale when an overflow occurs. It usually does not show up during normal playback unless you play an audio file that is distorted heavily. If you encounter clipping while recording, your recording will sound distorted. You should lower the gain.

Note: Note that the clip detection is not very precise. Clipping might occur without being indicated. 

The scale: Between the indicators of the right and left channel there are little dots. These dots represent important volume values. In linear mode each dot is a 10% mark. In dbfs mode the dots represent the following values (from right to left): 0db, -3db, -6db, -9db, -12db, -18db, -24db, -30db, -40db, -50db, -60db.

4.3.3 The WPS Context Menu

Like the context menu for the FILE BROWSER, the WPS CONTEXT MENU allows you quick access to some often used functions:

Sound Settings

This is a shortcut to the SOUND SETTINGS MENU, where you can configure volume, bass, treble, and other settings affecting the sound of your music. See section 6 (page 40) for more information.

Playlist

The PLAYLIST submenu allows you to view, save, search and reshuffle the current playlist. To change settings for the PLAYLIST VIEWER press **Menu** while viewing the playlist to bring up the PLAYLIST VIEWER MENU.

Playlist catalog

View catalog. This lists all playlists that are part of the Playlist catalog. You can load a new playlist directly from this list.

Add to playlist. Adds the currently playing file to a playlist. Select the playlist you want the file to be added to and it will get appended to that playlist.

Add to new playlist. Similar to the previous entry this will add the currently playing track to a playlist. You need to enter a name for the new playlist first.

Rating

The menu entry is only shown if GATHER RUNTIME INFORMATION is enabled. It allows the assignment of a personal rating value (0 – 10) to a track which can be displayed in the WPS and used in the Database browser. Press **Next** to increment the value. The value wraps at 10.

Bookmarks

This allows you to create a bookmark in the currently-playing track.

Show ID3 info

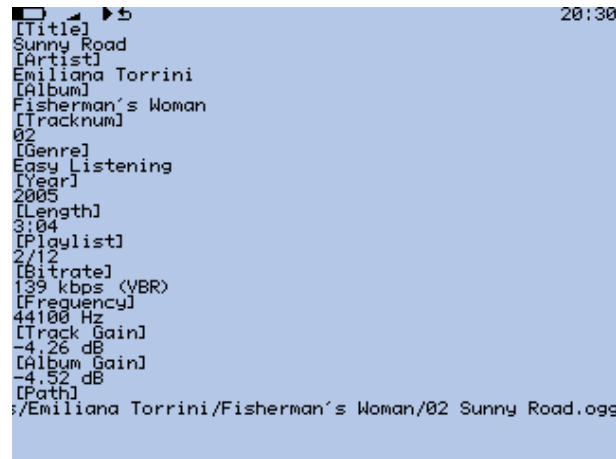


Figure 4.4: The ID3 viewer

This screen is accessible from the WPS screen, and provides a detailed view of all the identity information about the current track. This info is known as meta data and is stored in audio file formats to keep information on artist, album etc. To access this screen, press Long **Select** to access the WPS CONTEXT MENU and select SHOW ID3 INFO.

Open With...

This OPEN WITH function is the same as the OPEN WITH function in the FILE CONTEXT MENU.

Pitch

The Pitch Screen allows you to change the pitch and (at the same time) the playback speed of your player. The pitch value can be adjusted between 50% and 200%. 50% means half the normal playback speed and the pitch that's an octave lower than the normal pitch. 200% means double playback speed and the pitch that's an octave higher than the normal pitch. It's not possible to change the pitch without changing the playback speed and vice versa. Changing the pitch can be done in two modes: procentual and semitone. Initially (after the player is switched on), procentual mode is active.

Key	Action
Play	Toggle pitch changing mode
Scroll Fwd / Scroll Back	Increase / Decrease pitch by 0.1% (in pro-centual mode) or a semitone (in semitone mode)
Long Scroll Fwd / Long Scroll Back	Increase / Decrease pitch by 1% (only in procentual mode)
Next / Prev	Temporarily increase / decrease pitch by 2.0%
Menu	Reset pitch to 100%
Select	Leave the Pitch Screen

Graphical EQ

This is a shortcut to the EQUALIZER. See section 6.8 (page 43).

Browse EQ Presets

Browse presets for the EQUALIZER.

4.4 Working with Playlists

This section is currently in a half written state, with possible errors and a lot of stuff missing. Please help us fix this chapter by submitting additions/corrections to the tracker

4.4.1 Playlist terminology

Some common terms that are used in Rockbox when referring to playlists:

Directory. A playlist! One of the keys to getting the most out of Rockbox is understanding that Rockbox *always* considers the song that it is playing to be part of a playlist, and in some situations, Rockbox will create a playlist automatically. For example, if you are playing the contents of a directory, Rockbox will automatically create a playlist containing the songs in that directory. This means that just about anything that is described in this chapter with respect to playlists also applies to directories.

Dynamic playlist. A dynamic playlist is a playlist that is created “On the fly.” Any time you insert or queue tracks using the PLAYLIST SUBMENU (see section 4.4.3 (page 32)), you are creating (or adding to) a dynamic playlist.

Insert. In Rockbox, to INSERT an item into a playlist means putting an item into a playlist and leaving it there, even after it is played. As you will see later in this chapter, Rockbox can INSERT into a playlist in several places.


Queue. In Rockbox, to QUEUE a song means to put the song into a playlist and then to remove the song from the playlist once it has been played. The only difference between INSERT and QUEUE is that the QUEUE option removes the song from the playlist once it has been played, and the INSERT option does not.

4.4.2 Creating playlists

Rockbox can create playlists in four different ways.

By selecting (“playing”) a song from the File Browser

Whenever a song is selected from the FILE BROWSER with **Select** or **Next**, Rockbox will automatically create a playlist containing all of the songs in that directory and start playback with the selected song.


Note: If you already have created a dynamic playlist, playing a new song will *erase* the current dynamic playlist and create a new one. If you want to add a song to the current playlist rather than erasing the current playlist, see the section below on how to add music to a playlist. 

By using Insert and Queue functions

If playback is stopped, the INSERT and QUEUE functions can be used as described in 4.4.3 to create a new playlist instead of adding to an existing one. This will *erase* any dynamic playlist.

By using the Playlist catalog

The PLAYLIST CATALOG makes it possible to modify and create playlists that are not currently playing. To do this select PLAYLIST CATALOG in the FILE MENU. There you will have two choices, ADD TO PLAYLIST adds the selected track or directory to an existing playlist and ADD TO A NEW PLAYLIST creates a new playlist containing the selected track or directory.

Note: All playlists in the PLAYLIST CATALOG are stored in the /Playlists directory in the root of your player’s harddisk and playlists stored in other locations are not included in the catalog. It is however possible to move existing playlists there (see section 4.1.2 (page 21)). 

By using the Main Menu

To create a playlist containing all music on your player, you can use the CREATE PLAYLIST command in the PLAYLIST OPTIONS menu found in the MAIN MENU. The created playlist will be named `root.m3u` and saved in the root of your player's harddisk.

4.4.3 Adding music to playlists

Adding music to a dynamic playlist



Figure 4.5: The Playlist Submenu

The PLAYLIST SUBMENU allows you to put tracks into a “dynamic playlist”. If there is no music currently playing, Rockbox will create a new dynamic playlist and put the selected track(s) into it. If there is music currently playing, Rockbox will put the selected track(s) into the current playlist. The place in which the newly selected tracks are added to the playlist is determined by the following options:

Insert. Add track(s) immediately after any tracks added via the most recent INSERT operation. If no tracks have yet been added via an INSERT, new tracks will be added immediately after the current playing track. If playback is stopped a new dynamic playlist will get created with the selected tracks.

Insert next. Add track(s) immediately after current playing track, no matter what else has been inserted.

Insert last. Add track(s) to end of playlist.

Queue. Queue is the same as Insert except queued tracks are deleted immediately from the playlist after they've been played. Also, queued tracks are not saved to the playlist file (see section 5.8 (page 38)).

Queue next. Queue track(s) immediately after current playing track.

Queue last. Queue track(s) at end of playlist.

Play next. Replaces all but the current playing track with track(s). Current playing track is queued.

The PLAYLIST SUBMENU can be used to add either single tracks or entire directories to a playlist. If the PLAYLIST SUBMENU is invoked on a single track, it will put only that track into the playlist. On the other hand, if the PLAYLIST SUBMENU is invoked on a directory, Rockbox adds all of the tracks in that directory to the playlist.

Note: You can control whether or not Rockbox includes the contents of sub-directories when adding an entire directory to a playlists. Set the SETTINGS → GENERAL SETTINGS → PLAYLIST → RECURSIVELY INSERT DIRECTORIES setting to YES if you would like Rockbox to include tracks in sub-directories as well as tracks in the currently-selected directory.

Dynamic playlists are saved so resume will restore them exactly as they were before shutdown.

Note: To view, save or reshuffle the current dynamic playlist use the PLAYLIST sub menu in the WPS context menu or in the MAIN MENU.

4.4.4 Modifying playlists

Reshuffling

Reshuffling the current playlist is easily done from the PLAYLIST sub menu in the WPS, just select RESHUFFLE.

Moving and removing tracks

To move or remove a track from the current playlist enter the PLAYLIST VIEWER by selecting VIEW CURRENT PLAYLIST in the PLAYLIST submenu in the WPS context menu or the MAIN MENU. Once in the PLAYLIST VIEWER open the context menu on the track you want to move or remove. If you want to move the track, select MOVE in the context menu and then move the blinking cursor to the place where you want the track to be moved and confirm with **Select** or **Next**. To remove a track, simply select REMOVE in the context menu.

4.4.5 Saving playlists

To save the current playlist either enter the PLAYLIST submenu in the WPS CONTEXT MENU (see section 4.3.3 (page 27)) and select SAVE CURRENT PLAYLIST or enter the PLAYLIST OPTIONS menu in the MAIN MENU and select SAVE CURRENT PLAYLIST. Either method will bring you to the VIRTUAL KEYBOARD (see section 4.1.3 (page 23)), enter a filename for your playlist and accept it and you're done.

4.4.6 Loading saved playlists

Through the FILE BROWSER

Playlist files, like regular music tracks, can be selected through the FILE BROWSER. When loading a playlist from disk it will replace the current dynamic playlist.

Through the PLAYLIST CATALOG

The PLAYLIST CATALOG offers a shortcut to all playlists in your player's harddisk root folder called /Playlists. It can be used like the FILE BROWSER.

4.4.7 Helpful Hints

Including sub-directories in playlists

You can control whether or not Rockbox includes the contents of sub-directories when adding an entire directory to a playlists. Set the MAIN MENU → SETTINGS → PLAYLIST → RECURSIVELY INSERT DIRECTORIES setting to YES if you would like to include tracks in sub-directories as well as tracks in the currently selected directory.

5 The Main Menu

5.1 Introducing the Main Menu



Figure 5.1: The main menu

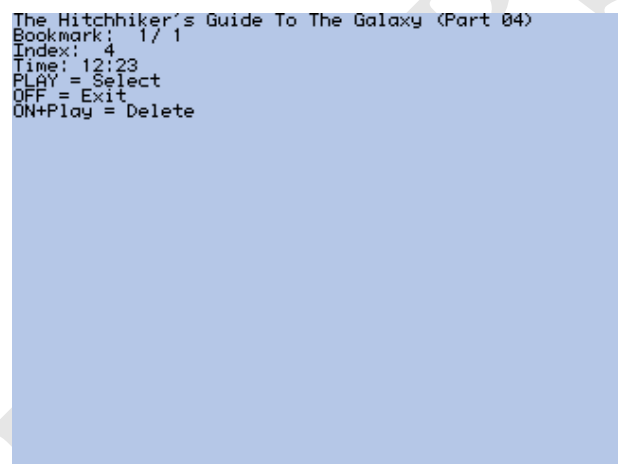
The MAIN MENU is the screen from which all of the Rockbox functions can be accessed. To enter the MAIN MENU, press the **Menu** button.

All settings are stored on the unit. However, Rockbox does not spin up the disk solely for the purpose of saving settings. Instead, Rockbox will save settings when it spins up the disk the next time, for example when refilling the MP3 buffer or navigating through the FILE BROWSER. Changes to settings may therefore not be saved unless the player is shut down safely (see section 3.1.2 (page 17)).

5.2 Navigating the Main Menu

Key	Action
Scroll Fwd	Moves up in the menu. Inside a setting, increases the value or chooses next option
Scroll Back	Moves down in the menu. Inside a setting, decreases the value or chooses previous option
Next	Selects option
Prev	Exits menu, setting or moves to parent menu

5.3 Recent Bookmarks



```
The Hitchhiker's Guide To The Galaxy (Part 04)
Bookmark: 1 / 1
Index: 4
Time: 12:23
PLAY = Select
OFF = Exit
ON+Play = Delete
```

Figure 5.2: The list bookmarks screen

If the **SAVE A LIST OF RECENTLY CREATED BOOKMARKS** option is enabled then you can view a list of several recent bookmarks here and select one to jump straight to that track. See section 7.7 (page 57) for more details on configuring bookmarking in Rockbox.

Note: This entry is not shown in the MAIN MENU when the option is off and the option is off by default.



5.4 Files

Browse the files on your player (see section 4.1 (page 20)).

5.5 Database

Browse by the meta-data in your audio files (see section 4.2 (page 24)).

5.6 Now Playing/Resume Playback

Go to the WHILE PLAYING SCREEN and resume if music playback is stopped or paused and there is something to resume (see section 4.3 (page 26)).

5.7 Settings

5.7.1 Sound Settings

The SOUND SETTINGS menu offers a selection of sound properties you may change to customise your listening experience. The details of this menu are covered in detail in section 6 (page 40).

5.7.2 General Settings

The GENERAL SETTINGS menu allows you to customise the way Rockbox looks and the way it plays music. The details of this menu are covered in detail in section 7 (page 47).

5.7.3 Manage Settings

The MANAGE SETTINGS option allows the saving and re-loading of user configuration settings, browsing the hard drive for alternate firmwares, and finally resetting your player back to initial configuration. The details of this menu are covered in detail in section 9.3 (page 115).

5.7.4 Browse Themes

This option will display all the currently installed themes on the player, press **Select** or **Next** to load the chosen theme and apply it.

A theme is basically a configuration file, stored in a specific directory, that typically changes the WPS, font used and on some platforms additional information such as background image and text colours.

There are a number of themes that ship with Rockbox. If none of these suit your needs, many more can be downloaded from <http://www.rockbox.org/twiki/bin/view/Main/Wpslpod5g>. Some of the downloads from this site will actually be standalone WPS files, others will be full-blown themes.

Note: Themes do not have to be purely visual. It is quite possible to create a theme that switches between audio configurations for use in the car, with headphones and when connected to an external amplifier. See section 9.2.2 (page 112) for more details.



5.7.5 Recording Settings

The RECORDING SETTINGS menu allows you to configure settings related to recording. The details of this menu are covered in detail in section ?? (page ??).

5.8 Playlist

This menu allows you to work with playlists. Playlists can be created in three ways. Playing a file in a directory causes all the files in the directory to be placed in a playlist. Playlists can be created manually by either using the FILE MENU (see section 4.1.2 (page 21)) or using the PLAYLIST menu. Both automatically and manually created playlists can be edited using this menu.

Create Playlist: Rockbox will create a playlist with all tracks in the current directory and all sub-directories. The playlist will be created one folder level “up” from where you currently are.

View Current Playlist: Displays the contents of the playlist currently stored in memory.

Save Current Playlist: Saves the current dynamic playlist, excluding queued tracks, to the specified file. If no path is provided then playlist is saved to current directory (see section ?? (page ??)).

Playlist Catalog: The PLAYLIST CATALOG provides a simple interface to maintain several playlist (see section ?? (page ??)).

5.9 Plugins

With this option you can load and run various plugins that have been written for Rockbox. There are a wide variety of these supplied with Rockbox, including several games, some impressive demos and a number of utilities. A detailed description of the different plugins is to be found in section 8 (page 60).

5.10 System

This option shows RAM buffer size, battery voltage level and estimated time remaining, disk total space and disk free space.

Rockbox Info: Displays some basic system information. This is, from top to bottom, the amount of memory Rockbox has available for storing music (the buffer). The battery status. Hard disk size and the amount of free space on the disk.

Version: Software version and credits display.

Sleep Timer: The SLEEP TIMER powers off your player after playing for a given time. It can be set from OFF to 5 hours in 5 minute steps. The SLEEP TIMER is reset on boot. Using this option disables the WAKE UP ALARM.

Debug (Keep Out!): This sub menu is intended to be used *only* by Rockbox developers. It shows hardware, disk, battery status and other technical information.

Warning: It is not recommended that users access this menu unless instructed to do so in the course of fixing a problem with Rockbox. If you think you have messed up your settings by use of this menu please try to reset *all* settings before asking for help.



5.11 Quick Menu

Whilst not strictly part of the MAIN MENU, it is worth noting that a few of the more commonly used settings are available from the QUICK MENU. The QUICK MENU screen is accessed with Long **Menu** and exited with the same button. It allows rapid access to the SHUFFLE and REPEAT modes (section 7.1 (page 47)) and the SHOW FILES option (section 7.3 (page 51)).

6 Sound Settings

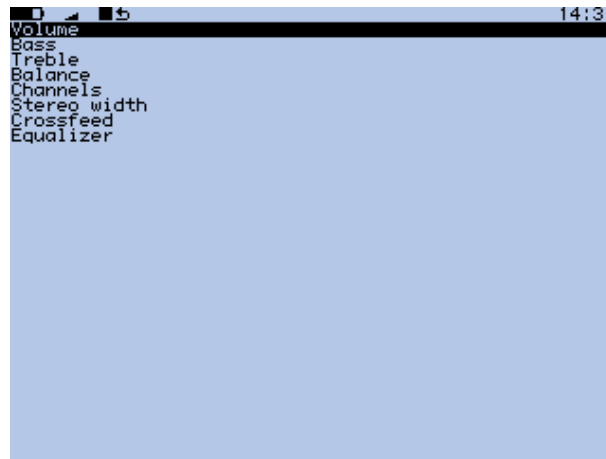


Figure 6.1: The sound settings screen

The Sound Settings menu offers a selection of sound properties you may change to customise your listening experience.

6.1 Volume

This setting adjusts the volume of your music. Like most professional audio gear and many consumer audio products, Rockbox uses a decibel scale where 0 dB is a reference that indicates the maximum volume that the player can produce without possible distortion (clipping). All values lower than this reference will be negative and yield a progressively softer volume. The volume can be adjusted from a minimum of -57 dB to a maximum of +6 dB.

6.2 Bass

This emphasises or suppresses the lower frequency (bass) sounds in the track. 0dB means that bass is unaltered (flat response). The minimum setting is -6dB and the maximum is 9dB.

6.3 Treble

This setting emphasises or suppresses the higher frequency (treble) sounds in the track. 0dB means that treble is unaltered (flat response). The minimum setting -6dB and the maximum is 9dB.

6.4 Balance

This setting controls the balance between the left and right channels. The default, 0, means that the left and right outputs are equal in volume. Negative numbers increase the volume of the left channel relative to the right, positive numbers increase the volume of the right channel relative to the left.

6.5 Channels

A stereo audio signal consists of two channels, left and right. The CHANNELS setting controls if these channels are to be combined in any way, and if so, in what manner they will be combined. Available options are:

Setting	Description
Stereo	Leave the audio signal unmodified.
Mono	Combine both channels and send the resulting signal to both stereo channels, resulting in a monophonic output.
Custom	Allows you to manually specify a stereo width with the STEREO WIDTH setting described later in this chapter.
Mono Left	Plays the left channel in both stereo channels.
Mono Right	Plays the right channel in both stereo channels.
Karaoke	Removes all sound that is the same in both channels. Since most music is recorded with vocals being equally present in both channels to make the singer sound centrally placed, this often (but not always) has the effect of removing the voice track from a song. This setting also very often has other undesirable effects on the sound.

6.6 Stereo Width

Stereo width allows you to manually specify the effect that is applied when the CHANNELS setting is set to CUSTOM. All values below 100% will progressively mix the contents of one channel into the other. This has the effect of gradually centering the stereo image, until you have monophonic sound at 0%. Values above 100% will progressively remove components in one channel that is also present in the other. This has the effect of widening the stereo field. A value of 100% will leave the stereo field unaltered.

6.7 Crossfeed

Crossfeed attempts to make the experience of listening to music on headphones more similar to listening to music with stereo speakers. When you listen to music through speakers, each ear will hear sound originating from both speakers. However, the sound from the left speaker reaches your right ear slightly later than it does your left ear, and vice versa.

The human ear and brain together are very good at interpreting the timing differences between direct sounds and reflected sounds and using that information to identify the direction that the sound is coming from. On the other hand, when listening to headphones, each ear hears only the stereo channel corresponding to it. The left ear hears only the left channel and the right ear hears only the right channel. The result is that sound from headphones does not provide the same spatial cues to your ear and brain as speakers, and might for that reason sound unnatural to some listeners.

The crossfeed function uses an algorithm to feed a delayed and filtered portion of the signal from the right channel into the left channel and vice versa in order to simulate the spatial cues that the ear and brain receive when listening to a set of loudspeakers placed in front of the listener. The result is a more natural stereo image that can be especially appreciated in older rock and jazz records, where one instrument is often hard-panned to just one of the speakers. Many people will find such records tiring to listen to using earphones and no crossfeed effect.

Crossfeed has the following settings.

Crossfeed: Selects whether the crossfeed effect is to be enabled or not.

Direct Gain: How much the level of the audio that travels the direct path from a speaker to the corresponding ear is supposed to be decreased.

Cross Gain: How much the level of the audio that travels the cross path from a speaker to the opposite ear is to be decreased.

High-Frequency Attenuation: How much the upper frequencies of the cross path audio will be dampened. Note that the total level of the higher frequencies will be a combination of both this setting and the CROSS GAIN setting.

High-Frequency Cutoff Decides at which frequency the cross path audio will start to be cut by the amount described by the HIGH-FREQUENCY ATTENUATION setting.

Most users will find the default settings to yield satisfactory results, but for the more adventurous user the settings can be fine-tuned to provide a virtual speaker placement suited to ones preference.

Beware that the crossfeed function is capable of making the audio distort if you choose settings which result in a too high output level.

6.8 Equalizer

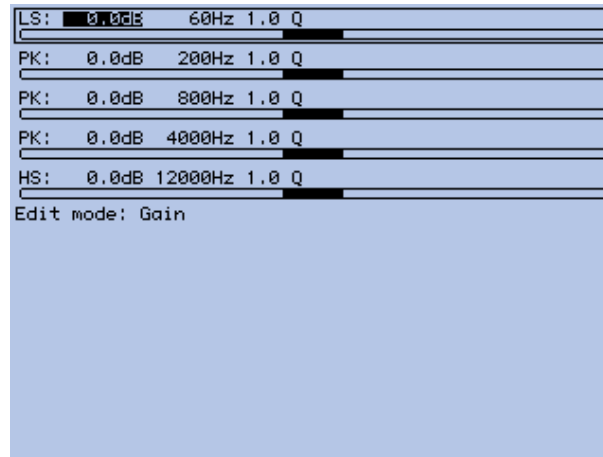


Figure 6.2: The graphical equalizer

Rockbox features a parametric equalizer. As the name suggests, a parametric equalizer lets you control several different parameters for each band of the equalizer. Rockbox's parametric EQ is composed of five different EQ bands:

EQ Band(s)	Description
Band 0: Low shelf filter	A low shelf filter boosts or lowers all frequencies below the designated cutoff point. The “bass” control on most home or car stereos is an example of a low shelf filter. The low shelf filter in Rockbox is more flexible than a simple “bass” control, because a simple bass control only lets you adjust the amount of gain that is applied. Rockbox lets you control the amount of gain that is applied (i.e., the amount that the bass is boosted or cut) too, but Rockbox also allows you to adjust the “cutoff” frequency where the shelving starts to take effect. For example, a cutoff frequency of 50 Hz will adjust only very low frequencies. A cutoff frequency of 200 Hz, on the other hand, will adjust a much wider range of bass frequencies.
Bands 1-3: Peaking filters	Peaking EQ filters boost or low a center frequency that you select, as well as the frequencies within a certain distance of that center. Graphic equalizers in home stereos are usually peaking filters. The peaking EQs on Rockbox’s parametric equalizer let you adjust three different parameters for each EQ band 1 through 3. The “center” parameter controls the center frequency that is adjusted by that EQ band. The “gain” parameter controls how much each band is adjusted. Positive numbers make the EQ band louder, while negative numbers make that EQ band quieter. Finally, the “Q” parameter controls how wide or narrow each EQ band is. Higher Q values will affect a narrow band of frequencies, while lower Q values will affect a wider band of frequencies.
Band 4: Hi shelf filter	A high shelf filter boosts or lowers all frequencies above a designated cutoff point. The “treble” control on most home or car stereos is an example of a high shelf filter. The high shelf filter is adjusted the same way as the low shelf filter, except that it works on the high end of the frequency spectrum rather than the low end.

So, as a general guide, EQ band 0 should be used for lows, EQ bands 1 through 3 should be used for mids, and EQ band 4 should be used for highs.

Enable EQ: This option controls whether the EQ is on or off.

Graphical EQ: This option brings up a graphic EQ screen, which allows adjustment of each of the three parameters described above (gain, center frequency, and Q) for

each of the five EQ bands.

Key	Action
Scroll Fwd	Raises the highlighted parameter.
Scroll Back	Lowers the highlighted parameter.
Prev	Moves to the previous EQ band.
Next	Moves to the next EQ band.
Select	Toggles the cursor among the three parameters (gain, center frequency, Q) for the selected EQ band.
Menu	Exits the graphic EQ screen.

Pre-cut: If too much gain is added through the graphical EQ, your music may distort. The PRECUT setting allows you to adjust the overall gain of the EQ.

If your music distorts when using the EQ, trying changing this setting to a negative value.

Simple EQ: This option provides an easier alternative for those who are daunted by all of the parameters that can be adjusted using the graphical EQ. With the SIMPLE EQ, the only parameter that can be adjusted is the gain.

Advanced EQ: This sub menu provides options for adjusting the same parameters as the GRAPHICAL EQ. The only difference is that the parameters are adjusted through textual menus rather than through a graphic interface.

Save EQ Preset: This option saves the current EQ configuration in a `.cfg` file.

Browse EQ Presets: This menu displays a list EQ presets, as well as any EQ configurations saved using the SAVE EQ PRESET option. Users unfamiliar with the operation of a parametric EQ may wish to use the presets instead of trying to configure the EQ, or use the presets for designing their own custom EQ settings.

6.9 Hardware EQ

This function controls the EQ that is built into the hardware of your iPod. The hardware EQ functions similarly to the Graphical EQ in that it allows adjustment of several parameters. However, unlike the Graphical EQ, the Hardware EQ allows the user to choose from a limited number of settings for “Center Frequency” and “Bandwidth” (“Bandwidth” in the Hardware EQ is similar to “Q” in the Graphical EQ).

Note: While the HARDWARE EQ menu shows Low Shelf, three peaking filters, and High Shelf, the peaking filters are not currently operational.



6.10 Dithering

This setting controls the dithering and noise shaping functionality of Rockbox.

Most of Rockbox' audio file decoders work at a higher bit depth than the 16 bits used for output on the player's audio connectors. The simplest way in which to convert from one bit depth to another is simply discarding all the surplus bits. This is the default behaviour, and adds distortion to the signal that will vary in character along with the desired sound.

Dithering adds low-level noise to the signal prior to throwing away the surplus bits, which gives the resulting signal a uniform noise floor which is independent of the signal. Most people find this noise preferable to the time-varying noise heard when not performing dithering.

After dithering, noise shaping is performed. This basically just pushes the dithering noise to the parts of the frequency spectrum humans cannot hear so easily. In Rockbox' case, some of the noise is pushed up to above 10 kHz.

This setting will be put to its best use when listening to dynamic music with frequently occurring quiet parts, classical music being a typical example. It is worth noting that the effects of dithering and noise shaping are very subtle, and not easily noticable.

Rockbox uses highpass triangular distribution noise as the dithering noise source, and a third order noise shaper.

7 General Settings



Figure 7.1: The general settings screen

7.1 Playback

The PLAYBACK sub menu allows you to configure settings related to audio playback.


Shuffle. Alters how Rockbox will select which song to play next.

Options: YES/NO.


Repeat. Configures settings related to repeating of directories or playlists.

Options: OFF / ALL / ONE / SHUFFLE / A-B:

Off. The current directory or playlist will not repeat when it is finished.

Note: If you have the AUTO CHANGE DIRECTORY option set to YES, Rockbox will move on to the next directory on your hard drive. If the AUTO CHANGE DIRECTORY option is set to NO, playback will stop when the current directory or playlist is finished. 

All. The current directory or playlist will repeat when it is finished.

Note: This option does *not* shuffle all files on your player. Rockbox is playlist oriented. When you play a song, a directory, or an album, Rockbox creates a playlist and plays it. Thus, to shuffle all songs on the player, you need to create a playlist of all songs on the player, and play that playlist with shuffle mode set to ALL. 

One. Repeat one track over and over.

Shuffle. When the current directory or playlist has finished playing, it will be shuffled and then repeated.

A-B. Repeats between two user defined points within a track, typically used by musicians when attempting to learn a piece of music. This option is more complicated to use than the others as the player must first be placed into A-B repeat mode and then the start and end points defined.

To set the Start Point (A) press **Select**. The following press of **Select** will set the End Point (B), and a third successive **Select** will reset the markers.

Play Selected First. This setting controls what happens when you select a file for playback while shuffle mode is on. If the PLAY SELECTED FIRST setting is YES, the file you selected will be played first. If this setting is NO, a random file in the directory will be played first.

Fast-Forward/Rewind. How fast you want search (fast forward or rewind) to accelerate when you hold down the button. OFF means no acceleration. 2X/1S means double the search speed once every second the button is held. 2X/5S means double the search speed once every 5 seconds the button is held.

Anti-Skip Buffer. This setting allows you to control how much music is stored in the player's memory whilst playing a song, acting as a buffer against shock or playback problems. The player transfers the selected amount of the forthcoming song into its memory at high speed whilst you are playing the song. It keeps a "rolling" buffer, which keeps feeding more of the forthcoming song into memory as it goes along. If the player is knocked, shaken or jogged heavily while Rockbox is trying to read the hard drive, Rockbox might not be able to read the drive. Rockbox will retry over and over again until it succeeds, but may eventually reach the end of the memory buffer. When that happens, Rockbox must stop playing and wait for more data from the disk, which causes your music to skip. The anti-skip setting tells Rockbox how much extra buffer memory to spare to handle this situation. This setting therefore allows you to reduce the chances of there being a gap or pause during playback of songs.

The anti-skip buffer can be set to various values between 5 seconds and 10 minutes.

Note: Having a large anti-skip buffer tends to use more power, and may reduce your battery life. It is recommended to always use the lowest possible setting that allows correct and continuous playback.



Fade on Stop/Pause. Enables and disables a fade effect when you pause or stop playing a song. If the Fade on Stop/Pause option is set to YES, your music will fade out when you stop or pause playback, and fade in when you resume playback.

Party Mode. Enables unstoppable music playback. When new songs are selected, they are queued at the end of the current dynamic playlist instead of being played

immediately. Pausing and stopping playback is disabled as well as skipping songs and launching plugins.

Crossfade. This setting enables a cross-fader. At the end of a song, the song will fade out as the next song fades in, creating a smooth transition between songs.

Options:

Enable Crossfade. If set to OFF, crossfade is disabled. If set to ALWAYS, songs will always crossfade into one another. If set to SHUFFLE, crossfade is enabled when the shuffle feature is set to YES, but disabled otherwise. If set to track skip only, tracks will only crossfade when you manually change tracks.

Fade In Delay. The “fade in delay” is the length of time between when the crossfade process begins and when the new track begins to fade in.

Fade In Duration. The length of time, in seconds, that it takes your music to fade in.


Fade Out Delay. The “fade out delay” is the length of time between when the crossfade process begins and when the old track begins to fade out.

Fade Out Duration. The length of time, in seconds, that it takes your music to fade out.

Fade Out Mode. If set to CROSSFADE, one song will fade out and the next song will simultaneously fade in. If set to MIX, the ending song will continue to play as normal until its end, while the starting song will fade in from under it. MIX mode is not used for manual track skips, even if it is selected here.

Note: The crossfade setting is particularly effective when the player is set on shuffle. 

Replaygain. This allows you to control the replaygain function. The purpose of replaygain is to adjust the volume of the music played so that all songs (or albums, depending on your settings) have the same apparent volume. This prevents sudden changes in volume when changing between songs recorded at different volume levels. For replaygain to work, the songs must have been processed by a program that adds replaygain information to the ID3 tags (or Vorbis tags).

Note: APEv2 tags are not currently supported. 

Options for replaygain are:

Enable Replaygain. This turns on/off the replaygain function.

Prevent Clipping. Avoid clipping of a song’s waveform. If a song would clip during playback, the volume is lowered for that song. Replaygain information is needed for this to work.

Replaygain type. Choose the type of replaygain to apply:

Album Gain. Maintain a constant volume level between albums, but keep any intentional volume variations between songs in an album. (If album gain value is not available, uses track gain information).

Track Gain. Maintain a constant volume level between tracks. If track gain value is not available, no replaygain is applied.


Track Gain if Shuffling. Maintains a constant volume between tracks if SHUFFLE is set to YES. Reverts to album mode if SHUFFLE is set to NO.

Pre-amp. This allows you to adjust the volume when replaygain is applied. Replaygain often lowers the volume, sometimes quite much, so here you can compensate for that. Please note that a (large) positive pre-amp setting can cause clipping, unless prevent clipping is enabled. The pre-amp can be set to any decibel (dB) value between -12dB and +12dB, in increments of 0.1dB.

Beep Volume. Controls the volume of the beep that is heard when skipping forward or backward between tracks. The beep is disabled when set to OFF.

ID3 Tag Priority. Select which version of ID3 tag to use if both are present.

Auto-Change Directory. Control what Rockbox does when it reaches the end of a directory. If AUTO-CHANGE DIRECTORY is set to YES, Rockbox will continue to the next directory. If AUTO-CHANGE DIRECTORY is set to NO, playback will stop at the end of the current directory.

Note: You must have the REPEAT option set to NO for AUTO-CHANGE DIRECTORY to function properly. 

Pause on headphone unplug. Enables and disables automatic pausing of playback when the headphones are disconnected from the player's headphone socket.

Pause on headphone unplug. Options for automatic pause:

Off. Disables automatic pause.

Pause. Pauses the player when the headphones are removed.

Pause and Resume. Pauses when the headphones are removed, and resumes playback when they are reconnected.


Duration to rewind. Number of seconds (between 0 and 15) to rewind playback when the headphones are removed.

Disable auto-resume if phones not present. This option will disable the automatic resumption of playback at startup if the headphones are not connected to the player.

Note: This requires RESUME ON STARTUP to be enabled. 

Last.fm Log. Enables logging of your played tracks for submittal to <http://www.last.fm>.

This service was formerly known as *Audioscrobbler*. When you enable this option, you'll have to reboot to start the logging. The log-file is called `.scrobbler.log`, and is to be found in the root directory of your player.

Note: See <http://www.rockbox.org/wiki/bin/view/Main/LastFMLog> for a further description, and for tools you can use to submit your Last.fm log. 

Cuesheet Support. Enables reading of cuesheet files for played tracks. If a cuesheet is found for a track, track markers are displayed on the progressbar and it is possible

to skip between the tracks within the cuesheet. Also the information found in the cuesheet file will replace the information from the ID3 tags. When you enable this option, you'll have to reboot for it to come into effect.

7.2 Playlist

The PLAYLIST sub menu allows you to configure settings related to playlists.

Recursively Insert Directories. If set to ON, then when a directory is inserted or queued into a dynamic playlist, all sub-directories will also be inserted. If set to ASK, Rockbox will prompt the user about whether to include sub-directories.

Warn When Erasing Dynamic Playlist. If set to YES, Rockbox will provide a warning if the user attempts to take an action that will cause Rockbox to erase the current dynamic playlist.

7.3 File View

The File View menu deals with options relating to how the File Browser displays files.

Sort Case Sensitive: If this option is set to YES, all files that start with upper case letters will be listed first, followed by all files that begin with lower case letters. If this option is set to NO, then case will be ignored when sorting files.

Sort Directories: This option controls how Rockbox sorts folders. The default is to sort them alphabetically. BY DATE sorts them with the oldest folder first. BY NEWEST DATE sorts them with the newest folder first.

Sort Files: This option controls how Rockbox sorts files. All of the options for SORT DIRECTORIES are available in this option. In addition, there is a BY TYPE option which sorts files alphabetically by their type (such as .mp3) then alphabetically within each type.

Show Files: This option controls which files are displayed in the File Browser.

All: The FILE BROWSER displays all files and directories. Extensions are shown. No files or directories are hidden.

Supported: The FILE BROWSER displays all directories and files supported by Rockbox (see section [A.1](#) (page 118)). Files and directories starting with . (dot) or with the *hidden* flag set are hidden.

Music: The FILE BROWSER displays only folders, playlists and the supported *audio* file formats. Extensions are stripped. Files and directories starting with . or with the "hidden" flag set are hidden.

Playlists: The FILE BROWSER displays only directories and playlists, for simplified navigation.

Show Filename Extensions: This option controls how file extensions are shown in the File Browser.

Off: The file extensions are never shown.

On: The file extensions are always shown.

Only unknown types: Only the extensions of unknown filetypes are shown.

Only when viewing all types: Only show file extensions when SHOW FILES is set to ALL.

Follow Playlist: This option determines what directory the FILE BROWSER displays first. If FOLLOW PLAYLIST is set to YES, when you enter the FILE BROWSER from the WPS, you will find yourself in the same directory as the currently playing file. If FOLLOW PLAYLIST is set to NO, when you enter the FILE BROWSER from the WPS, you will find yourself in the directory you were in when you last left the FILE BROWSER.

Show Icons: Rockbox has the ability to display an icon to the left of the file in the FILE BROWSER. For details of these icons, please see section [A.1](#) (page 118).

Show Path: If this setting is set to FULL PATH the full path to the current directory will be displayed on the first line in the FILE BROWSER. If set to CURRENT DIRECTORY ONLY only the name of the current directory will be displayed.

7.4 Database

This sub menu allows you to configure the database. See section [4.2](#) (page 24) for more information about using the database.

7.5 Display

Browse fonts: Browse the fonts that reside in your `/.rockbox/fonts` directory. Selecting one will activate it. See section [9.1.2](#) (page 111) for further details about fonts.

Browse WPS files: Opens the FILE BROWSER in the `/.rockbox/wps` directory and displays all `.wps` files. Selecting one will activate it, stop will exit back to the menu. For further information about the WPS see section [4.3](#) (page 26). For information about editing a `.wps` file see section [9.2](#) (page 112).

LCD Settings: This sub menu contains settings that relate to the display of the player.

Backlight: The amount of time the backlight shines after a key press. If set to OFF, the backlight will not light when a button is pressed. If set to ON, the backlight will never shut off. If set to a time (1 to 90 seconds), the backlight will stay lit for that amount of time after a button press.

Backlight on When Plugged: This setting is equivalent to the Backlight setting except it applies when the player is plugged into the charger.

Caption Backlight: This option turns on the backlight a number of seconds before the start of a new track, and keeps it on for the same number of seconds after the beginning so that the display can be read to see song information. The amount of time is determined by the value of the backlight timeout setting, but is no less than 5 seconds.

Backlight fade in: The amount of time that the backlight will take to fade from off to on after a button is pressed. If set to OFF the backlight will turn on immediately, with no fade in. Can also be set to 500MS, 1S or 2S.

Backlight fade out: Like Backlight fade in, this controls the amount of time that the backlight will take to fade from on to off after a button is pressed. If set to OFF the backlight will turn off immediately, with no fade out. Other valid values: 500MS, 1s, 2s, 3s, 4s, 5s or 10s.

First Keypress Enables Backlight Only: With this option enabled the first keypress while the backlight is turned off will only turn the backlight on without having any other effect. When disabled the first keypress will *also* perform its appropriate action.

Line Selector: This option allows you to select whether the line selector is a bar of inverted text (BAR (INVERSE) option) or a small arrow to the left of the menu text (POINTER option).

Clear Backdrop: Rockbox allows you to select bitmap pictures to use as backdrops, see section 9.1.5 (page 112) for further information. This option allows you to clear the backdrops that you set.

Background Colour: Sets the background colour for the LCD display.

Foreground Colour: Sets the colour used for text and icons.

Reset Colours: Resets the LCD display to Rockbox's default colours.

Scrolling This feature controls how text will scroll in Rockbox. You can configure the following parameters:

Scroll Speed: Controls how many times per second the scrolling text moves a step.

Scroll Start Delay: Controls how many milliseconds Rockbox should wait before a new text begins scrolling.

Scroll Step Size: Controls how many pixels the text scroll should move for each step.

Bidirectional Scroll Limit: Rockbox has two different scroll methods: always scrolling the text to the left and when the line has ended beginning again at the start, or moving to the left until you can read the end of the line and scroll right until you see the beginning again. Rockbox chooses which method it should use depending of how much it has to scroll left. This setting lets you tell Rockbox where that limit is, expressed in percentage of line length.

Screen Scrolls Out of View: On lists with long entries that don't fit on the screen using the complete content will be scrolled right/left. With this option set to YES the lines can scroll out of view. Otherwise the entries will only scroll as far as they align to the margins.

Screen Scroll Step Size: Determines how many pixels the text should advance in every click when scrolling the screen.

Paged Scrolling: When enabled scrolling will page up/down instead of changing lines. This can be useful on slow displays.

Status/Scrollbar: Settings related to on screen status display and the scrollbar.

Scroll Bar: Enables or disables the scroll bar at the left.

Status Bar: Enables or disables the status bar at the upper side.

Volume Display: Controls whether the volume is displayed as a graphic or a numeric value on the Status Bar. If you select a numeric display, volume is displayed in decibels. [cross-reference to volume setting](#).

Battery Display: Controls whether the battery charge status is displayed as a graphic or numerical percentage value on the Status Bar.

Peak Meter: The peak meter can be configured with a number of parameters.

Peak Release: This determines how fast the bar shrinks when the music becomes softer. Lower values make the peak meter look smoother.

Peak Hold Time: Specifies the time after which the peak indicator will reset. For example, if you set this value to 5s, the peak indicator displays the loudest volume value that occurred within the last 5 seconds. Larger values are useful if you want to find the peak level of a song, which might be of interest when copying music from the player via the analogue output to some other recording device.

Clip Hold Time: The number of seconds that the clipping indicator will be visible after clipping is detected.

Scale: Select whether the peak meter displays linear or logarithmic values. The human ear perceives loudness on a logarithmic scale. If the Scale setting is set to LOGARITHMIC (dB) scale, the volume values are scaled logarithmically. The volume meters of digital audio devices usually are scaled this way. On the other hand, if you are interested in the power level that is applied to your headphones you should choose LINEAR display. This setting cannot be displayed in units like volts or watts because such units depend on your headphones.

Minimum and maximum range: These two options define the full value range that the peak meter displays. Recommended values for the LOGARITHMIC (dB) setting are -40 dB for minimum and 0 dB for maximum. Recommended values for LINEAR display are 0 and 100%. Note that -40 dB is approximately 1% in linear value, but if you change the minimum setting in linear mode

slightly and then change to the dB scale, there will be a large change. You can use these values for 'zooming' into the peak meter.

Default Codepage: A codepage describes the way extended characters that aren't available within the ASCII character set are encoded. ID3v1 tags don't have a codepage encoding contained so Rockbox needs to know what encoding has been used when generating these tags. This should be "ISO-8859-1" but to support languages outside Western Europe most applications use the setting of your operating system instead. If your operating system uses a different codepage and you're getting garbled extended characters you should adjust this settings. In most cases sticking to "ISO-8859-1" would be sufficient.

7.6 System

7.6.1 Start Screen

Set the screen that Rockbox will start in. Selecting RESUME PLAYBACK will resume playback where it was when the player was shut off if there is a playlist to resume and will then end up in the WPS. Selecting PREVIOUS SCREEN will make Rockbox start in the screen it was when the player was shut off.

7.6.2 Battery

Options relating to the battery in the player.

Battery Capacity: This setting can be used to tell Rockbox what capacity (in mAh) of battery is being used inside it. The default is **unknown**, which is the capacity value for the standard batteries shipped with the player. Rockbox uses this value to estimate remaining battery life for the statusbar and WPS. Changing this setting has no effect what-so-ever on actual battery life. This setting only affects the accuracy of the battery life estimation as shown on screen.

This value is fairly meaningless in the Ipod family at present, and work is ongoing into finding a better way to determine battery life.

7.6.3 Disk

Options relating to the hard disk.

Disk Spindown: Rockbox has a timer that makes it spin down the hard disk after it is idle for a certain amount of time. This setting controls the amount of time between the last user activity and the time that the disk spins down. This idle time is only affected by user activity, like navigating through the FILE BROWSER. When the hard disk spins up to fill the audio buffer, it automatically spins down afterwards.

Directory Cache: Rockbox has the ability to cache the contents of your drive in RAM. The DIRECTORY CACHE takes a small amount of memory away from Rockbox that would otherwise be used to buffer music, but it speeds up navigation in the FILE BROWSER by eliminating the slight pause between the time a navigation button is pressed and the time Rockbox responds. Turning this setting ON activates the directory cache, and turning it OFF deactivates the directory cache.

Note: The first time you set the directory cache to ON, Rockbox will request a reboot of the player and upon restarting take a few minutes to scan the drive. Thereafter, the directory cache will work in the background.



7.6.4 Time and Date

Time related menu options.

Set Time/Date: Set current time and date.

Time Format: Choose 12 or 24 Hour clock.

7.6.5 Idle Poweroff

Rockbox can be configured to turn off power after the unit has been idle for a defined number of minutes. The player is idle when playback is stopped or paused. It is not idle while the USB or charger is connected, or while recording. Settings are either OFF or 1 to 10 minutes in 1 minute steps. Then 15,30,45 and 60 minutes are available.

7.6.6 Wake Up alarm

This option turns the player off and then starts it up again at the specified time. This is most useful when combined with START SCREEN set to RESUME PLAYBACK, so that the player wakes up and immediately starts playing music. Use **Scroll Fwd** and **Scroll Back** to adjust the minutes setting, **Prev** and **Next** to adjust the HOURS. **Play** confirms the alarm and shuts your player down, and **Menu** cancels setting an alarm. If the player is turned on again before the alarm occurs, the alarm will be cancelled. Using this option disables the SLEEP TIMER.

7.6.7 Limits

This sub menu relates to limits in the Rockbox operating system.

Max files in dir browser: This setting controls the limit on the number of files that you can put in any particular directory in the FILE BROWSER. You can configure the size to be between 50 and 10,000 files in steps of 50. The default is 400. Higher values will shorten the music buffer, so you should increase this setting *only* if you have directories with a large number of files.

Max playlist size: This setting controls the maximum size of a playlist. The playlist size can be between 1,000 and 20,000 files, in steps of 1,000 (default is 10,000). Higher values will shorten the music buffer, so you should increase this setting *only* if you have very large playlists.

7.6.8 Car Adapter Mode

This option turns ON and OFF the car ignition auto stop function.

Car Adapter Mode: When using the player in a car, CAR ADAPTER MODE automatically stops playback on the player when power (i.e. from cigarette lighter power adapter) to the external DC in jack is turned off. If the CAR ADAPTER MODE is set to ON, Rockbox will pause playback when the external power off condition is detected. Rockbox will then shutdown the player after the length of time set in the IDLE POWEROFF setting (see above). If power to the DC in jack is turned back on before the *Idle Poweroff* function has shut the player off, playback will be resumed 5 seconds after the power is applied. This delay is to allow for the time while the car engine is being started.

Once the player is shut off either manually, or automatically with the IDLE POWEROFF function, it must be powered up manually to resume playback.

7.7 Bookmarking

Bookmarks allow you to save your current position within a track so that you can return to it at a later time. Bookmarks are saved on a per folder basis. In other words, all of the files in the same folder have their bookmarks stored together in the folder where the files are located. You can store multiple bookmarks for the same track.

Bookmark on Stop. This option controls whether Rockbox writes a bookmark to the disk when playback is stopped. Setting this to NO turns automatic bookmarking completely off. In contrast YES turns automatic bookmarking on while ASK asks on stopping the track if a bookmark should be created. With the above options YES and ASK if there is an existing `.bmark` file the current position information will be added to the front of the existing list, up to the maximum number of allowed bookmarks per file (currently 10). If no `.bmark` file exists, one will be created with the new bookmark information. Finally, if the MAINTAIN A LIST OF RECENTLY USED BOOKMARKS option is enabled, the bookmarking information will be added to recent bookmarks list.

Yes – Recent Only. Turns on automatic bookmarking – One bookmark only

Ask – Recent Only. Asks if a bookmark should be created when stopping track
– One bookmark only

With the two RECENT ONLY options, nothing is written to the `.bmark` file. If the MAINTAIN A LIST OF RECENTLY USED BOOKMARKS option is enabled, the bookmarking information will however be added to recent bookmarks list.

Note: The RESUME function remembers your position in the most recently accessed track regardless of how the BOOKMARK ON STOP option is set.



Load Last Bookmark. When the LOAD LAST BOOKMARK option is set to YES, Rockbox automatically returns to the position of the last bookmark within a file when that file is played.

When the LOAD LAST BOOKMARK option is set to ASK, Rockbox will give the user the option of starting from the beginning of the track or from the bookmark.

When the LOAD LAST BOOKMARK option is set to NO, playback always starts from the beginning of the track, and the user must play the bookmark or use the LOAD BOOKMARK function in the Main Menu, while the file is playing, to resume at the bookmarked location.

Maintain a list of Recently Used Bookmarks. This list of Most Recent Bookmarks (MRB's) may be accessed through the RECENT BOOKMARKS option of the BOOKMARKS sub menu of the Main Menu. When set to YES each new bookmark will be added to the MRB list. Setting this to NO disables the addition of bookmarks to the MRB list. UNIQUE ONLY will remove an old bookmark for the current track from the MRB list and replace it with the new one if a bookmark in the MRB list already existed. Otherwise this will behave like the YES setting. **The above information was obtained by reading the source code, but my C is rather rusty...**

7.8 Language

This setting controls the language of the Rockbox user interface. Selecting a language will activate it. The language files must be in the `/.rockbox/langs/` directory. See section 9.1.3 (page 111) for further details about languages.

7.9 Voice

Voice Menus. This option controls the voicing of menus/settings as they are selected by the cursor. In order for this to work, a voice file must be present in the `/.rockbox/langs/` directory on the player. Voice files are large and are not shipped with Rockbox by default. The voice file is the name of the language for which it is made, followed by the extension `.voice`. So for English, the file name would be `english.voice`. This option is on by default, but will do nothing unless the appropriate voice file is installed in the correct place on the player. The Voice Menus have several limitations:

- Setting the Sound Option CHANNELS to KARAOKE may disable voice menus.

- Plugins and the wake up alarm do not support voice features.

Voice Directories. This option controls voicing of directory names. A voice file must be present for this to work. Several options are available.

Spell. Speak the directory name by spelling it out letter by letter. Support is provided only for the most common letters, numbers and punctuation.

Numbers. Each directory is assigned a number based upon its position in the file list. They are then announced as “Directory 1”, “Directory 2” etc.

Off. No attempt will be made to speak directory names.

You can use pre-generated .talk clips to have directory names spoken properly, but you must enable this explicitly (see below).

Use Directory .talk Clips. This option turns on the use of .talk clips for directories.

On. Use special pre-recorded MP3 files (`_dirname.talk`) in each directory. These must be generated in advance, and are typically produced synthetically using a text-to-speech engine on a PC.

Off. No checking is made for directory .talk clips; they are not used even if present. This can reduce disk activity.

Use of a .talk clip takes precedence over other directory name voicing. Otherwise (e.g. if a .talk clip is not available), voicing uses the method set under VOICE DIRECTORIES above.

Voice Filenames. This option controls voicing of filenames. Again, a voice file must be present for this to work. The options provided are SPELL, NUMBERS, and OFF which function the same as for VOICE DIRECTORIES. You can use pre-generated .talk clips to have filenames spoken properly, but you must enable this explicitly (see below).

Use File .talk Clips. This option turns on the use of .talk clips for files.

On. Use special pre-recorded MP3 files for each file. This functions the same as for directories except that the .talk clip file must have the same name as the described file with an extra .talk extension (e.g. `Punkadiddle.mp3` would require a file called `Punkadiddle.mp3.talk`).

Off. No checking is made for file .talk clips; they are not used even if present. This can reduce disk activity.

Use of a .talk clip takes precedence over other filename voicing. Otherwise (e.g. if a .talk clip is not available), voicing uses the method set under VOICE FILENAMES above.

See <http://www.rockbox.org/wiki/bin/view/Main/VoiceHowto> for more details on configuring speech support in Rockbox.

8 Plugins

Plugins are little programs that Rockbox can load and run. Only one plugin can be loaded at a time. Plugins have exclusive control over the user interface. This means you cannot switch back and forth between a plugin and Rockbox, a plugin is loaded, run and then exited, which returns control to Rockbox. Most plugins will not interfere with music playback but some of them will stop playback while running. Plugins have the file extension `.rock`. Most of them can be started from BROWSE PLUGINS in the MAIN MENU.

Viewer plugins get started automatically by opening an associated file (i.e. text files, chip8 games), or from the OPEN WITH option on the FILE MENU.

8.1 Games

See also the Chip-8 emulator in section [8.3.1](#) (page [95](#)) and Rockboy in section [8.3.4](#) (page [98](#)).

8.1.1 Blackjack



Figure 8.1: Blackjack

Blackjack, a game played in casinos around the world, is now available in the palm of your hand! The rules are simple: try to get as close to 21 without going over or simply

beat out the dealer for the best hand. Although this may not seem difficult, blackjack is a game renowned for the strategy involved. This version includes the ability to split, buy insurance, and double down.

For the full set of rules to the game, and other facinating information visit <http://www.blackjackinfo.com/blackjack-rules.php>

Key	Action
In menu	
Select	Start new game
Play	Resume saved game
Next	Show high scores
Menu	Quit
In game	
Prev/Next/	Enter betting amount
Scroll Fwd/Scroll Back	Hit (Draw new card)
Select	Stay (End hand)
Next	Double down
Prev	Save game
Play	Return to menu or cancel
Menu	

8.1.2 BrickMania

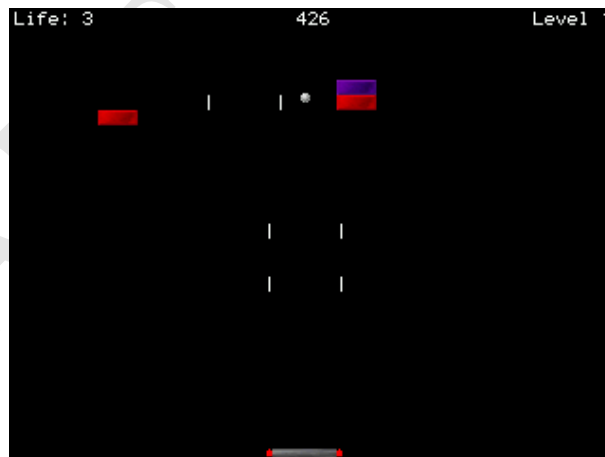


Figure 8.2: BrickMania

BrickMania is a clone of the classic game Breakout. The aim of the game is to destroy all the bricks by hitting them with the ball once or more. Sometimes a special falls down

when you destroy a brick. For a special to take effect, you must catch it with the paddle. Look out for the bad ones.

Specials

Displayed	Name	Description
N	Normal	Returns paddle to normal.
D	Die	Ball dies; lose a life.
L	Life	Gain a life.
F	Fire	Allows you to shoot bricks with paddle.
G	Glue	Ball sticks to paddle each time it hits.
B	Ball	Immediately fires another ball.
FL	Flip	Flip left / right movement.

Key	Action
Prev / Next	Moves the paddle
Select	Release the ball / Fire
Menu	Open menu / Quit

8.1.3 Bubbles



Figure 8.3: Bubbles

The goal of the game is to beat each level as quickly as possible by clearing the board of all bubbles. Bubbles are removed from the board when a cluster of three or more of the same type is formed. The game is over when any bubbles on the board extend below the bottom line. To make things more difficult, the entire board is shifted down every time a certain number of shots have been fired. Points are awarded depending on how quickly the level was completed.

Key	Action
In menu	
Play	Start new game
Prev+Next	Resume saved game
Select	Show high scores
Scroll Fwd/Scroll Back	Select starting level
Menu	Quit
In game	
Play	Pause game
Scroll Fwd/Scroll Back	Aim the bubble
Select	Fire bubble
Prev+Next	Save game
Menu	Exit to menu

8.1.4 Chessbox

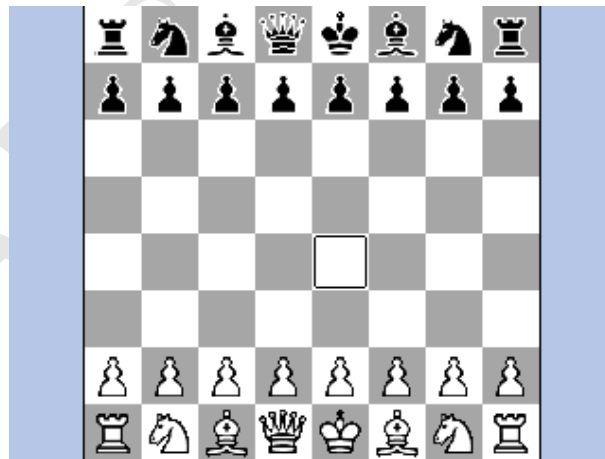


Figure 8.4: Chessbox

Chessbox is a chess game with computer AI. The chess engine is a port of GNU Chess 2 by John Stanback.

It also works as a PGN file viewer. Instead of executing the game from the plugin menu, look for any file with `.pgn` extension in the file browser and execute it. Chessbox will show the list of matches included in the file and allow you to select the one you want to watch. After that, you can scroll back and forth through the moves of the game. If the menu is invoked while in the viewer, the user is allowed to select a new match from the same file or quit the game.

When you quit the game the current state will be saved and restored when you resume the game. The menu also allows the user to reload the last game saved, save the current position and start a new game without having to quit the game.

Keys

Key	Action
Menu, Play, Prev, Next	Move the cursor
Select	Select / Move piece
Select+Next	Change level
Select+Play	Force play
Select+Prev	Restart Game
Select+Menu	Show the menu

8.1.5 Doom



Figure 8.5: Doom

This is the famous Doom game.

Getting started

For the game to run you need .wad game files located in / .rockbox/doom/ on your player. Create the directory and save the following files there:

rockdoom.wad. The Rockbox .wad, based on prboom.wad from prboom-2.2.6

Your wad files. Copy all Doom wads you wish to play into that directory.

The needed files can be found at <http://www.rockbox.org/twiki/bin/view/Main/PluginDoom>

To play addon wads create the addons directory within the doom folder. Place wad files in this directory. Currently doom only supports a maximum number of 10 addons in the directory.

A free alternative for Doom 2 is FreeDoom (<http://freedoom.sourceforge.net>). This can be used in place of doom2.wad, or it may be used as an addon in Doom, by placing it in the addons directory.

Menus

Rockdoom Menu. The Rockdoom menu is shown when Doom is first launched. This is the only time it can be accessed (before starting the game). To re-adjust Rockdoom options, you will need to quit your current game and restart the plugin.

Main Menu. The Doom plugin has a main menu, which is brought up before a game is started. It has the following entries:

Game. Select which (official) wad to launch

Addon. Select which unofficial addon wad to launch (From / .rockbox/doom/addons directory)

Demos. Select which demo file to play on game start

Options. Configure low-level Doom options

Play Game. Launch the wad/addon/Demo chosen

Options Menu. This menu has the following options:

Sound. Enable or Disable sound in Doom

Set Keys. Change the game key configuration

Time Demo. Run a timed demo, to test game speed on a player (Only runs on Doom Shareware)

Player Bobbing. Enable or Disable player up/Down movement

Translucency. Enable or Disable sprite translucency (Fireballs, Plasma...)

Fake Contrast. Enable or Disable modified game lighting

Always Run. Make the player always run

Headsup Display. Show the player status when in fullscreen

Statusbar Always Red. Disable color response statusbar

InGame Main Menu. This menu can only be accessed from within a running game, and is displayed by flipping your hold switch a couple of times

New Game. Start a new game

Options. In game options

Load Game. Load a saved game

Save Game. Save the current game

Quit. Quit the game

InGame Options Menu. This menu has the folloing options:

End Game. Ends the current game

Messages. Enable or Disable in game messages

Screen Size. Shrink or Enlarge the displayed portion of the game

Gamma. Change the brightness (Gamma) of the game

Sound Volume. Change the sound, music and system volume

Note: In game music is not currently supported



Keys

Key	Action
Menu	Move Forward
Prev	Turn Left
Next	Turn Right
Play	Shoot
Menu	Open
Hold switch	Escape
Select	Enter
Select	Change Weapon

Playing the game

After installation of the wad files is complete you can start the game. **more description is needed**

8.1.6 Flipit

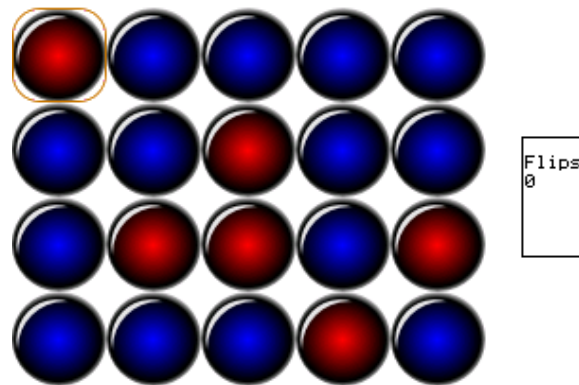


Figure 8.6: Flipit

Flipping the colour of the token under the cursor also flips the tokens above, below, left and right of the cursor. The aim is to end up with a screen containing tokens of only one colour.

Key	Action
Menu/Play/Prev/Next	Move the cursor
Select	Flip
Select+Prev	Shuffle
Select+Play	Solve
Select+Next	Solve step by step
Select+Menu	Quit the game

8.1.7 Jewels



Figure 8.7: Jewels

Jewels is a simple yet addicting game which involves swapping pairs of jewels in order to form connected segments of three or more of the same type.

The goal of the game is to score as many points as possible before running out of available moves. Higher points are awarded to larger combos. The game advances to the next level after every one hundred points and randomly clears several jewels.

Key	Action
Prev, Next, Menu and Play	Move the cursor around the jewels
Select	Select a jewel
Hold Select	Show the in-game menu

To exit the game, bring up the in-game menu and select QUIT

8.1.8 Minesweeper



Figure 8.8: Minesweeper plugin

The classic game of minesweeper. Use **Scroll Fwd/Scroll Back** to select the required percentage of mines to set the difficulty then press the **Select** key to begin.

The aim of the game is to uncover all of the squares on the board. If a mine is uncovered then the game is over. If a mine is not uncovered, then the number of mines adjacent to the current square is revealed. The aim is to use the information you are given to work out where the mines are and avoid them. When the player is certain that they know the location of a mine, it can be tagged to avoid accidentally “stepping” on it.

Key	Action
Menu/Play/Prev/Next	Move the cursor across the minefield
Scroll Fwd/Scroll Back	Scroll through the entire minefield
Select	Toggle flag on / off
Hold Select	Reveal the contents of the current square
Select+Play	Display the current game status
Select+Menu	Exit the game

8.1.9 Pacbox

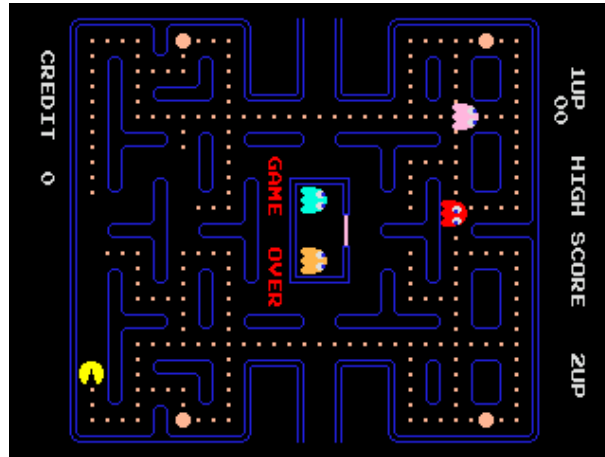


Figure 8.9: Pacbox

Pacbox is an emulator of the Pacman arcade machine hardware. It is a port of *PIE – Pacman Instructional Emulator* (<http://www.ascotti.org/programming/pie/pie.htm>).

ROMs

To use the emulator to play Pacman, you need a copy of ROMs for “Midway Pacman”.

Filename	MD5 checksum
pacman.5e	2791455babaf26e0b396c78d2b45f8f6
pacman.5f	9240f35d1d2beee0ff17195653b5e405
pacman.6e	290aa5eae9e2f63587b5dd5a7da932da
pacman.6f	19a886fcd8b5e88b0ed1b97f9d8659c0
pacman.6h	d7cce8bffd9563b133ec17ebbb6373d4
pacman.6j	33c0e197be4c787142af6c3be0d8f6b0

These need to be stored in the `/.rockbox/pacman/` directory on your player. In the MAME ROMs collection the necessary files can be found in `pacman.zip` and `puckman.zip`. The MAME project itself can be found at <http://www.mame.net>.

Keys

Key	Action
Next	Move Up
Prev	Move Down
Menu	Move Left
Play	Move Right
Select	Insert Coin
Select	1-Player Start
n/a	2-Player Start
Select+Menu	Menu

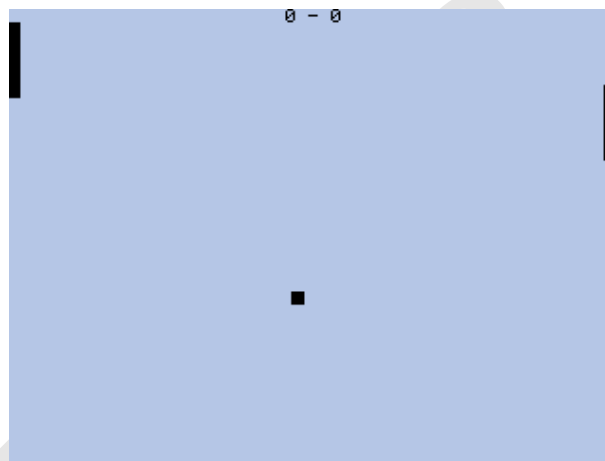
8.1.10 Pong

Figure 8.10: Pong

Pong is a simple two player “tennis game”. Whenever a player misses the ball the other scores.

Key	Action
Menu	Left player up
Prev	Left player down
Next	Right player up
Play	Right player down
Select	Quit

8.1.11 Rockblox

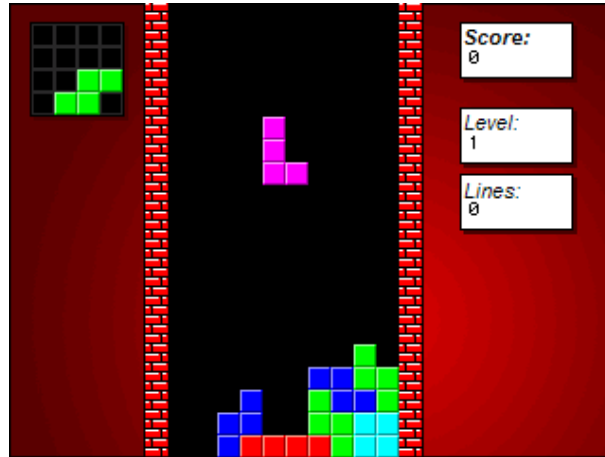


Figure 8.11: Rockblox

Rockblox is a rockbox version of the classic falling blocks game. The aim of the game is to make the falling blocks of different shapes form full rows. Whenever a row is complete it will be cleared and the game score will increase. For every ten lines completed the game level increases, making the blocks fall faster. If the pile of blocks reach the ceiling the game is over.

Key	Action
Select+Play	Restart game
Prev	Move left
Next	Move right
Play	Move down
Scroll Fwd	Rotate left
Scroll Back/Menu	Rotate right
Select	Drop
Menu+Select	Quit

8.1.12 Sliding Puzzle



Figure 8.12: Sliding puzzle

The classic sliding puzzle game. Rearrange the pieces so that you can see the whole picture, or switch to number tiles if you like it a little easier

Key controls:

Key	Action
Prev/Next/Menu/Play	Move Tile
Select+Prev	Shuffle
Select+Next	Change between picture and numbered tiles
Select+Menu	Stop the game

8.1.13 Snake




Figure 8.13: Snake

This is the popular snake game. The aim is to grow your snake as large as possible by eating the dots that appear on the screen. The game will end when the snake touches either the borders of the screen or itself.

Key	Action
Menu/Play	Change levels (1 is slowest, 9 is fastest)
Select	Toggle Play/Pause

8.1.14 Snake 2

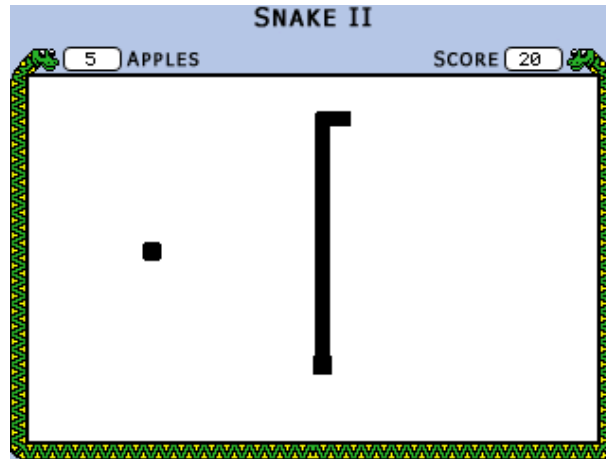


Figure 8.14: Snake 2 – The Snake Strikes Back

Another version of the Snake game. Move the snake around, and eat the apples that pop up on the screen. Each time an apple is eaten, the snake gets longer. The game ends when the snake hits a wall, or runs into itself.

Key	Action
In menu	
Scroll Fwd/Scroll Back	Set game speed
Next/Prev	Select starting maze
Play	Select game type (A or B)
Select	Start the game
In game	
Menu/Play/Prev/Next	Steer the snake
Select	Pause and resume the game
Select+Menu	Quit

In game A, the maze stays the same, in game B after an increasing number of apples eaten the maze is replaced by a new one.

8.1.15 Sokoban

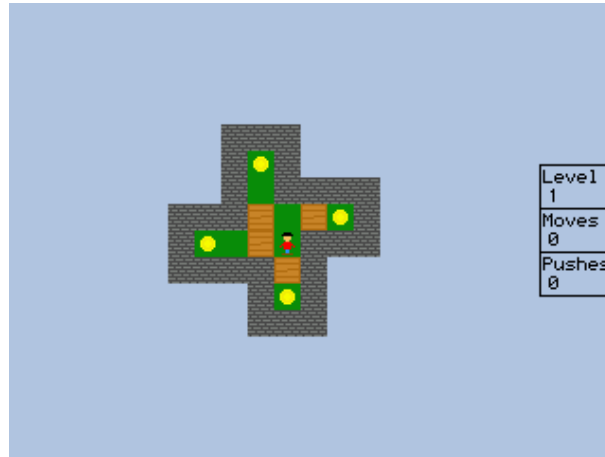


Figure 8.15: Sokoban

The object of the game is to push boxes into their correct position in a crowded warehouse with a minimal number of pushes and moves. The boxes can only be pushed, never pulled, and only one can be pushed at a time.

Sokoban may be used as a viewer for viewing saved solutions and playing external level sets with the `.sok` extension. Level sets should be in the standard Sokoban text format or RLE (Run Length Encoded). For more information about the level format, see http://sokobano.de/wiki/index.php?title=Level_format

Key	Action
In game	
Menu, Play, Prev, Next	Move the “sokoban” up, down, left, or right
Select+Menu	Menu
Select	Undo last movement
Select+Play	Redo previously undone move
Select+Prev	Back to previous level
n/a	Restart level
Select+Next	Go to next level
Solution playback	
Select	Pause/resume
Menu/Play	Increase/decrease playback speed
Prev/Next	Go backward/forward (while paused)
Select+Menu	Quit

Some places where you can find level sets:

- <http://www.sourcecode.se/sokoban/levels.php>
- <http://sokobano.de/en/levels.php>

Note that some level sets may contain levels that are too large for this version of Sokoban and are unplayable as a result.

8.1.16 Solitaire

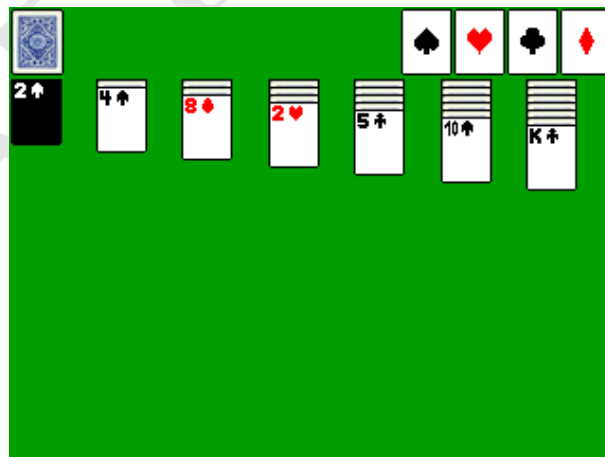


Figure 8.16: Klondike solitaire

This is the classic Klondike solitaire game for Rockbox. This is probably the best-known solitaire in the world. Many people don't even realize that other games exist. Though the name may not be familiar, the game itself certainly is. This is due in no small part to Microsoft's inclusion of the the game in every version of Windows. Though popular, the odds of winning are rather low, perhaps one in thirty hands.

For the full set of rules to the game, and other facinating information visit <http://www.solitairecentral.com/rules/klondike.html>

Key	Action
Prev/Next/ Scroll Fwd/Scroll Back Select	Move Cursor around. Select cards, move cards, reveal hidden cards...
Menu	If a card was selected – unselect it, else Draw 3 new cards from the remains stack
Play	Put the card from the top of the remains stack on top of the cursor
Hold Menu	Put the card under the cursor on one of the 4 final colour stacks.
Hold Next	Put the card on top of the remains stack on one of the final colour stacks.
Menu+Select	Show menu

8.1.17 Spacerocks

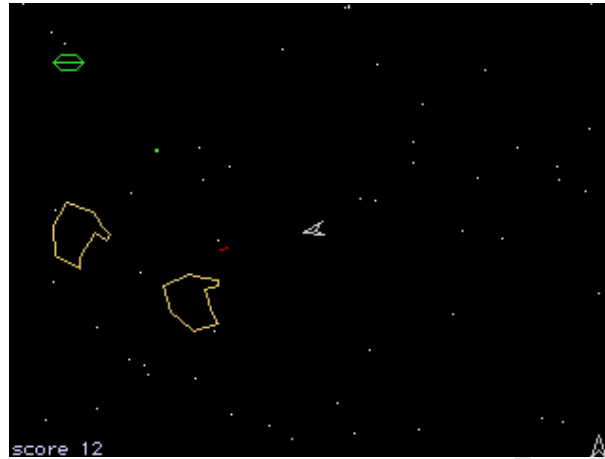


Figure 8.17: Spacerocks

Spacerocks is a clone of the old arcade game Asteroids. The goal of the game is to blow up the asteroids and avoid being hit by them. Once in a while, a UFO will appear – shoot this for extra points.

Key	Action
Select	Shoot
Menu	Thrust
Scroll Back/ Scroll Fwd	Turn left/right
Play	Teleport
Select+Play	Pause game
Select+Menu	Quit

8.1.18 Star

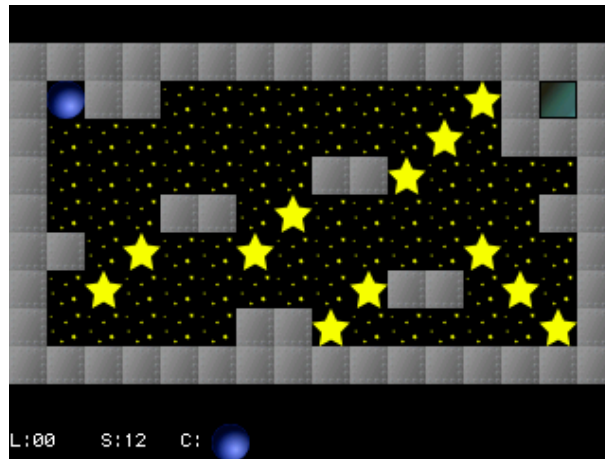


Figure 8.18: Star game

This is a puzzle game. It is actually a rewrite of Star, a game written by CDK designed for the hp48 calculator.

Rules: Take all of the “o”s to go to the next level. You can switch control between the filled circle, which can take “o”s, and the filled square, which is used as a mobile wall to allow your filled circle to get to places on the screen it could not otherwise reach. The block cannot take “o”s.

Key	Action
Prev	Move Left
Next	Move Right
Menu	Move Up
Play	Move Down
Select	Switch between circle and square
Select+Prev	Previous level
Select+Play	Reset level
Select+Next	Next level
Select+Menu	Exit the game

8.1.19 Sudoku

1		1		3	5	7			4
2					6		1	7	2
					8		5	6	3
4		6		7				2	9
				5		3			
6	7	9		8				3	5
		8	5		3				
	1		2		7	5			
				4		8		5	

Figure 8.19: Sudoku

Sudoku in Rockbox is implemented as both a plugin and a viewer. When you start Sudoku in plugin mode from the BROWSE PLUGINS menu, a random game will be generated automatically, and an estimate of its difficulty (very easy, easy, medium, hard or fiendish) will be displayed on the screen. New games can be generated from the GENERATE menu option.

When you use Sudoku as a viewer for playing pre-generated Sudoku games. You need sudoku games stored (one game per file) in text files with the `.ss` extension (see links below). You then browse these games using the normal FILE BROWSER, and open the file to launch Sudoku.

You can create and save your own grids under the NEW menu option. Enter the menu (as described in the key table below) when you have finished and enter the full path to save to including the `.ss` extension (e.g. `/sudoku/new.ss`).

The thing on the left (AKA the scratchpad)

When you play Sudoku on paper most people like to mark numbers in cells that are possible candidates for the cells. This can be done with the column on the left. Change the number under the cursor to a number which might be valid and press the scratch-pad button, the number will then be added on the left. The column is stored separately for every cell on the board. These are *NOT* saved when saving the game.

Key	Action
Scroll Fwd/Scroll Back	Move the cursor
Prev/Select/Next	Change number under the cursor
Hold Prev/Select/Next	Constantly changing the number under the cursor
Menu	Open Menu
Play	Add/Remove number to scratch-pad
Menu → Quit	Quit

Some places where you can find .ss files:

- Simple Sudoku (Advanced Puzzle Packs 1 and 2 located near the bottom of that page): <http://www.angusj.com/sudoku/>
- Kjell's Sudoku generator/solver: <http://kjell.haxx.se/sudoku/>

8.1.20 Wormlet

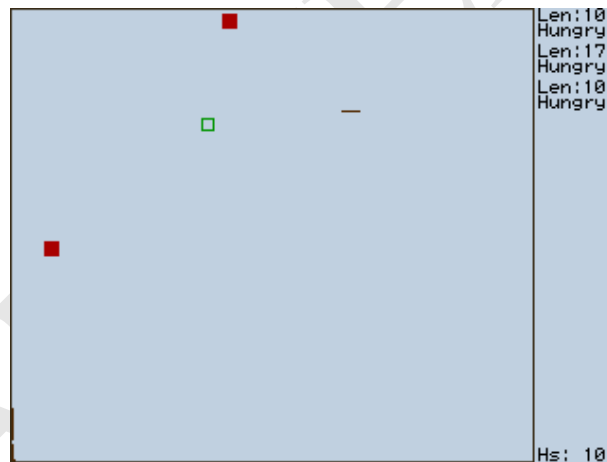


Figure 8.20: Wormlet game

Wormlet is a multi-worm game on a multi-threaded multi-functional Rockbox console. You navigate a hungry little worm. Help your worm to find food and to avoid poisoned argh-tiles. The goal is to turn your tiny worm into a big worm for as long as possible.

Menu controls:

Key	Action
Prev / Next	Controls number of worms in the game

Game controls:

Key	Action
Prev	Turn left
Next	Turn right
Menu	Turn Up
Play	Turn Down

The game

Use the control keys of your worm to navigate around obstacles and find food. Worms do not stop moving except when dead. Dead worms are no fun. Be careful as your worm will try to eat anything that you steer it across. It won't distinguish whether it's edible or not.

Food. The small square hollow pieces are food. Move the worm over a food tile to eat it. After eating the worm grows. Each time a piece of food has been eaten a new piece of food will pop up somewhere. Unfortunately for each new piece of food that appears two new "argh" pieces will appear, too.

Argh. An "argh" is a black square poisoned piece - slightly bigger than food - that makes a worm say "Argh!" when run into. A worm that eats an "argh" is dead. Thus eating an "argh" must be avoided under any circumstances. "Arghs" have the annoying tendency to accumulate.

Worms. Thou shall not eat worms. Neither other worms nor thyself. Eating worms is blasphemous cannibalism, not healthy and causes instant death. And it doesn't help anyway: the other worm isn't hurt by the bite. It will go on creeping happily and eat all the food you left on the table.

Walls. Don't crash into the walls. Walls are not edible. Crashing a worm against a wall causes it a headache it doesn't survive.

Game over. The game is over when all worms are dead. The longest worm wins the game.

Pause the game. Press **Select** to pause the game. Press **Select** again to resume the game.

Stop the game. There are two ways to stop a running game.

- If you want to quit Wormlet entirely simply hit **Menu+Select** . The game will stop immediately and you will return to the game menu.
- If you want to stop the game and still see the screen hit **Select+ButtonPlay** . This freezes the game. If you hit **Select+Play** button again a new game starts with the same configuration. To return to the games menu you can hit **Menu+Select** . A stopped game can not be resumed.

The scoreboard

On the right side of the game field is the score board. For each worm it displays its status and its length. The top most entry displays the state of worm 1, the second worm 2 and the third worm 3. When a worm dies it's entry on the score board turns black.

Len: Here the current length of the worm is displayed. When a worm is eating food it grows by one pixel for each step it moves.

Hungry: That's the normal state of a worm. Worms are always hungry and want to eat. It's good to have a hungry worm since it means that your worm is alive. But it's better to get your worm growing.

Growing: When a worm has eaten a piece of food it starts growing. For each step it moves over food it can grow by one pixel. One piece of food lasts for 7 steps. After your worm has moved 7 steps the food is used up. If another piece of food is eaten while growing it will increase the size of the worm for another 7 steps.

Crashed: This indicates that a worm has crashed against a wall.

Argh: If the score board entry displays "Argh!" it means the worm is dead because it tried to eat an "argh". Until we can make the worm say "Argh!" it's your job to say "Argh!" aloud.

Wormed: The worm tried to eat another worm or even itself. That's why it's dead now. Making traps for other players with a worm is a good way to get them out of the game.

Hints

- Initially you will be busy with controlling your worm. Try to avoid other worms and crawl far away from them. Wait until they curl up themselves and collect the food afterwards. Don't worry if the other worms grow longer than yours - you can catch up after they've died.
- When you are more experienced watch the tactics of other worms. Those worms controlled by artificial stupidity head straight for the nearest piece of food. Let the other worm have its next piece of food and head for the food it would probably

want next. Try to put yourself between the opponent and that food. From now on you can 'control' the other worm by blocking it. You could trap it by making a 1 pixel wide U-turn. You also could move from food to food and make sure you keep between your opponent and the food. So you can always reach it before your opponent.

8.1.21 Xbox

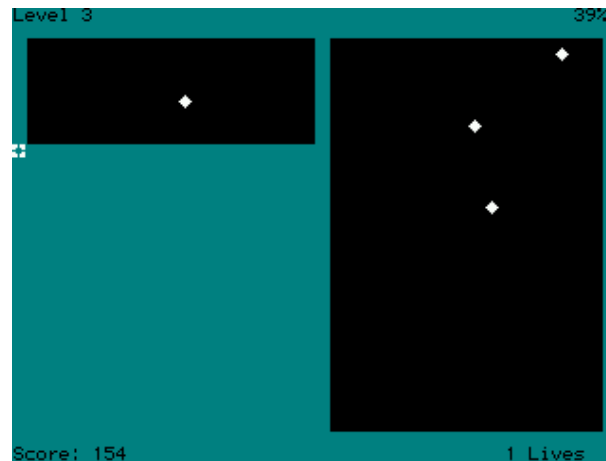


Figure 8.21: Xbox

Xobox is a simple clone of the well known arcade game Qix. The aim of the game is to section off parts of the arena with your trail in order to remove that section from the game. Be careful not to get in the way of enemy balls because, if they hit you or your trail, you lose a life. To finish a level you have to section off more than 75%.

Key	Action
Menu, Play, Prev, Next	Move around the arena
Select	Pause
Select+Menu	Open menu

8.2 Demos

8.2.1 Bounce

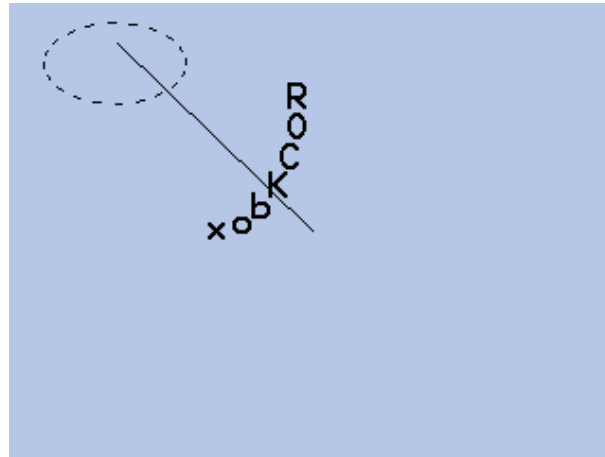


Figure 8.22: Bounce

This demo is of the word “Rockbox” bouncing across the screen. There is also an analogue clock in the background. In SCROLL MODE the bouncing text is replaced by a different one scrolling from right to left.

Key	Action
Scroll Back / Scroll Fwd	Moves to next/previous option
Prev / Next	Increases/decreases option value
Select	Toggles Scroll mode
Menu	Exits bounce demo

Available options are:

Xdist/Ydist. The distance to X axis and Y axis respectively

Xadd/Yadd. How fast the code moves on the sine curve on each axis

Xsane/Ysane. Changes the appearance of the bouncing.

8.2.2 Credits

The credits plugin scrolls the entire list of the names of all the Rockbox contributors after displaying the Rockbox logo and version. This plugin is called when selecting ROCKBOX INFO from the INFO section of the Rockbox main menu.

8.2.3 Cube

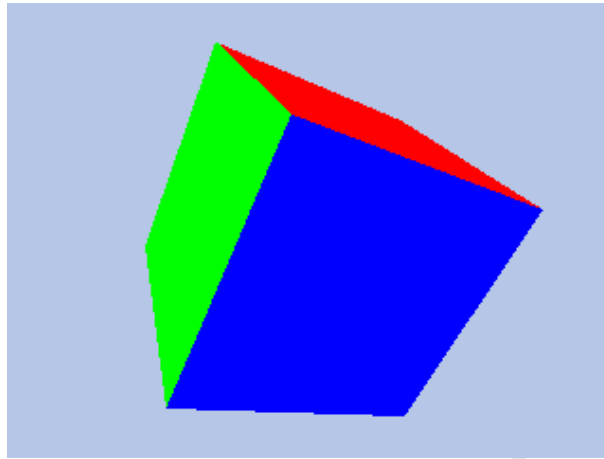


Figure 8.23: Cube

This is a rotating cube screen saver in 3D.

Key	Action
Select+Play	Display at maximum frame rate
Play	Pause
Select+Menu	Cycle draw mode
Next/Prev	Increase / decrease x axis
Scroll Fwd/Scroll Back	Increase / decrease y axis
Select+ Next/Prev	Increase / decrease z axis
Menu	Quit

8.2.4 Demystify

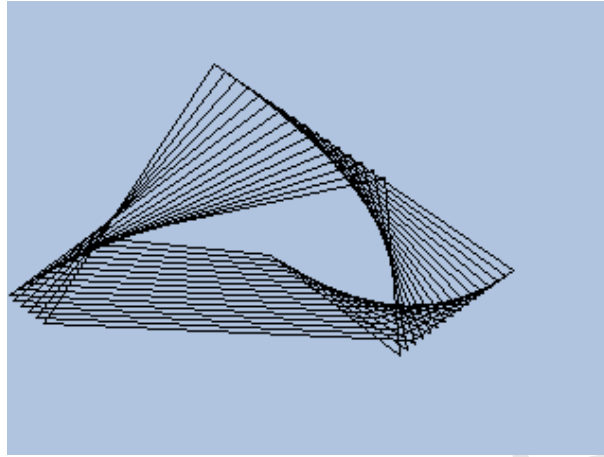


Figure 8.24: Demystify

Demystify is a screen saver like demo.

Key	Action
Next / Prev	Increase / decrease speed
Scroll Fwd / Scroll Back	Add / remove polygon
Menu	Quit

8.2.5 Fire

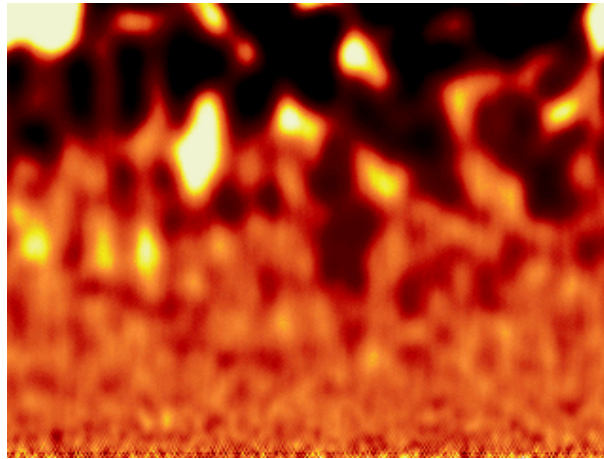


Figure 8.25: Fire

Fire is a demo displaying a fire effect.

Key	Action
Scroll Fwd / Scroll Back	Increase / decrease number of flames
Select	Toggle flame type
Next	Toggle moving flames
Menu	Quit

8.2.6 Logo

Demo showing the Rockbox logo bouncing around the screen.

Key	Action
Next / Prev	Increase / decrease speed on the x-axis
Scroll Fwd / Scroll Back	Increase / decrease speed on the y-axis
Menu	Quit

8.2.7 Mandelbrot

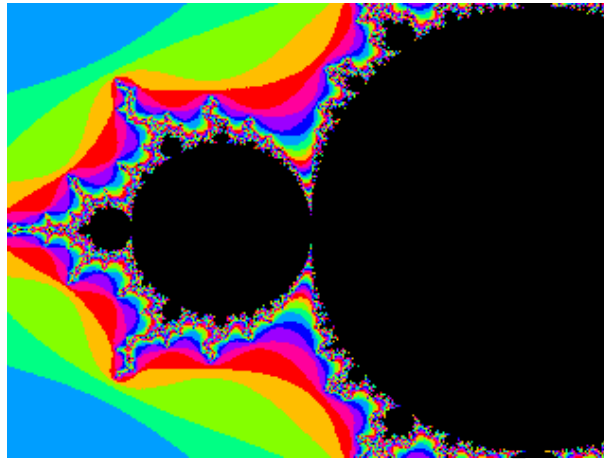


Figure 8.26: Mandelbrot

This demonstration draws fractal images from the Mandelbrot set .

Key	Action
Direction keys	Move about the image
Scroll Fwd	Zoom in
Scroll Back	Zoom out
Select+Prev	Decrease iteration depth (less detail)
Select+Next	Increase iteration depth (more detail)
Select+Play	Reset and return to the default image
Select+Menu	Quit

8.2.8 Mosaïque

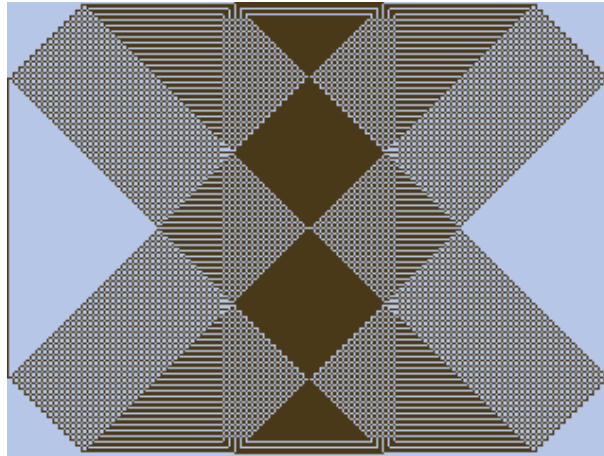


Figure 8.27: Mosaïque

This simple graphics demo draws a mosaic picture on the screen of the player. Press **Menu** to quit.

8.2.9 Oscilloscope

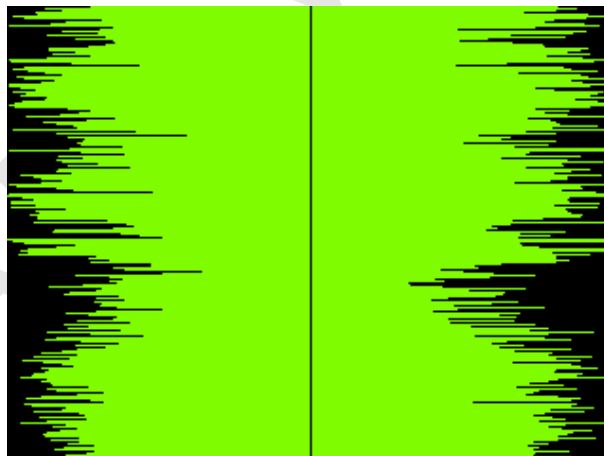


Figure 8.28: Oscilloscope

This demo shows the shape of the sound samples that make up the music being played. At faster speed rates, the player is less responsive to user input and music may start to skip.

Keys

Key	Action
Select+Play	Toggle filled / curve / plot
Select+Next	Toggle whether to scroll or not
Select+Prev	Toggle drawing orientation
Play	Pause the demo
Scroll Fwd/Scroll Back	Increase / decrease volume
Next/Prev	Increase / decrease speed
Select+Menu	Exit demo

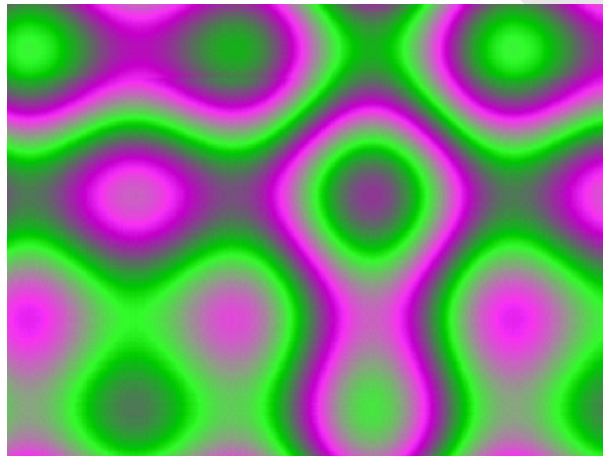
8.2.10 Plasma

Figure 8.29: Plasma

Plasma is a demo displaying a 80's style retro plasma effect.

Key	Action
Scroll Fwd / Scroll Back	Adjust frequency
Select	Change colours
Menu	Quit

8.2.11 Snow

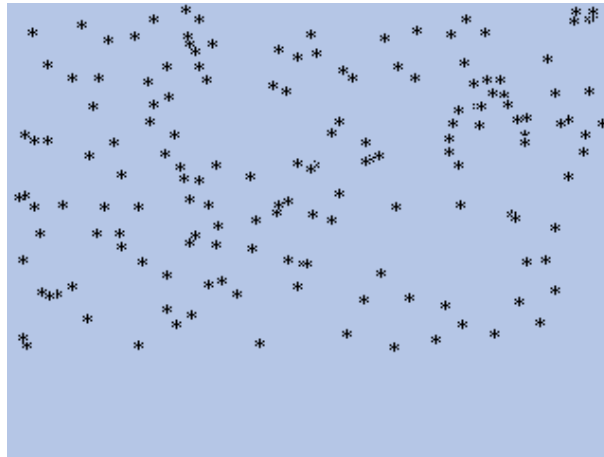


Figure 8.30: Have you ever seen snow falling?

This demo replicates snow falling on your screen. If you love winter, you will love this demo. Or maybe not. Press **Menu** to quit.

8.2.12 Starfield



Figure 8.31: Starfield

Starfield simulation (like the classic screensaver).

Key	Action
Next / Prev	Increase / decrease number of stars
Scroll Fwd / Scroll Back	Increase / decrease speed
Menu	Quit

8.2.13 VU meter

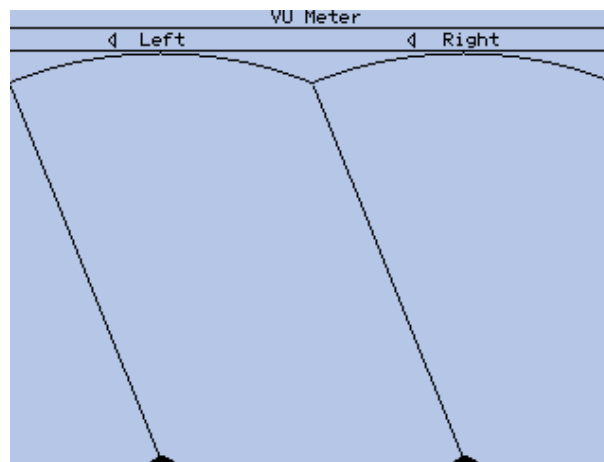


Figure 8.32: VU-Meter

This is a VU meter, which displays the volume of the left and right audio channels. There are 3 types of meter selectable. The analogue meter is a classic needle style. The digital meter is modelled after LED volume displays, and the mini-meter option allows for the display of small meters in addition to the main display (as above). From the settings menu the decay time for the meter (its memory), the meter type and the meter scale can be changed.

Key	Action
Menu	Save settings and quit
Play	Help
Select	Settings
Scroll Fwd	Raise Volume
Scroll Back	Lower Volume

8.3 Viewers

Viewers are plugins which are associated with specific file extensions. They cannot be run directly but are started by “playing” the associated file. Viewers are stored in the `/.rockbox/viewers/` directory.

8.3.1 Chip-8 Emulator

Chip8 is a kind of assembly language for a long-gone architecture. This plugin runs games written using the chip8 instructions. To start a game open a `.ch8` file in the FILE BROWSER

There are lots of tiny Chip8 games (usually only about 256 bytes to a couple of KB) which were made popular by the HP48 calculator’s emulator for them. The original Chip8 had 64x32 pixel graphics, and the new superchip emulator supports 128x64 graphics.

The only problem is that they are based on a 4x4 keyboard, but since most games do not use all of the buttons, this can easily be worked around.

To do this, one may put a `.c8k` file with the same name as the original program which contains new key mappings (for `BLINKY.ch8`, one writes a `BLINKY.c8k` file). That `.c8k` file contains 16 characters describing the mapping from the Chip8 keyboard to the default key mapping (that way, several Chip8 keys can be pressed using only one Rockbox key). For example, a file containing the single line:

CODE

```
0122458469ABCDEF
```

would correspond to the following non-default mappings:

$3 \rightarrow 2, 6 \rightarrow 8, 7 \rightarrow 4, 8 \rightarrow 6.$

The default keymappings are:

Chip8	Off	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Key	Menu			Scroll Back	Prev	Play	Next		Scroll Fwd								


Some places where you can find `.ch8` files:

- The PluginChip8 page on www.rockbox.org has several attached: <http://www.rockbox.org/twiki/bin/view/Main/PluginChip8>
- Check out the HP48 chip games section: <http://www.hpcalc.org/hp48/games/chip/>

- PC emulator by the guy who wrote the HP48 emulator: <http://www.pdc.kth.se/~lfo/chip8/CHIP8.htm>
- Links to other chip8 emulators: <http://www.zophar.net/chip8.html>

8.3.2 JPEG viewer

Open a JPEG file in the FILE BROWSER to view it .

Note: When an audio file is playing the size of the image is limited as the decoding process needs to share memory with audio tracks. To be able to view a bigger file you may need to stop playback. 

Key	Action
Menu / Play / Prev / Next	Move around in zoomed in image
Scroll Fwd	Zoom in
Scroll Back	Zoom out
Select+Next	Next jpeg in folder
Select+Prev	Previous jpeg in folder
Select+Menu	Show menu

The menu has the following entries.


Quit. Quits the viewer and returns to the FILE BROWSER.

Toggle Slideshow Mode. Enables or disables the slideshow mode.

Change Slideshow Timeout. You can set the timeout for the slideshow between 1 second and 20 seconds.

Show Playback Menu. From the playback menu you can control the playback of the currently loaded playlist and change the volume of your player.

Return. Returns you to the image

Note: Progressive scan and other unusual JPEG files are not supported, and will result in various “unsupported xx” messages. Processing could also fail if the image is too big to decode which will be explained by a respective message. 

8.3.3 MPEG Player

The Mpeg Player is a video player plugin capable of playing back MPEG-1 and MPEG-2 video streams with MPEG audio multiplexed into .mpg files.

To play a video file, you just select it in the Rockbox FILE BROWSER. If your file does not have the .mpg extension but is encoded in the supported format, you will need to use the OPEN WITH... context menu option and choose MPEGPLAYER.

Key	Action
Play	Pause/Resume
Long Play	Stop
Scroll Fwd / Scroll Back	Adjust volume up / down
Menu	Open the MPEG Player menu

The menu has the following entries.

Show FPS This option displays (once a second - if your video is full-screen this means it will get overwritten by the video and appear to flash once per second) the average number of frames decoded per second, the total number of frames skipped (see the Skip Frames option), the current time (in 100Hz ticks) and the time the current frame is due to be displayed.

Limit FPS With this option disabled, mpegplayer will display the video as fast as it can. Useful for benchmarking.

Skip frames This option causes mpegplayer to attempt to maintain realtime playback by skipping the display of frames - but these frames are still decoded. Disabling this option can cause loss of A/V sync.

See this page in the Rockbox wiki for information on how to encode your videos to the supported format. <http://www.rockbox.org/twiki/bin/view/Main/PluginMpegplayer>

8.3.4 Rockboy

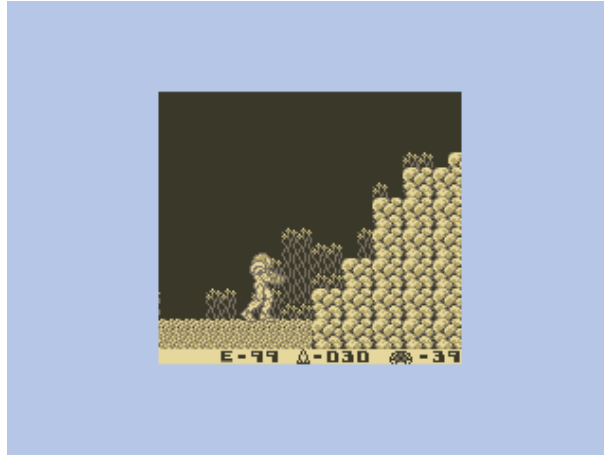


Figure 8.33: Rockboy

Rockboy is a Nintendo Game Boy and Game Boy Color emulator for Rockbox based on the gnuboy emulator. To start a game open a ROM file saved as .gb or .gbc in the file browser.

Default keys

Key	Action
Select	Start
Hold Select	Open Rockboy menu

Rockboy menu

Back to Game. Takes you back to the game.

Load State... Loads a previously saved state.

Save State... Saves your current state.

Options... **Frameskip.** Change frameskip setting to improve speed.

Sound ON/OFF. Toggle sound.

Stats ON/OFF. Toggle showing fps and current frameskip.

Set Keys (BUGGY) Select this option to set a new keymapping.

Quit RockBoy. Quits the Rockboy plugin.

8.3.5 Search

This plugin can be used on playlists. It searches through the playlist that it opened on looking for any occurrences of the string entered by the user. The results of this search are saved to a new playlist, **search_results.m3u**, within the same directory as the original playlist.

8.3.6 Sort

This plugin takes a file and sorts it in ascending alphabetical order. Case is ignored. This is useful for ordering playlists generated by the CREATE PLAYLIST menu option (see section ?? (page ??)).

8.3.7 Text Viewer

This is a Viewer for text files with word wrap. Just open a .txt file to display it. The text viewer features controls to handle various styles of text formatting, has top-of-file and bottom-of-file buttons. You can view files without a .txt extension by using *Open with* from the *File Menu* (see section 4.1.2 (page 21)).

Mode settings

Word mode toggles between Wrap and Chop.

Wrap breaks lines at white space or hyphen.

Chop breaks lines at the maximum column limit.

Line mode cycles through Normal, Join and Expand.

Normal breaks lines at newline characters.

Join ignores unpaired newline characters (i.e., joins lines). Useful for adopting the orphans that occur with e-mail style (i.e., pre-wrapped) text files.

Expand doubles unpaired newlines (i.e., adds a blank line). Useful for making the paragraphs clearer in some book style text files.

View mode toggles between Narrow and Wide.

Narrow sets maximum column to the screen width.

Wide sets maximum column to 114. Useful for navigating large files. (Currently, Wide and Join cannot be selected together.)

Page mode toggles between Normal and Overlap.

Normal sets page-down/page-up to one full screen.

Overlap tells page-down/page-up to retain one line from previous screen.

Scrollbar mode toggles scrollbar for the current View mode.

Narrow mode has no scrollbar by default, until toggled.

Wide mode has a scrollbar by default, until toggled.

Settings are not remembered after the viewer has been exited. If file fits on one screen, there is no scrollbar and toggling Scrollbar mode has no effect.

Key	Action
Scroll Back	Page-up (one screen up)
Scroll Fwd	Page-down (one screen down)
Prev	Top of file (Narrow mode) One screen left (Wide mode)
Next	Bottom of file (Narrow mode) One screen right (Wide mode)
Select+Prev	Toggles Word mode
Select+Play	Cycles line mode
Select+Next	Toggles view mode
Select+Menu+Prev	Toggles page mode
Select+Prev+Next	Toggles scrollbar mode
Menu	Exit text viewer

Compatibility

- Correctly reads plain text files in Unix, Win/DOS, or Macintosh format. Latin-alphabet Unicode files are *almost* readable.
- Currently prefers fixed-width fonts. With proportional fonts, pretends all characters are the width of a lower-case 'o'.
- Currently messages are in English
- Does not currently support right-to-left languages.

8.3.8 VBRfix

This function scans a VBR (Variable Bitrate) MP3 file and updates/creates the Xing VBR header. The Xing header contains information about the VBR stream used to calculate average bit rate, time information and to more accurately fwd/rew in the stream. This function is especially useful when the playback of a file skips, fwd/rew does not work correctly or the time display is incorrect.

Note: VBRfix can only run when music is turned off (since it uses the same memory as the player) and can take a while to complete if run on big files.



8.4 Applications

8.4.1 Battery Benchmark

The Battery Benchmark Plugin enables you to test your battery's performance, while making normal use of your player. Once loaded it will run in the background (TSR plugin), reading various info about your battery while you use it. Once you finish your session you can find the benchmark output data in a file on your player `/battery_bench.txt`. Please submit your results to the Rockbox wiki. <http://www.rockbox.org/twiki/bin/view/Main/BatteryRuntime>

How it works

After you load the plug-in the operation of your player continues as normal. You can do whatever you could do before loading the plugin except loading another plugin. If you happen to load a plugin while benchmarking, a splash screen will inform you about the termination of the benchmark. While you operate it will log various battery related information every time the disk is activated by external causes, (buffer refill, open folder, USB mode) or an hour passes without updating the log file. The plugin will continue to log info until:

- Another plugin is loaded.
- The player is shut down.
- The battery is empty.

Between disk activity (or an hour), it will log info in memory (every measurement is captured when the voltage changes). If there are too many measurements older entries will be deleted and the log file will inform the user about the interval where entries were lost. Benchmarks can be resumed if you accidentally load a plugin, or turn off your player, as long as the log file `/battery_bench.txt` is not deleted.

Information explained

On the top of the file you will see various info on how to use the plugin.

Time This column reports the total time of operation of the player. It is not the time that you started the plug-in. If you have your player on for 5 minutes and then start the plugin, it will start measuring from 5 minutes.

Seconds As time, it shows time passed in seconds. Nothing special, it is there because it is free and maybe someone might want to make graphs with seconds.

Level The percent level of the battery estimated by Rockbox. This is an estimation and not an accurate result. Using the real percentage (current battery voltage /

top battery voltage) * 100) we can calculate the difference between the estimation. Goal of this column is to make the estimation algorithm of Rockbox more accurate.

Time Left It shows the estimated (by Rockbox) remaining time until shutdown. Again, as with Level(above), this column can be used to see differences between real time left and estimated time left. This could help make time left more accurate.

Voltage The battery voltage, the moment the measurement was captured. Measurements are captured when this number changes while benchmarking. This column can be used to give quite interesting graphs in a spreadsheet program. (Excel, Calc, e.t.c)

M/DA (Measurements per Disk Activity) The number of measurements stored temporarily in memory, before written on the log file. This can give you an idea of how many voltage changes there are between disk activity (or one hour).

C Stands for Charger. An "A" in that column shows if there was the power adapter attached to the unit, at the time of the measurement.

S The "S" column shows the state of the device (Charging, or not). The "C" indicated that the unit was charging when the measurement was captured.

U USB powered. Only for targets that support this. A "U" will indicate if the unit was using the USB port for powering.

Making graphs

While you can tell how long your battery lasted, with a single look at the last line of the battery log (`/battery_bench.txt`), the most useful purpose of Battery Benchmark is to make graphs using a spreadsheet program like Excel or Calc. The battery log (`/battery_bench.txt`) is in CSV format (comma separated) so you can quite easily import it to a spreadsheet program.

8.4.2 Calculator

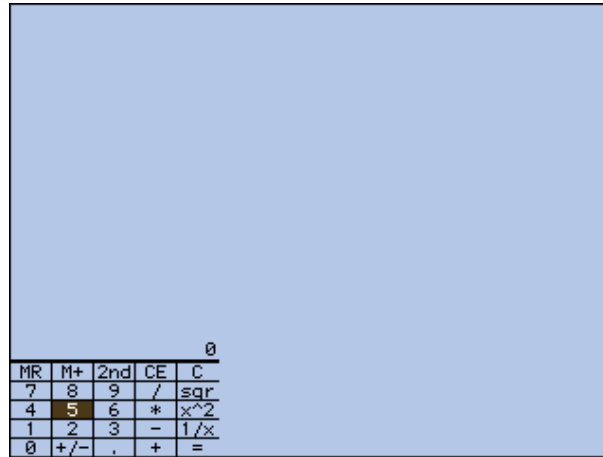


Figure 8.34: Calculator

This is a simple scientific calculator for use on the player. It works like a standard calculator. Pressing the “1st” button will toggle between other available maths functions on the right hand side.

Key	Action
Prev, Next, Scroll Fwd, Scroll Back	Move around the keypad
Select	Press a button on the keypad
Hold Play	Calculate
Menu	Quit

8.4.3 Chess Clock



Figure 8.35: Chess Clock

The chess clock plugin is designed to simulate a chess clock, but it can be used in any kind of game with up to ten players.

Setup

Key	Action
Scroll Back/Scroll Fwd	Increase / decrease displayed Value
Select	Move to next screen
Menu	Move to previous screen

- First enter the number of players (1–10)
- Then set the total game time in mm:ss
- Then the maximum round time is entered. For example, this could be used to play Scrabble for a maximum of 15 minutes each, with each round taking no longer than one minute.
- Done. Player 1 starts in paused mode.

While playing

The number of the current player is displayed on the top line. The time below is the time remaining for that round (and possibly also the total time left if different).

Keys are as follows:

Key	Action
Play	Exit plugin
Prev	Restart round for the current player
Select	Pause the time (press again to continue)
Scroll Back	Switch to next player
Scroll Fwd	Switch to previous player
Menu	Open menu (Select to select.)

From the menu it is possible to delete a player, modify the round time for the current player or set the total time for the game. When the round time is up for a player the message "ROUND UP!" is shown (press NEXT to continue). When the total time is up for a player the message "TIME UP!" is shown. Then player will then be removed from the timer.

8.4.4 Clock

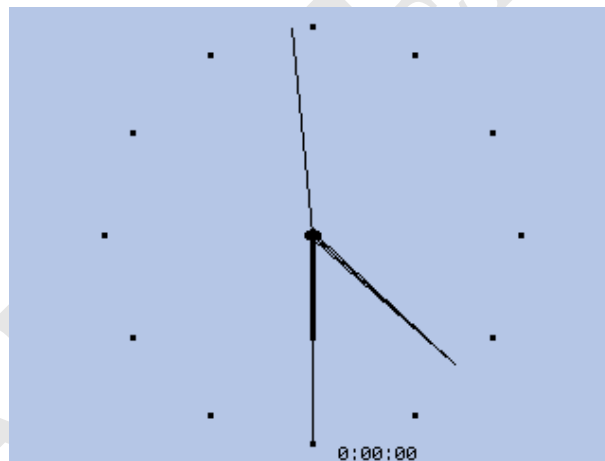


Figure 8.36: Clock

This is a fully featured analogue and digital clock plugin.

Key configuration

Key	Action
Play	Start / Stop Counter
Play (Hold)	Reset Counter
Select	Main Menu
Menu	Save Settings (if enabled) and Exit

Clock Menu

View Clock Exits the menu and returns to the current clock mode display.

Mode Selector Opens a menu from which you can select a clock mode to view.

Counter Settings Opens a menu from which you can adjust settings pertaining to the counter.

Mode Settings Opens a menu from which you can adjust settings pertaining to the current clock mode.

General Settings Reset Settings Reset all settings to their default values.

Save Settings Save all settings to disk.

Show Counter Toggle Counter display.

Save Choose whether to disable automatic saving, saving to disk on exit, or saving to disk every settings change.

Backlight Choose whether to disable the backlight, use the user's timeout setting, or keep the backlight on.

Idle Poweroff Toggle Idle Poweroff.

Note: This setting is not saved to disk.



Help Opens a brief help screen with key mappings and functionality.

Credits Displays a credits roll.

Analog mode

Small, round, analog clock is displayed in the middle of the LCD. Time readout, if enabled, is displayed at the upper left. If Time readout is in 12-hour ("12h") mode, AM or PM will be displayed at the upper right. The Date readout, if enabled, is displayed at the lower left. The Counter, if enabled, is displayed at the lower right. The second hand, if enabled, is displayed along with the hour and minute hands. Digit display, if enabled, places "12", "3", "6", and "9" around the face of the clock in their respective positions.

Digital mode

An imitation of an LCD, this mode shows a Clock comprised of digital “segments”. The Date readout, if enabled, is displayed at the bottom, center. The Second readout, if in “Text” mode, is displayed at the top, center; if in “Bar” mode, is displayed as a progress bar at the top of the LCD; if in “Invert” mode, will invert the LCD left-to-right as the seconds pass (a fully-inverted LCD means the entire minute has passed). The Counter, if displayed, is shown at the upper left. The Blinking Colon, if enabled, blinks the colon once every second. 12-hour mode, if enabled, will display the time in a 12-hour format.

LCD mode

Based on the Digital Mode, the LCD mode is another imitation of an LCD. The settings available in this mode are exactly the same as Digital Mode, but they are independent of Digital Mode. For example, you can have the Date Readout enabled in Digital Mode and disabled in LCD Mode.

Fullscreen

A Fullscreen clock is displayed. Show Border, if enabled, will draw a small box at every hour position (1 through 12). Invert Seconds, if enabled, will invert the LCD as the seconds pass. Second Hand, if enabled, will draw a second hand among the hour and minute hands.

Binary mode

This mode shows a Binary clock. The hour is displayed on the top line, the minute is displayed on the middle line, and the seconds are on the last line. Circle mode, if enabled, draws empty and full circles, instead of zeros and ones. For help on reading binary, please visit: http://en.wikipedia.org/wiki/Binary_numeral_system

Plain mode

This mode shows a “plain” clock in large text that takes up nearly the whole LCD.

8.4.5 Dice

Dice is a simple dice rolling simulator. You can select number and type of dice to roll, it shows individual numbers as well as the total of the rolled dice.

Key	Action
Prev/Next	Pick between type and number of dice
Scroll Fwd/Scroll Back	Select number of sides or number of dice
Select	Roll dice
Long press on Play	Quit

8.4.6 Disk Tidy

Disk Tidy deletes junk files left behind by Windows or OS X after a USB connection. Select the OS's files you want to delete in the 'Files to Clean' menu and select 'Start Cleaning' to begin to process.

Available Options

Both deletes both OS X and Windows files.

Win deletes Windows files, Thumbs.db, /Recycled and /System Volume Information.

Mac deletes OS X files, ._* , .DS_Store and / .Trashes.

Key	Action
Menu	Exit / Abort

8.4.7 Metronome

This plugin can be used as a metronome to keep time during music practice. Adjust the tempo through the interface or by tapping it out on the appropriate button.

Key	Action
Menu	Exit plugin
Play	Start / Stop
Select	Tap tempo
Prev / Next	Adjust tempo
Scroll Fwd / Scroll Back	Adjust volume

8.4.8 Stats



Figure 8.37: The stats-plugin

The stats-plugin simply counts the number of files, music files and folders on your player. Press `:TBD` to exit the plugin.

8.4.9 Stopwatch



Figure 8.38: Stopwatch

A simple stopwatch program with support for saving times.

Key	Action
Menu	Quit Plugin
Play	Start / stop
Prev	Reset timer (only when timer is stopped)
Next	Take lap time
Scroll Fwd/Scroll Back	Scroll through lap times

8.4.10 Text Editor

This plugin allows you to view and edit simple text documents on your DAP. You can view files by using OPEN WITH from the FILE MENU (see section 4.1.2 (page 21)).

Usage

If you start the Text Editor from the plugin browser you will be greeted with a blank screen. When started from the OPEN WITH menu item your file should be shown on the screen. You can now edit the file. The Text Editor is line based. This means you can edit one line at a time using the VIRTUAL KEYBOARD (see section 4.1.3 (page 23)).

- Move the selection bar to the line you want to edit.
- Edit the highlighted text line or insert a new one using the Item Menu.
- When finished editing exit the Text Editor. You'll be shown a list of save options.

Note: When you haven't changed the file the Text Editor will quit immediately.



Key	Action
Select or Next	Edit Line / Select Character
Prev or Long Play	Exit / Abort Editing
Menu	Show Item Menu
Long Select	Delete Line

9 Advanced Topics

9.1 Customising the userinterface

9.1.1 Getting Extras

Rockbox supports custom fonts. A collection of fonts is available for download in the font package at <http://www.rockbox.org/daily.shtml>.

9.1.2 Loading Fonts

Rockbox can load fonts dynamically. Simply copy the `.fnt` file to the player and “play” it in the FILE BROWSER. If you want a font to be loaded automatically every time you start up, it must be located in the `/.rockbox/fonts` folder and the filename must be at most 24 characters long. You can browse the fonts in `/.rockbox/fonts` under SETTINGS → GENERAL SETTINGS → DISPLAY → BROWSE FONTS in the MAIN MENU.

Warning: Advanced Users Only: Any BDF font file up to 16 pixels high should be usable with Rockbox. To convert from `.bdf` to `.fnt`, use the `convbdf` tool. This tool can be found in the `tools` directory of the Rockbox source code.



9.1.3 Loading Languages

Rockbox can load language files at runtime. Simply copy the `.lng` file (*do not use the .lang file*) to the player and “play” it in the Rockbox directory browser or select SETTINGS → GENERAL SETTINGS → LANGUAGES from the MAIN MENU.

Note: If you want a language to be loaded automatically every time you start up, it must be located in the `/.rockbox/langs` folder and the filename must be a maximum of 24 characters long.



If your language is not yet supported and you want to write your own language file find the instructions on the Rockbox website: <http://www.rockbox.org/twiki/bin/view/Main/LangFiles>

9.1.4 Changing Colours

The colours used in the Rockbox interface can be changed to any combination of background and foreground colour you like. To do this go to the SETTINGS → GENERAL SETTINGS → DISPLAY and select BACKGROUND COLOUR or FOREGROUND COLOUR. The colours set here are used in all menus, browsers and in the WHILE PLAYING SCREEN.

9.1.5 Loading Backdrops

Rockbox supports showing an image as a backdrop in the FILE BROWSER and the menus. The backdrop image must be a .bmp file of the exact same dimensions as the display in your player (320x240x16 with the last number giving the colour depth in bits). To use an image as a backdrop browse to it in the FILE BROWSER and open the FILE MENU (see section 4.1.2 (page 21)) on it and select the option SET AS BACKDROP. If you want rockbox to remember your backdrop the next time you start your player the backdrop must be placed in the / .rockbox/backdrops folder.

9.2 Configuring the WPS

9.2.1 WPS – General Info

Description: The WPS or While Playing Screen is the name used to describe the information displayed on the player's screen whilst an audio track is being played. The default WPS is a relatively simple screen displaying Track name, Artist, Album etc. in the default font as a purely text based layout. There are a number of WPS files included in Rockbox, and you can load one of these at anytime by selecting it in GENERAL SETTINGS → DISPLAY → BROWSE .WPS FILES.

Note: "Playing" a .wps from the file browser has the same effect.




File Location: Custom WPS files may be located anywhere on the drive. The only restriction is that they must end in .wps. When you "play" a .wps file, it will be used for future WPS screens, and if the "played" .wps file is located in the / .rockbox/wps folder, it will be remembered and used after reboot. The .wps filename must be no more than 24 characters long for it to be remembered.

9.2.2 WPS – Build Your Own

Quite simply, enter the WPS code in your favourite text editor, Notepad on Windows works fine. When you save it, instead of saving it as a .txt file, save it as a .wps file. Example: Instead of Rockbox.txt, save the file as Rockbox.wps. To make sure non english characters display correctly in your WPS you must save the .wps file with UTF-8 character encoding. This can be done in most editors, for example Notepad in Windows 2000 or XP (but not in 9x/ME) can do this. See appendix section B (page 119) for all the tags that are available.

- All characters not preceded by % are displayed as typed.
- Lines beginning with # are comments and will be ignored.
- Maximum file size used is 1600 bytes. If you have a bigger WPS file, only the first part of it will be loaded and used.

Note: Keep in mind that your player resolution is 320x240x16 (with the last number giving the colour depth in bits) when designing your own WPS, or if you use a WPS designed for another target. 

Conditional Tags

If/else: Syntax: `%?xx<true|false>`

If the tag specified by “xx” has a value, the text between the “<” and the “|” is displayed (the true part), else the text between the “|” and the “>” is displayed (the false part). The else part is optional, so the “|” does not have to be specified if no else part is desired. The conditionals nest, so the text in the if and else part can contain all % commands, including conditionals.

Enumerations: Syntax: `%?xx<alt1|alt2|alt3|...|else>`

For tags with multiple values, like Play status, the conditional can hold a list of alternatives, one for each value the tag can have. Example enumeration:

EXAMPLE


```
%?mp<Stop|%Play|Pause|Ffwd|Rew>
```

The last else part is optional, and will be displayed if the tag has no value. The WPS parser will always display the last part if the tag has no value, or if the list of alternatives is too short.

Next Song info

You can display information about the next song – the song that is about to play after the one currently playing (unless you change the plan).

If you use the upper-case versions of the three tags: F, I and D, they will instead refer to the next song instead of the current one. Example: %Ig is the genre name used in the next song and %Ff is the mp3 frequency.

Note: The next song information *will not* be available at all times, but will most likely be available at the end of a song. We suggest you use the conditional display tag a lot when displaying information about the next song! 

Alternating sublines

It is possible to group items on each line into 2 or more groups or “sublines”. Each subline will be displayed in succession on the line for a specified time, alternating continuously through each defined subline.

Items on a line are broken into sublines with the semicolon ‘;’ character. The display time for each subline defaults to 2 seconds unless modified by using the ‘%t’ tag to specify an alternate time (in seconds and optional tenths of a second) for the subline to be displayed.

Subline related special characters and tags:

; Split items on a line into separate sublines

%t Set the subtitle display time. The '**%t**' is followed by either integer seconds (**%t5**), or seconds and tenths of a second (**%t3.5**).

Each alternating subtitle can still be optionally scrolled while it is being displayed, and scrollable formats can be displayed on the same line with non-scrollable formats (such as track elapsed time) as long as they are separated into different subtitles. Example subtitle definition:

EXAMPLE

```
%s%t4%ia;%s%it;%t3%pc %pr : Display id3 artist for 4 seconds,
                             Display id3 title for 2 seconds,
                             Display current and remaining track time
                             for 3 seconds,
                             repeat...
```

Conditionals can be used with subtitles to display a different set and/or number of subtitles on the line depending on the evaluation of the conditional. Example subtitle with conditionals:

EXAMPLE

```
;%?it<%t8%s%it|s%fn>;;%?ia<%t3%s%ia|t0>
```

The format above will do two different things depending if ID3 tags are present. If the ID3 artist and title are present:

- Display id3 title for 8 seconds,
- Display id3 artist for 3 seconds,
- repeat...

If the ID3 artist and title are not present:

- Display the filename continuously.

Note that by using a subtitle display time of 0 in one branch of a conditional, a subtitle can be skipped (not displayed) when that condition is met.

Using Images

You can have as many as 52 images in your WPS. There are various ways of displaying images:

1. Load and always show the image, using the **%x** tag
2. Preload the image with **%x1** and show it with **%xd**. This way you can have your images displayed conditionally.

3. Load an image and show as backdrop using the %X tag. The image must be of the same exact dimensions as your display.

Example on background image use:

EXAMPLE

```
%X|background.bmp|
```

The image with filename `background.bmp` is loaded and used in the WPS.

Example on bitmap preloading and use:

EXAMPLE

```
%x|a|static_icon.bmp|50|50|
%xl|b|rep_off.bmp|16|64|
%xl|c|rep_all.bmp|16|64|
%xl|d|rep_one.bmp|16|64|
%xl|e|rep_shuffle.bmp|16|64|
%?mm<%xdb|%xdc|%xdd|%xde>
```

Four images at the same x and y position are preloaded in the example. Which image to display is determined by the %mm tag (the repeat mode).

Example File

EXAMPLE

```
%s%?in<%in - >%?it<%it|%fn> %?ia<[%ia%?id<, %id>]>
%pb%pc/%pt
```

That is, “tracknum – title [artist, album]”, where most fields are only displayed if available. Could also be rendered as “filename” or “tracknum – title [artist]”.

9.3 Managing Rockbox settings

9.3.1 Introduction to .cfg files.

Rockbox allows users to store and load multiple settings through the use of configuration files. A configuration file is simply a text file with the extension `.cfg`.

A configuration file may reside anywhere on the disk. Multiple configuration files are permitted. So, for example, you could have a `car.cfg` file for the settings that you use while playing your jukebox in your car, and a `headphones.cfg` file to store the settings that you use while listening to your player through headphones.

See section 9.3.2 (page 116) below for an explanation of the format for configuration files. See section 9.3.3 (page 116) for an explanation of how to create, edit and load configuration files.

9.3.2 Specifications for .cfg files.


The Rockbox configuration file is a plain text file, so once you use the WRITE .CFG FILE option to create the file, you can edit the file on your computer using any text editor program. See Appendix section C (page 126) for available settings. Configuration files use the following formatting rules:

1. Each setting must be on a separate line.
2. Each line has the format “setting: value”.
3. Values must be within the ranges specified in this manual for each setting.
4. Lines starting with # are ignored. This lets you write comments into your configuration files.

Example of a configuration file:

EXAMPLE

```
Example configuration file
volume: 70
bass: 11
treble: 12
balance: 0
time format: 12hour
volume display: numeric
show files: supported
wps: /.rockbox/car.wps
lang: /.rockbox/afrikaans.lng
```


Note: As you can see from the example, configuration files do not need to contain all of the Rockbox options. You can create configuration files that change only certain settings. So, for example, suppose you typically use the player at one volume in the car, and another when using headphones. Further, suppose you like to use an inverse LCD when you are in the car, and a regular LCD setting when you are using headphones. You could create configuration files that control only the volume and LCD settings. Create a few different files with different settings, give each file a different name (such as `car.cfg`, `headphones.cfg`, etc.), and you can then use the BROWSE .CFG FILES option to quickly change settings. 

9.3.3 The MANAGE SETTINGS menu

The MANAGE SETTINGS menu can be found in the MAIN MENU. The MANAGE SETTINGS menu allows you to save and load .cfg files.

Browse .cfg Files. Opens the file browser in the `/.rockbox` directory and displays all .cfg (configuration) files. Selecting a .cfg file will cause Rockbox to load the settings contained in that file. Pressing **Prev** will exit back to the MANAGE SETTINGS menu. See the WRITE .CFG FILES option on the MANAGE SETTINGS menu for details of how to save and edit a configuration file.

Reset Settings. This wipes the saved settings in the player and resets all settings to their default values.

Note: You can also reset all settings to their default values by turning off the player, and turning it back on with the hold button on. 

Write .cfg file. This option writes a .cfg file to your player's disk. The configuration file has the .cfg extension and is used to store all of the user settings that are described throughout this manual.

Hint: Use the WRITE .CFG FILE feature (MAIN MENU → GENERAL SETTINGS) to save the current settings, then use a text editor to customize the settings file. See Appendix section C (page 126) for the full reference of available options.















9.4 Firmware Loading

9.4.1 Using ROLO (Rockbox loader)

Rockbox is able to load and start another firmware file without rebooting. You just “play” a file with the extension .ipod. This can be used to test new firmware versions without deleting your current version.

A File formats

A.1 Supported file formats

Icon	File Type	Extension	Action when selected
	Directory	<i>none</i>	The browser enters that directory
	Audio file	<i>various</i>	Rockbox takes you to the WPS and starts playing the file
	Cuesheet	.cue	View a cuesheet file
	Wave Audio File	.wav	Play a WAV file
	Playlist	.m3u, .m3u8	Rockbox loads the playlist and starts playing the first file
	Rockbox firmware	.ipod	ROLO will load the new firmware
	While Playing Screen	.wps	The new WPS display configuration will be loaded
	Language File	.lng	Loads a language file
	Text File	.txt	This will display the text file using Rockbox text browser plugin
	Configuration File	.cfg	The settings file will be loaded
	Font	.fnt	This font will replace the current one
	Plugin	.rock	Starts a Rockbox plugin
	Chip8 game	.ch8	Play a Chip8 game
	Image	.jpg	View a JPEG image

B WPS Tags

B.1 Status Bar

Tag	Description
%we	Status Bar Enabled
%wd	Status Bar Disabled

These tags override the player setting for the display of the status bar. They must be noted on their own line.

B.2 ID3 Info

Tag	Description
%ia	ID3 Artist
%ic	ID3 Composer
%id	ID3 Album Name
%ig	ID3 Genre Name
%in	ID3 Track Number
%it	ID3 Track Title
%iv	ID3 Version (1.0, 1.1, 2.2, 2.3, 2.4 or empty if no id3 tag)
%iy	ID3 Year

Remember that this information is not always available, so use the conditionals to show alternate information in preference to assuming.

B.3 Power Related Information

Tag	Description
%b1	Show numeric battery level in percent. Can also be used in a conditional: %?b1<-1 0 1 2 ... N> Where the -1 value is used when the battery level isn't known (it usually is).
%bv	Show the battery level in volts
%bt	Show estimated battery time left
%bp	"p" if the charger is connected (only on targets that can charge batteries)
%bc	"c" if the unit is currently charging the battery (only on targets that have software charge control or monitoring)
%bs	Sleep timer. Shows the remaining time if the sleeptimer is set

B.4 File Info

Tag	Description
%fb	File Bitrate (in kbps)
%fc	File Codec (e.g. "MP3" or "FLAC"). This tag can also be used in a conditional tag, %?fc<mp1 mp2 mp3 aiff wav vorbis flac mpc a52 wavpack alac aac shn sid adx unknown>. The codec order is as follows: MP1, MP2, MP3, AIFF, WAV, Ogg Vorbis (OGG), FLAC, MPC, AC3, WavPack (WV), ALAC, AAC, Shorten (SHN), SID, ADX, NSF, Speex, SPC, APE.
%ff	File Frequency (in Hz)
%fm	File Name
%fn	File Name (without extension)
%fp	File Path
%fs	File Size (In Kilobytes)
%fv	"(avg)" if variable bit rate or "" if constant bit rate
%d1	First directory from end of file path.
%d2	Second directory from end of file path.
%d3	Third directory from end of file path.

Example for the %dN commands: If the path is "/Rock/Kent/Isola/11 - 747.mp3", %d1 is "Isola", %d2 is "Kent" ... You get the picture.

B.5 Playlist/Song Info

Tag	Description
%pb	Progress Bar This will replace the entire line with a progress bar. You can set the height, position and width of the progressbar (in pixels): %pb height leftpos rightpos
%px	Percentage Played In Song
%pc	Current Time In Song
%pe	Total Number of Playlist Entries
%pm	Peak Meter. The entire line is used as volume peak meter.
%pn	Playlist Name (Without path or extension)
%pp	Playlist Position
%pr	Remaining Time In Song
%ps	Shuffle. Shows 's' if shuffle mode is enabled.
%pt	Total Track Time
%pv	Current volume (x dB). Can also be used in a conditional: %?pv<0 1 2 ... N>

B.6 Runtime Database

Tag	Description
%rp	Song playcount
%rr	Song rating (0-10). This tag can also be used in a conditional tag, %?rr<0 1 2 3 4 5 6 7 8 9 10>

B.7 Sound (DSP) settings

Tag	Description
%sp	Display current playback pitch
%xf	Crossfade setting, in the order: Off, Shuffle, Skip, Always
%rg	ReplayGain value in use (x.y dB). If used as a conditional, Replaygain type in use: %?rg<Off Track Album TrackShuffle AlbumShuffle No tag>

B.8 Virtual LED

Tag	Description
%lh	“h” if the hard disk is accessed

B.9 Repeat Mode

Tag	Description
%mm	Repeat mode, 0-4, in the order: Off, All, One, Shuffle

Example: %?mm<Off|All|One|Shuffle|A-B>

B.10 Playback Mode Tags

Tag	Description
%mp	Play status, 0-4, in the order: Stop, Play, Pause, Fast forward, Rewind

Example: %?mp<Stop|Play|Pause|Ffwd|Rew>

B.11 Images

Tag	Description
%X filename.bmp	Load and set a backdrop image for the WPS. This image must be exactly the same size as your LCD.
%P filename.bmp	Load a Progress bar image for the WPS. Use %pb tag to show the progress bar
%x n filename x y	Load and display an image n: image ID (a-z and A-Z) filename: filename relative to /.rockbox/ and including .bmp x: x coordinate y: y coordinate.
%xl n filename x y	Preload an image for later display n: image ID (a-z and A-Z) filename: filename relative to /.rockbox/ and including .bmp x: x coordinate y: y coordinate.
%xdn	Display a preloaded image n: image ID (a-z and A-Z)

Example: image /.rockbox/bg.bmp with ID "a" at 37, 109 would be:

```
%x|a|bg.bmp|37|109|
```

Note:

- The images must be in a rockbox compatible format (1 bit per pixel BMP)
- The image tag must be on its own line
- The ID is case sensitive, giving 52 different ID's
- The size of the LCD screen for each player varies. See table below for appropriate sizes of each device. The x and y coordinates must respect each of the players' limits.



B.12 Alignment

Tag	Description
%al	Text is left aligned
%ac	Text is center aligned
%ar	Text is right aligned

All alignment tags may be present in one line, but they need to be in the order left – center – right. If the aligned texts overlap, they are merged.

B.13 Conditional Tags

Tag	Description
%%xx<true false>	If / Else: Evaluate for true or false case
%%xx<alt1 alt2 alt3 ... else>	Enumerations: Evaluate for first / second / third / ... / last condition

B.14 Real Time Clock

Tag	Description
%cd	Day of month
%ce	Zero padded day of month
%cH	Zero padded hour from 00 to 24
%ck	Hour from 0 to 24
%cI	Zero padded hour from 12 to 12
%cl	Hour from 12 to 12
%cm	Month
%cM	Minutes
%cS	Seconds
%cy	2-digit year
%cY	4-digit year
%cP	Capital AM/PM
%cp	Lowercase am/pm
%ca	Weekday name
%cb	Month name
%cu	Day of week from 1 to 7, 1 is Monday
%cw	Day of week from 0 to 6, 0 is Sunday

B.15 Other Tags

Tag	Description
%%	Display a '%'
%<	Display a '<'
%	Display a ' '
%>	Display a '>'
%;	Display a ';'.
%s	Indicate that the line should scroll. Can occur anywhere in a line (given that the text is displayed; see conditionals above). You can specify up to 10 scrolling lines. Scrolling lines can not contain dynamic content such as timers, peak meters or progress bars.

C Config file options

Setting	Allowed Values	Unit
volume	-57 to +6	dB
bass	-6 to +9	dB
treble	-6 to +9	dB
balance	-100 to +100	%
channels	stereo, mono, custom, mono left, mono right, karaoke	N/A
shuffle	on, off	N/A
repeat	off, all, one, shuffle, ab	N/A
play selected	on, off	N/A
resume	on, off	N/A
scan min step	1, 2, 3, 4, 5, 6, 8, 10, 15, 20, 25, 30, 45, 60	seconds
scan accel	0 to 15	seconds
antiskip	0 to 7	seconds
volume fade	on, off	N/A
id3 tag priority	v2-v1, v1-v2	N/A
sort case	on, off	N/A
show files	all, supported, music, playlists	N/A
follow playlist	on, off	N/A
playlist viewer icons	on, off	N/A
playlist viewer indices	on, off	N/A
playlist viewer track display	track name, full path	N/A
recursive directory insert	on, off	N/A
scroll speed	1 to 25	Hz
scroll delay	0 to 250	1/10s
scroll step	1 to 112	pixels
bidir limit	0 to 200	% screen
contrast	0 to 63	N/A
backlight timeout	off, on, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 15, 20, 25, 30, 45, 60, 90	seconds
backlight timeout plugged	off, on, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 15, 20, 25, 30, 45, 60, 90	seconds
disk spindown	3 to 254	seconds
battery capacity	1500 - 3200	mAh

Setting	Allowed Values	Unit
idle poweroff	off, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 15, 30, minutes 45, 60	
lang	/path/filename.lng	N/A
wps	/path/filename.wps	N/A
autocreate bookmarks	off, on	N/A
autoload bookmarks	off, on	N/A
use most-recent-bookmarks	off, on	N/A
talk dir	off, number, spell, enter, hover	N/A
talk file	off, number, spell	N/A
talk menu	off, on	N/A
tagcache_autoupdate	on, off	N/A
warn when erasing dynamic playlist	on, off	N/A
cuesheet support	on, off	N/A
replaygain	on, off	N/A
replaygain type	track, album, track shuffle	N/A
replaygain noclip	on, off	N/A
replaygain preamp	-120 to 120	0.1dB
crossfade	off, shuffle, track skip, always	N/A
crossfade fade in delay	0 to 7	seconds
crossfade fade out delay	0 to 7	seconds
crossfade fade in duration	0 to 15	seconds
crossfade fade out duration	0 to 15	seconds
crossfade fade out mode	crossfade, mix	N/A
crossfeed	on, off	N/A
crossfeed direct gain	0 to 60	0.1dB
crossfeed cross gain	30 to 120	0.1dB
crossfeed hf attenuation	60 to 240	0.1dB
crossfeed hf cutoff	500 to 2000	Hz
eq enabled	on, off	N/A
eq precut	0 to 240	0.1dB
eq band 0 cutoff	0 to 32768	Hz
eq band 1 cutoff	0 to 32768	Hz
eq band 2 cutoff	0 to 32768	Hz
eq band 3 cutoff	0 to 32768	Hz
eq band 4 cutoff	0 to 32768	Hz
eq band 0 q	0 to 64	N/A
eq band 1 q	0 to 64	N/A
eq band 2 q	0 to 64	N/A
eq band 3 q	0 to 64	N/A
eq band 4 q	0 to 64	N/A
eq band 0 gain	-240 to 240	0.1dB

Setting	Allowed Values	Unit
eq band 1 gain	-240 to 240	0.1dB
eq band 2 gain	-240 to 240	0.1dB
eq band 3 gain	-240 to 240	0.1dB
eq band 4 gain	-240 to 240	0.1dB
beep	off, weak, moderate, strong	N/A
dircache	on, off	N/A
tagcache_ram	on, off	N/A
peak meter release	1 to 126	?
peak meter hold	off, 200ms, 300ms, 500ms, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 15, 20, 30, 1min	N/A
peak meter clip hold	on, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 15, 20, 25, 30, 45, 60, 90, 2min, 3min, 5min, 10min, 20min, 45min, 90min	N/A
peak meter busy	on, off	N/A
peak meter dbfs	on, off	on: dbfs, off: linear
peak meter min	0 to 89 (dB) or 0 to 100 (%)	dB or %
peak meter max	0 to 89 / (dB) or 0 to 100 (%)	dB or %
statusbar	on, off	N/A
scrollbar	on, off	N/A
volume display	graphic, numeric	N/A
battery display	graphic, numeric	N/A
font	/path/filename.fnt	N/A
invert	on, off	N/A
backdrop	/path/filename.bmp	N/A
foreground color	000000 to FFFFFFFF	RRGGBB
background color	000000 to FFFFFFFF	RRGGBB
time format	12hour, 24hour	N/A

D User feedback

D.1 Bug reports

If you experience inappropriate performance from any supported feature, please file a bug report on our web page. Do not report missing features as bugs, instead file them as feature requests (see below).

For open bug reports refer to <http://www.rockbox.org/tracker/index.php?type=2>

D.1.1 Rules for submitting new bug reports

1. Check that the bug hasn't already been reported
2. Always include the following information in your bug report:
 - Which exact player you have.
 - Which exact Rockbox version you are using (Menu->Info -> Version)
 - A step-by-step description of what you did and what happened
 - Whether the problem is repeatable or a one-time occurrence
 - All relevant data regarding the problem, such as playlists, MP3 files etc. (IMPORTANT!)

D.2 Feature requests

For open feature requests refer to <http://www.rockbox.org/tracker/index.php?type=1>

D.2.1 Rules for submitting a new feature request

1. Check that the feature hasn't already been requested. Duplicates are really boring!
2. Check that the feature hasn't already been implemented. Download the latest current/daily build and/or search the mail list archive.
3. Check that the feature is possible to implement (see section [D.2.2](#) (page 130)).

D.2.2 Features we will not implement

This is a list of Feature Requests we get repeatedly that we simply cannot do. View it as the opposite of a TODO!

- Interfacing with other USB devices (like cameras) or 2 player games over USB
The USB system demands that there is a master that talks to a slave. The player can only serve as a slave, as most other USB devices such as cameras can. Thus, without a master no communication between the slaves can take place. If that is not enough, we have no ways of actually controlling the communication performed over USB since the USB circuit in the player is strictly made for disk-access and does not allow us to play with it the way we'd need for any good communication to work.
- Support other file systems than FAT32 (like NTFS or ext2 or whatever)!
No. support for more file systems will just take away valuable ram for unnecessary features. You can partition your player fine, just make sure the first one is FAT32 and then make the other ones whatever file system you want. Just don't expect Rockbox to understand them.
- Add scandisk-like features!
It would be a very slow operation that would drain the batteries and take a lot of useful ram for something that is much better and faster done when connected to a host computer.

E Changelog

E.1 What's new since v2.5?

Changes in version 2.5

DRAFT VERSION

F Credits

People that have contributed to the project, one way or another. Friends!

► BJÖRN STENBERG ► LINUS NIELSEN FELTZ-
ING ► ANDY CHOI ► ANDREW JAMIESON
► PAUL SUADE ► JOACHIM SCHIFFER
► DANIEL STENBERG ► ALAN KORR ► GARY
CZVITKOVICZ ► STUART MARTIN ► FE-
LIX ARENDS ► ULF RALBERG ► DAVID
HÄRDEMAN ► THOMAS SAEYS ► GRANT
WIER ► JULIEN LABRUYÉRE ► NICOLAS
SAUZEDE ► ROBERT HAK ► DAVE CHAP-
MAN ► STEFAN MEYER ► ERIC LINENBERG
► TOM CVITAN ► MAGNUS ÖMAN ► JEROME
KUPTZ ► JULIEN BOISSINOT ► NUUTTI KO-
TIVUORI ► HEIKKI HANNIKAINEN ► HARD-
EEP SIDHU ► MARKUS BRAUN ► JUSTIN
HEINER ► MAGNUS HOLMGREN ► BILL
NAPIER ► GEORGE STYLES ► MATS LIDELL
► LEE MARLOW ► NATE NYSTROM ► NICK
ROBINSON ► CHAD LOCKWOOD ► JOHN
PYBUS ► UWE FREESE ► RANDY WOOD
► GREGORY HAERR ► PHILIPP PERTER-
MANN ► GILLES ROUX ► MARK HILLEBRAND
► DAMIEN TENEY ► ANDREAS ZWIRTES
► KJELL ERICSON ► JIM HAGANI ► LU-
DOVIC LANGE ► MIKE HOLDEN ► SIMON
ELÉN ► MATTHEW P. O'REILLY ► CHRISTIAN
SCHÖNBERGER ► HENRIK BACKE ► CRAIG
SATHER ► JOSÉ MARIA GARCIA-VALDECASAS
BERNAL ► STEVIE OH ► JÖRG HOHENSOHN
► DAVE JONES ► THOMAS PAUL DIFFEN-
BACH ► ROLAND KLETZING ► ITAI SHAKED
► KEITH HUBBARD ► BENJAMIN METZLER
► FREDERIC DANG NGOC ► PIERRE DE-
LORE ► HUW SMITH ► GARRETT DERNER
► BARRY MCINTOSH ► LESLIE DONALD-
SON ► LEE PILGRIM ► ZAKK ROBERTS
► FRANCOIS BOUCHER ► MATTHIAS WIEN-
TAPPER ► BRENT COUTTS ► JENS ARNOLD
► GERALD VANBAREN ► CHRISTI SCARBOR-
OUGH ► STEVE CUNDARI ► MAT HOLTON
► JAN GAJDOS ► ANTOINE CELLERIER
► BRIAN KING ► JIRI JURECEK ► JACOB ERL-
BECK ► JEAN-PHILIPPE BERNARDY ► DAVE
HOOPER ► JONAS HÄGGQVIST ► THOM
JOHANSEN ► RINAT ZAKIROV ► MANUEL
DEJONGHE ► MARCOEN HIRSCHBERG
► MICHIEL VAN DER KOLK ► TONY MO-
TAKIS ► ANDY YOUNG ► ALEXANDRE BOUR-
GET ► RICHARD S. LA CHARITÉ III ► CHRIS-
TIAN GMEINER ► TOMAS SALFISCHBERGER
► MIKA PEKKARINEN ► TAPPIO KARPPINEN
► RICHARD OTTÓ O'BRIEN ► LUCA BU-
RELLI ► ALESSIO LENZI ► DAVID BRYANT
► MARTIN ARVER ► ALEXANDER SPYRIDAKIS
► PEDRO BALTAZAR VASCONCELOS ► RAY
LAMBERT ► DAVE WIARD ► PIETER BOS
► KONSTANTIN ISAKOV ► BRYAN VANDYKE
► HRISTO KOVACHEV ► SANDER SWEERS
► ANTONIUS HELLMAN ► RYAN JACK-
SON ► PER HOLMÄNG ► FREDERIC DEV-
ERNAY ► JOSÉ M. FANDIÑO ► GADI CO-
HEN ► NAFTALI GOLDSTEIN ► DAVID DENT
► FRANK DISCHNER ► LIBERMAN SHACHAR
► STEPHAN WEZEL ► ALYSSA MILBURN
► KEVIN FERRARE ► ANTON OLEYNIKOV
► MARK ARIGO ► MAGNUS WESTER-
LUND ► JAKE OWEN ► MUSTAPHA SENHAJI
► ADAM BOOT ► JONATHAN GORDON ► TAT
TANG ► TOSHIHIKO ITOH ► DAVID J. SONG
► JEONG TAEK IN ► ANDERS KAGERIN ► PE-
TER D'HOYE ► BEN BASHA ► BRANDON LOW

▶ NATHAN HAND ▶ NICK LANHAM ▶ SEBASTIAN HENRIKSEN ▶ MARTIN SCARRATT ▶ KARL KURBJUN ▶ TOMASZ MALESINSKI ▶ ANDREW PILLEY ▶ MATT V.D. WESTHUIZEN ▶ TIM CRIST ▶ JVO STUDER ▶ DAN EVERTON ▶ IMRE HERCEG ▶ SEVEN LE MESLE ▶ CRAIG BACHELOR ▶ NIKOLAJ CHRISTENSEN ▶ MIKAEL MAGNUSSON ▶ DOMINIK WENGER ▶ HENRICO WITVLIET ▶ ANDREW SCOTT ▶ MIGUEL A. ARÉVALO ▶ AARON F. GONZALEZ ▶ ALEKSEY KOZYULIN ▶ JANI KINNUNEN ▶ RUI MARINHO ▶ ALUN THOMAS ▶ NILS WALLMÉNIUS ▶ NAOAKI OKAZAKI ▶ WILL DYSON ▶ MATTHIAS MOHR ▶ CHRISTIAN MARG ▶ ELI SHERER ▶ FREDRIK ÖHRN ▶ NICOLAS PENNEQUIN ▶ RALF HERZ ▶ MICHAEL DIFEBBO ▶ DAVID ROTHENBERGER ▶ ROBERT KEEVIL ▶ MARK BRIGHT ▶ DOMINIK RIEBELING ▶ ALEXANDER BONDAR ▶ PETER CAWLEY ▶ RANI HOD ▶ TOM ROSS ▶ ANTON ROMANOV ▶ JEAN-LUC OHL ▶ STEVE BAVIN ▶ MARIANNE ARNOLD ▶ GAETANO VOCCA ▶ FREDERIK VESTRE ▶ WENBIN LEO ▶ TOM EVANS ▶ EWAN DAVIES ▶ FRÉDÉRIC FRANÇOIS ▶ MARC-ANDRÉ MOREAU ▶ IOANNIS KOUTOULAKIS ▶ ALISTAIR MARSHALL ▶ KARL OVE HUFTHAMMER ▶ VÍCTOR ZABALZA ▶ ULRICH PEGELOW ▶ ANDREAS MATSSON ▶ DANIEL ANKERS ▶ PAUL LOUDEN ▶ RAINER SINSCH ▶ PLÁCIDO REVILLA ▶ MICHAEL SEVAKIS ▶ LUKAS SABOTA ▶ EMANUEL ZEPHIR ▶ ALEXANDER LEVIN ▶ BARRY WARDELL ▶ LARS VAN DE KLOMP ▶ PHILIPPE MIOSSEC ▶ JOCHEN KEMNADE ▶ CORRY LAZAROWITZ ▶ TOM MEYER ▶ LAURENT BAUM ▶ JAMES TEH ▶ LIAM NATTRASS ▶ CHRISTIAN HACK ▶ WADE BROWN ▶ VADIM CHEKAN ▶ CHRISTOPHER BORCSOK ▶ VICTOR CARDENAS ▶ ANDREW MELVILLE ▶ PENGXUAN LIU ▶ ANDREW CUPPER ▶ THILO-ALEXANDER GINKEL ▶ ADAM GASHLIN ▶ ROBERT KUKLA ▶ DAVID QUESADA ▶ JARED STAFFORD ▶ MARTIN HENSEL ▶ STÉPHANE DOYEN ▶ AUSTIN APPEL ▶ ANDRE SMITH ▶ TRAVIS HYYPPA ▶ IAN WEBBER ▶ PAVEL GNELITSA ▶ LUTZ BÖHNE ▶ WILL ROBERTSON ▶ STEPHANE DOYON ▶ ROBERT CARBONEAU ▶ YE WEI ▶ BRYAN CHILDS ▶ MIKE SCHMITT ▶ CHRIS TAYLOR ▶ TOBIAS LANGHOFF ▶ STEVE GOTTHARDT ▶ GREG WHITE ▶ MATTIEU FAVRÉAUX ▶ MALCOLM TYRRELL ▶ PIOTR JAFISZOW ▶ GARY ALLEN ▶ JOHN BOUANTOUN ▶ TOMASZ MON ▶ JAKUB MATOUŠEK ▶ ALBERT VELI ▶ CHRIS DOHAN ▶ TAKASHI OBARA ▶ RENE PEINTHOR ▶ ROAN HORNING ▶ BEN KEROACK ▶ SEAN MORRISEY ▶ SHAY GREEN ▶ NICK VANDERWEIT ▶ SIMON MENZEL ▶ TIMO HORSTSCHÄFER ▶ JACCO KONING ▶ CHRIS HAM ▶ JOSE RAMON GARCIA ▶ SIMON DESCARPENTRIES ▶ DOUGLAS VALENTINE ▶ JACOB GARDNER ▶ PASCAL BRIEHL ▶ DENIS STANISHEVSKIY ▶ EDDY COMAN ▶ LUKE BLANEY ▶ MARK REICHE ▶ MICHAL JEVJAK ▶ PHILIPPE LATULIPPE ▶ MAURICIO PECCORINI ▶ NATHAN HEP-
TING ▶ AKIO IDEHARA ▶ DAGNI MCPHEE ▶ ALEX GERCHANOVSKY ▶ GERHARD DIRSCHL ▶ IVAN ZUPAN ▶ ALEXANDER PAPST ▶ CHRISTOPH REITER ▶ RHINO BANGA ▶ PAUL JONES ▶ MICHAEL GIACOMELLI ▶ ALEX WENGER ▶ ANDREE BUSCHMANN ▶ JOHNATHON MIHALOP ▶ RENE ALKIVI ▶ TOBIAS SCHLADT ▶ JOHN ZHOU ▶ CHARLES VOELGER ▶ GERRITT GONZALES ▶ DIETER PELLKOEFER ▶ EVGENIY KACHALIN ▶ LENNY KOEPEL ▶ HARRY TU ▶ THE LIBMAD TEAM ▶ THE WAVPACK TEAM ▶ THE FFMPEG TEAM ▶ THE OGG Vorbis TEAM ▶ THE LIBA52 TEAM ▶ THE SPEEX TEAM ▶ THE LIBFAAD TEAM ▶ THE DOOM TEAM ▶ THE GNUCHESSTeam ▶ THE GNUBOY TEAM ▶ THE PACMAN INSTRUCTIONAL EMULATOR TEAM ▶ THE SPECTEMU TEAM ▶ THE LIBMPEG2 TEAM ▶ THE GAME_MUSIC_EMU TEAM ▶ THE OPENSPC DSP EMULATOR TEAM ▶ THE ALAC DECODER TEAM ▶ THE UCL TEAM ▶ THE IPOD LINUX TEAM ▶ THE VISION-8 EMULATOR TEAM

G Licenses

G.1 GNU Free Documentation License

Version 1.2, November 2002
Copyright ©2000,2001,2002 Free Software Foundation, Inc.

51 Franklin St, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The purpose of this License is to make a manual, textbook, or other functional and useful document “free” in the sense of freedom: to assure everyone the effective freedom to copy and redistribute it, with or without modifying it, either commercially or non-commercially. Secondly, this License preserves for the author and publisher a way to get credit for their work, while not being considered responsible for modifications made by others.

This License is a kind of “copyleft”, which means that derivative works of the document must themselves be free in the same sense. It complements the GNU General Public License, which is a copyleft license designed for free software.

We have designed this License in order to use it for manuals for free software, because free software needs free documentation: a free program should come with manuals providing the same freedoms that the software does. But this License is not limited to software manuals; it can be used for any textual work, regardless of subject matter or whether it is published as a printed book. We recommend this License principally for works whose purpose is instruction or reference.

1. APPLICABILITY AND DEFINITIONS

This License applies to any manual or other work, in any medium, that contains a notice placed by the copyright holder saying it can be distributed under the terms of this License. Such a notice grants a world-wide, royalty-free license, unlimited in duration, to use that work under the conditions stated herein. The “**Document**”, below, refers to any such manual or work. Any member of the public is a licensee, and is addressed as “**you**”. You accept the license if you copy, modify or distribute the work in a way requiring permission under copyright law.

A **"Modified Version"** of the Document means any work containing the Document or a portion of it, either copied verbatim, or with modifications and/or translated into another language.

A **"Secondary Section"** is a named appendix or a front-matter section of the Document that deals exclusively with the relationship of the publishers or authors of the Document to the Document's overall subject (or to related matters) and contains nothing that could fall directly within that overall subject. (Thus, if the Document is in part a textbook of mathematics, a Secondary Section may not explain any mathematics.) The relationship could be a matter of historical connection with the subject or with related matters, or of legal, commercial, philosophical, ethical or political position regarding them.

The **"Invariant Sections"** are certain Secondary Sections whose titles are designated, as being those of Invariant Sections, in the notice that says that the Document is released under this License. If a section does not fit the above definition of Secondary then it is not allowed to be designated as Invariant. The Document may contain zero Invariant Sections. If the Document does not identify any Invariant Sections then there are none.

The **"Cover Texts"** are certain short passages of text that are listed, as Front-Cover Texts or Back-Cover Texts, in the notice that says that the Document is released under this License. A Front-Cover Text may be at most 5 words, and a Back-Cover Text may be at most 25 words.

A **"Transparent"** copy of the Document means a machine-readable copy, represented in a format whose specification is available to the general public, that is suitable for revising the document straightforwardly with generic text editors or (for images composed of pixels) generic paint programs or (for drawings) some widely available drawing editor, and that is suitable for input to text formatters or for automatic translation to a variety of formats suitable for input to text formatters. A copy made in an otherwise Transparent file format whose markup, or absence of markup, has been arranged to thwart or discourage subsequent modification by readers is not Transparent. An image format is not Transparent if used for any substantial amount of text. A copy that is not "Transparent" is called **"Opaque"**.

Examples of suitable formats for Transparent copies include plain ASCII without markup, Texinfo input format, LaTeX input format, SGML or XML using a publicly available DTD, and standard-conforming simple HTML, PostScript or PDF designed for human modification. Examples of transparent image formats include PNG, XCF and JPG. Opaque formats include proprietary formats that can be read and edited only by proprietary word processors, SGML or XML for which the DTD and/or processing tools are not generally available, and the machine-generated HTML, PostScript or PDF produced by some word processors for output purposes only.

The **"Title Page"** means, for a printed book, the title page itself, plus such following pages as are needed to hold, legibly, the material this License requires to appear in the title page. For works in formats which do not have any title page as such, "Title Page" means the text near the most prominent appearance of the work's title, preceding the beginning of the body of the text.

A section **"Entitled XYZ"** means a named subunit of the Document whose title either

is precisely XYZ or contains XYZ in parentheses following text that translates XYZ in another language. (Here XYZ stands for a specific section name mentioned below, such as **"Acknowledgements"**, **"Dedications"**, **"Endorsements"**, or **"History"**.) To **"Preserve the Title"** of such a section when you modify the Document means that it remains a section "Entitled XYZ" according to this definition.

The Document may include Warranty Disclaimers next to the notice which states that this License applies to the Document. These Warranty Disclaimers are considered to be included by reference in this License, but only as regards disclaiming warranties: any other implication that these Warranty Disclaimers may have is void and has no effect on the meaning of this License.

2. VERBATIM COPYING

You may copy and distribute the Document in any medium, either commercially or noncommercially, provided that this License, the copyright notices, and the license notice saying this License applies to the Document are reproduced in all copies, and that you add no other conditions whatsoever to those of this License. You may not use technical measures to obstruct or control the reading or further copying of the copies you make or distribute. However, you may accept compensation in exchange for copies. If you distribute a large enough number of copies you must also follow the conditions in section 3.

You may also lend copies, under the same conditions stated above, and you may publicly display copies.

3. COPYING IN QUANTITY

If you publish printed copies (or copies in media that commonly have printed covers) of the Document, numbering more than 100, and the Document's license notice requires Cover Texts, you must enclose the copies in covers that carry, clearly and legibly, all these Cover Texts: Front-Cover Texts on the front cover, and Back-Cover Texts on the back cover. Both covers must also clearly and legibly identify you as the publisher of these copies. The front cover must present the full title with all words of the title equally prominent and visible. You may add other material on the covers in addition. Copying with changes limited to the covers, as long as they preserve the title of the Document and satisfy these conditions, can be treated as verbatim copying in other respects.

If the required texts for either cover are too voluminous to fit legibly, you should put the first ones listed (as many as fit reasonably) on the actual cover, and continue the rest onto adjacent pages.

If you publish or distribute Opaque copies of the Document numbering more than 100, you must either include a machine-readable Transparent copy along with each Opaque copy, or state in or with each Opaque copy a computer-network location from which the general network-using public has access to download using public-standard network protocols a complete Transparent copy of the Document, free of added material. If you use the latter option, you must take reasonably prudent steps, when you

begin distribution of Opaque copies in quantity, to ensure that this Transparent copy will remain thus accessible at the stated location until at least one year after the last time you distribute an Opaque copy (directly or through your agents or retailers) of that edition to the public.

It is requested, but not required, that you contact the authors of the Document well before redistributing any large number of copies, to give them a chance to provide you with an updated version of the Document.

4. MODIFICATIONS

You may copy and distribute a Modified Version of the Document under the conditions of sections 2 and 3 above, provided that you release the Modified Version under precisely this License, with the Modified Version filling the role of the Document, thus licensing distribution and modification of the Modified Version to whoever possesses a copy of it. In addition, you must do these things in the Modified Version:

- A. Use in the Title Page (and on the covers, if any) a title distinct from that of the Document, and from those of previous versions (which should, if there were any, be listed in the History section of the Document). You may use the same title as a previous version if the original publisher of that version gives permission.
- B. List on the Title Page, as authors, one or more persons or entities responsible for authorship of the modifications in the Modified Version, together with at least five of the principal authors of the Document (all of its principal authors, if it has fewer than five), unless they release you from this requirement.
- C. State on the Title page the name of the publisher of the Modified Version, as the publisher.
- D. Preserve all the copyright notices of the Document.
- E. Add an appropriate copyright notice for your modifications adjacent to the other copyright notices.
- F. Include, immediately after the copyright notices, a license notice giving the public permission to use the Modified Version under the terms of this License, in the form shown in the Addendum below.
- G. Preserve in that license notice the full lists of Invariant Sections and required Cover Texts given in the Document's license notice.
- H. Include an unaltered copy of this License.
- I. Preserve the section Entitled "History", Preserve its Title, and add to it an item stating at least the title, year, new authors, and publisher of the Modified Version as given on the Title Page. If there is no section Entitled "History" in the Document, create one stating the title, year, authors, and publisher of the Document

as given on its Title Page, then add an item describing the Modified Version as stated in the previous sentence.

- J. Preserve the network location, if any, given in the Document for public access to a Transparent copy of the Document, and likewise the network locations given in the Document for previous versions it was based on. These may be placed in the "History" section. You may omit a network location for a work that was published at least four years before the Document itself, or if the original publisher of the version it refers to gives permission.
- K. For any section Entitled "Acknowledgements" or "Dedications", Preserve the Title of the section, and preserve in the section all the substance and tone of each of the contributor acknowledgements and/or dedications given therein.
- L. Preserve all the Invariant Sections of the Document, unaltered in their text and in their titles. Section numbers or the equivalent are not considered part of the section titles.
- M. Delete any section Entitled "Endorsements". Such a section may not be included in the Modified Version.
- N. Do not retitle any existing section to be Entitled "Endorsements" or to conflict in title with any Invariant Section.
- O. Preserve any Warranty Disclaimers.

If the Modified Version includes new front-matter sections or appendices that qualify as Secondary Sections and contain no material copied from the Document, you may at your option designate some or all of these sections as invariant. To do this, add their titles to the list of Invariant Sections in the Modified Version's license notice. These titles must be distinct from any other section titles.

You may add a section Entitled "Endorsements", provided it contains nothing but endorsements of your Modified Version by various parties—for example, statements of peer review or that the text has been approved by an organization as the authoritative definition of a standard.

You may add a passage of up to five words as a Front-Cover Text, and a passage of up to 25 words as a Back-Cover Text, to the end of the list of Cover Texts in the Modified Version. Only one passage of Front-Cover Text and one of Back-Cover Text may be added by (or through arrangements made by) any one entity. If the Document already includes a cover text for the same cover, previously added by you or by arrangement made by the same entity you are acting on behalf of, you may not add another; but you may replace the old one, on explicit permission from the previous publisher that added the old one.

The author(s) and publisher(s) of the Document do not by this License give permission to use their names for publicity for or to assert or imply endorsement of any Modified Version.

5. COMBINING DOCUMENTS

You may combine the Document with other documents released under this License, under the terms defined in section 4 above for modified versions, provided that you include in the combination all of the Invariant Sections of all of the original documents, unmodified, and list them all as Invariant Sections of your combined work in its license notice, and that you preserve all their Warranty Disclaimers.

The combined work need only contain one copy of this License, and multiple identical Invariant Sections may be replaced with a single copy. If there are multiple Invariant Sections with the same name but different contents, make the title of each such section unique by adding at the end of it, in parentheses, the name of the original author or publisher of that section if known, or else a unique number. Make the same adjustment to the section titles in the list of Invariant Sections in the license notice of the combined work.

In the combination, you must combine any sections Entitled "History" in the various original documents, forming one section Entitled "History"; likewise combine any sections Entitled "Acknowledgements", and any sections Entitled "Dedications". You must delete all sections Entitled "Endorsements".

6. COLLECTIONS OF DOCUMENTS

You may make a collection consisting of the Document and other documents released under this License, and replace the individual copies of this License in the various documents with a single copy that is included in the collection, provided that you follow the rules of this License for verbatim copying of each of the documents in all other respects.

You may extract a single document from such a collection, and distribute it individually under this License, provided you insert a copy of this License into the extracted document, and follow this License in all other respects regarding verbatim copying of that document.

7. AGGREGATION WITH INDEPENDENT WORKS

A compilation of the Document or its derivatives with other separate and independent documents or works, in or on a volume of a storage or distribution medium, is called an "aggregate" if the copyright resulting from the compilation is not used to limit the legal rights of the compilation's users beyond what the individual works permit. When the Document is included in an aggregate, this License does not apply to the other works in the aggregate which are not themselves derivative works of the Document.

If the Cover Text requirement of section 3 is applicable to these copies of the Document, then if the Document is less than one half of the entire aggregate, the Document's Cover Texts may be placed on covers that bracket the Document within the aggregate, or the electronic equivalent of covers if the Document is in electronic form. Otherwise they must appear on printed covers that bracket the whole aggregate.

8. TRANSLATION

Translation is considered a kind of modification, so you may distribute translations of the Document under the terms of section 4. Replacing Invariant Sections with translations requires special permission from their copyright holders, but you may include translations of some or all Invariant Sections in addition to the original versions of these Invariant Sections. You may include a translation of this License, and all the license notices in the Document, and any Warranty Disclaimers, provided that you also include the original English version of this License and the original versions of those notices and disclaimers. In case of a disagreement between the translation and the original version of this License or a notice or disclaimer, the original version will prevail.

If a section in the Document is Entitled "Acknowledgements", "Dedications", or "History", the requirement (section 4) to Preserve its Title (section 1) will typically require changing the actual title.

9. TERMINATION

You may not copy, modify, sublicense, or distribute the Document except as expressly provided for under this License. Any other attempt to copy, modify, sublicense or distribute the Document is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

10. FUTURE REVISIONS OF THIS LICENSE

The Free Software Foundation may publish new, revised versions of the GNU Free Documentation License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. See <http://www.gnu.org/copyleft/>.

Each version of the License is given a distinguishing version number. If the Document specifies that a particular numbered version of this License "or any later version" applies to it, you have the option of following the terms and conditions either of that specified version or of any later version that has been published (not as a draft) by the Free Software Foundation. If the Document does not specify a version number of this License, you may choose any version ever published (not as a draft) by the Free Software Foundation.

ADDENDUM: How to use this License for your documents

To use this License in a document you have written, include a copy of the License in the document and put the following copyright and license notices just after the title page:

Copyright ©YEAR YOUR NAME. Permission is granted to copy, distribute and/or modify this document under the terms of the GNU Free Documentation License, Version 1.2 or any later version published by the Free Software Foundation; with no Invariant Sections, no Front-Cover Texts, and no Back-Cover Texts. A copy of the license is included in the section entitled "GNU Free Documentation License".

If you have Invariant Sections, Front-Cover Texts and Back-Cover Texts, replace the "with...Texts." line with this:

with the Invariant Sections being LIST THEIR TITLES, with the Front-Cover Texts being LIST, and with the Back-Cover Texts being LIST.

If you have Invariant Sections without Cover Texts, or some other combination of the three, merge those two alternatives to suit the situation.

If your document contains nontrivial examples of program code, we recommend releasing these examples in parallel under your choice of free software license, such as the GNU General Public License, to permit their use in free software.

G.2 The GNU General Public License

Version 2, June 1991

Copyright © 1989, 1991 Free Software Foundation, Inc.

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The “Program”, below, refers to any such program or work, and a “work based on the Program” means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term “modification”.) Each licensee is addressed as “you”.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program’s source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
 - b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
 - c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License.

(Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
 - a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
 - b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
 - c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating sys-

tem on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the

sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and “any later version”, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

Appendix: How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the “copyright” line and a pointer to where the full notice is found.

<one line to give the program’s name and a brief idea of what it does.>
Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) <year> <name of author>
Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type
'show w'.
This is free software, and you are welcome to redistribute it under certain
conditions; type 'show c' for details.

The hypothetical commands `show w` and `show c` should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w` and `show c`; they could even be mouse-clicks or menu items—whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a “copyright disclaimer” for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program
'Gnomovision' (which makes passes at compilers) written by James Hacker.

<signature of Ty Coon>, 1 April 1989
Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Library General Public License instead of this License.